


X62-中性说明书-20241129

A6(105*148 MM) 折页 封面彩色 内页单色

X62

无线扬声器说明

便携式无线音箱 Ver 2.0



蓝牙使用说明

为了正确操作, 请在使用前仔细阅读本手册。本手册的任何内容修改都不会再次声明我们对本手册的错误或疏忽造成的后果概不负责。

特点:

- 1.IPX6便携式立体声扬声器;
- 2.无线 5.0版,带TWS功能,同时连接两个相同的扬声器,享受立体声效果;
- 3.U盘、TF卡、AUX、直播等多种工作模式;
- 4.卡拉OK无处不在;
- 5.带RGB彩灯;
- 6.带C型充电口;
- 7.内置 7.4V 4000mah 锂电池;
- 8.稳定且便于携带的背带。

附件:充电电缆,用户手册。

规格:

- 1.无线版本: BP1048B2 5.0
- 2.输出功率: 80W
- 3.无线范围: ≥10米(无障碍)
- 4.喇叭尺寸: 106mm*2
- 5.电池规格: 7.4V 4000mah
- 6.输入/输出: DC 5V 2A(TYPE-C充电线)
- 7.产品尺寸: 长/宽/高 346*118*209mm

功能说明:


无线功能:

- 1.长按“电源按钮”开机,RGB灯亮并声音提示;
- 2.激活手机无线,搜索设备名“X62”然后连接,配对成功后有提示音;
- 3.长按设备上的“+”或“-”按选择歌曲;
- 4.短按“+”或“-”按钮可调高或调低音量,或用手机调节音量;
- 5.短按设备或手机上的“播放/暂停”按钮即可播放/停止音乐;

备注:在无线播放模式下,插入USB/TF卡将断开;

无线和切换播放从USB/TF卡。您可以按“M”按钮再次切换到无线模式。

按键说明:

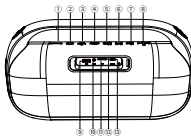

- 1.短按:音量减;长按:上一曲
- 2.长按3S:开/关机
- 3.短按:灯光切换
- 4.短按:连接/断开TWS串联
- 5.短按:切换音效(室内·室外·重低音)
- 6.短按:模式切换;
- 7.短按:暂停/播放;长按:3S断开蓝牙
- 8.短按:音量加;长按:下一曲
- 9.USB端口
- 10.AUX接口
- 11.TF卡
- 12.充电指示灯
- 13.TYPE-C充电口

备注:同时按下②和⑥设备将强制关机

TWS串联:

- 1.将两台音箱开机(音箱处于播放状态和蓝牙配对状态均可启动)单击其中一台音箱的TWS键进入TWS配对模式并有提示音(被按TWS键的机器为主机),配对成功以后有提示音。
- 2.TWS连接状态下短按TWS键解除TWS连接并有提示音恢复正常状态。正常开机,TWS可以回连。手动断开TWS后,正常开机TWS不可以回连。
- 3.BT、U盘、TF卡、AUX模式都需要有TWS功能且能回连。
- 4.TWS连成功的机器,以后每次开机即可自动进入TWS互联(非主动断开TWS的状态下)

USB/TF卡功能:

- 1.将USB闪存盘/TF卡插入插槽,存储的音乐将自动播放;
- 2.长按“+”或“-”按钮选择喜欢的歌曲,短按“+”或“-”按钮调高和调低音量;
- 3.短按“播放/暂停”按钮播放或暂停;
- 4.不使用时,长按“电源按钮”关闭电源。

AUX输入功能:

- 1.对于其他兼容的音乐设备或您的MP3/MPA播放器,请使用随附的AUX电缆从设备的“线路输出”连接到该设备的“辅助输入”然后按“M按钮”切换到辅助输入状态;
- 2.短按键调高调低音量或调节手机手机音量;
- 3.短按设备或手机上的“播放/暂停”按钮即可播放/停止音乐。

RGB灯光功能:

短按 RGB 灯光按钮切换不同颜色的灯光模式。

备注:

- 1.短按“M”按钮切换不同模式,顺序为 U 盘、TF 卡、AUX 音频和无线模式。
- 2.低电报警功能: 20% 电量时低电报警降功率,10% 以下音箱启动关机程序关机。
- 3.如插有 U 盘、TF 卡、音频输入音箱开机记忆进入上一次工作模式。不插默认无线模式。
- 4.无线输入: 开机后先回连上次配对过的设备,回连失败后自动进入配对状态。在无线模式下: 未连接蓝牙时,超过 15 分钟实行自动关机;(连接蓝牙时不会自动关机)
- 5.充电: 充电灯常亮,充满后灭灯。
- 6.音效切换: 短按切换 EQ 效果有室内和户外 / 重低音三种音效,开机默认户外音效。
- 7.无线搜索状态: 蓝灯常亮,无线配对状态: 彩灯变化。

如何使用:

- 1.充电器不包含在附件中。请使用通用5V/2充电器为本设备充电,使用其他充电器造成的任何损坏我们概不负责。
- 2.关闭设备电源,将提供的充电线插入设备的充电槽,另一端连接PC机或其他直流电5V输出的充电器。(充电时播放音乐时,请将音量调到中,因为对于一些重低音音乐,充电器可能无法承受在最大音量下暂时的高电压)
- 3.充电时间应在6小时左右。(充满后,指示灯熄灭)
- 4.为延长电池寿命,请不要充电超过10小时。
- 5.在音乐播放报警低电模式下,音量会根据电池输出减小,如您再次加大声音时可能会自动关机,此时要插充电线激活。


故障排除:

- 1.自动关机:电池电量不足时会自动开启电池保护,请充电1小时后使用。
- 2.无法播放音乐:音乐文件存储路径不能被播放器识别,音乐文件请储存在可以移动设备根目录下。
- 3.连接电脑无声:电脑界面连接错误,请选择正确的音频输出端口和尝试切换M的其它模式。
- 4.按键无反应或功能错乱: 关机后重试。

X62

Wireless Speaker Instructions

Portable Wireless Speaker Ver 2.0



For correctly operatin , please read this manual carefully before using. Anycontent revise of the manual won't declare again, and we are no responsible forconsequence caused by fault or oversight of this manual.

FEATURES:

- 1.IPX6 Portable Speaker with Stereo Sound;
- 2.Wireless version 5.0,with TWS function,connection to 2 same speakers at the same time, enjoy the stereo effect;
- 3.USB-disk,TF card,AUX,live broadcast working modes;
- 4.karaoke anywhere;
- 5.With RGB coloured lights;
- 6.With Type-C charging port;
- 7.Built-in lithium rechargeable batery 7.4V 4000mAh;
- 8.Stable and easy to carry straps.

Accessories:Charge cable,User manual.

SPECIFICATION:

- 1.Wireless version: BP1048B2 5.0
- 2.Output power: 80W
- 3.Wireless range: ≥10 metres (no barriers)
- 4.Speaker size: 106mm*2
- 5.Battery specification: 7.4V 4000mah
- 6.input/Output: DC 5V 2A (TYPE-C charging cable)
- 7.Product Size: L/W/H 346*118*209mm


FEATURE DESCRIPTION:

Wireless Features:

- 1. Press and hold the "power button" to turn on the device, and the RGB lights will turn on with a sound prompt;
- 2. Activate mobile wireless, search for device name "X62" and connect. After succesful pairing, there will be a prompt sound;
- 3.Long press "+"or "-"-buton on the devices or on Mobile phones to select songs you like.
- 4.Short press "+" or "-" buton to adjust volume up and down. Or adjust the mobile phones volume.
- 5.Short press "play/Pause" buton on the devices or on Mobile phones to play/stop the music.

Remark: Under Wireless playing mode, insert USB/TF Card will disconnect the Wireless and switch the playing from USB/TF Card. You can press the "M" button to switch to Wireless mode again.

Button Description:

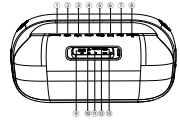

- 1.Short press: Volume down; Long press: Previous track
- 2.Long press for 3 seconds: Power on/off
- 3.Short press: switch light mode
- 4.Short press: Connect/Disconnect TWS pairing
- 5.Short press: Switch audio effects (Indoor-Outdoor-Bass Boost)
- 6.Short press: Mode switching;
- 7.Short press: Pause/Play; Long press for 3 seconds: Disconnect Bluetooth
- 8.Short press: Volume up; Long press: Next track
- 9.USB port
- 10.AUX interface
- 11.TF card
- 12.Charging indicator light
- 13.TYPE-C charging port

Note: Simultaneously press ② and ⑥ to force shutdown

TWS Function:

- 1.Turn on two speakers (both in playback and Bluetooth pairing mode) and click the TWS button on one speaker to enter TWS pairing mode with a prompt sound (the machine that has pressed the TWS button is the host). After successful pairing, there will be a prompt sound.
- 2.When TWS is connected, click the TWS button to disconnect and there will be a prompt sound to restore normal operation. Normal power on/off, TWS can be reconnected. After manually disconnecting the TWS, the TWS cannot be reconnected when it is turned on or off normally.
- 3.BT, USB flash drive, TF card, AUX mode all need to have TWS function and be able to reconnect.
- 4.Machines that have successfully connected to TWS will automatically enter TWS interconnection every time they are turned on (Not actively disconnecting TWS)

USB/TF card Function:

- 1. Insert the USB flash drive/TF card into the slot, the stored music will be played automatically.
- 2. Long press "+" or "-" button to select your favourite song, short press "+" or "-" button to adjust the volume up and down.
- 3. Short press the "Play/Pause" button to play or pause.
- 4. When not in use, Long press the "Power Button" to switch off the power.

AUX-IN Function:

- 1.For other compatible music devices or your MP3/MP4 players, use the supplied Audio Cable to connect from the device's "Line Out" to the "Aux In" of thisdevices. Then press the "M" buton to switch to AUX-IN state.
- 2.Short press "+"or "-" button to adjust volume up and down. Or adjust the mobile phones' volume.
- 3.Short press "Play/Pause" buton on the devices or on Mobile phones to play/stopthe music.

RGB Lighting Function:

Short press the RGB light button to switch between different color light modes.

REMARKS:

- 1. Short press the "M" button to switch between different modes, in the order of USB flash drive, TF card, AUX audio, and wireless mode.
- 2. Power off the unit, put the provided charge cable into the charge slot of unit,connect the other end to PC or other charger with DC 5V output (Notinduced!)(When playing music during charging, please put the volume tomidle, because for some music with heavy bass, the charger may not beable to afford the high current temporarily under the maximum volume)
- 3.Charge time should be about 6 hours. (When charging full, the indicator lightwill switch OFF)
- 4. In order to prolong the life of batery, please do not charge more than 10 hours.
- 5. In the music play alarm low power mode, the volume will be reduced according tothe output, if you increase the sound again may automatically shut down, at thistime to plug the charging cable activation.

How to use:

- 1.The charger is not included in the accessories. Please use the Universal 5V/2 charger to charge this device, and we are no responsible for any damage causedby using other charger.
- 2.Power off the unit, put the provided charge cable into the charge slot of unit,connect the other end to PC or other charger with DC 5V output (Notinduced!)(When playing music during charging, please put the volume tomidle, because for some music with heavy bass, the charger may not beable to afford the high current temporarily under the maximum volume)
- 3.Charge time should be about 6 hours. (When charging full, the indicator lightwill switch OFF)
- 4. In order to prolong the life of batery, please do not charge more than 10 hours.
- 5. In the music play alarm low power mode, the volume will be reduced according tothe output, if you increase the sound again may automatically shut down, at thistime to plug the charging cable activation.

Troubleshooting:


- 1. Auto shutdown: the battery will automatically turn on the battery protection when the battery is low, please charge it for 1 hour and use it.
- 2. Unable to play music: The storage path of the music file cannot be recognized by the player. Please store the music file in a removable device and directory.
- 3. No sound when connecting to computer: The computer interface is connected incorrectly, please select the correct audio output port and try to switch to other modes of M.
- 4. Button unresponsive or wrong function: Switch off the computer and try again.

A6(105*148 MM) 折页 封面彩色 内页单色

X62

Wireless Speaker Instructions

Portable Wireless Speaker Ver 2.0



For correctly operatin , please read this manual carefully before using. Anycontent revise of the manual won't declare again, and we are no responsible forconsequence caused by fault or oversight of this manual.

FEATURES:

- 1.IPX6 Portable Speaker with Stereo Sound;
- 2.Wireless version 5.0,with TWS function,connection to 2 same speakers at the same time, enjoy the stereo effect;
- 3.USB-disk,TF card,AUX,live broadcast working modes;
- 4.karaoke anywhere;
- 5.With RGB coloured lights;
- 6.With Type-C charging port;
- 7.Built-in lithium rechargeable batery 7.4V 4000mAh;
- 8.Stable and easy to carry straps.

Accessories:Charge cable,User manual.

SPECIFICATION:

- 1.Wireless version: BP1048B2 5.0
- 2.Output power: 80W
- 3.Wireless range: ≥10 metres (no barriers)
- 4.Speaker size: 106mm*2
- 5.Battery specification: 7.4V 4000mah
- 6.input/Output: DC 5V 2A (TYPE-C charging cable)
- 7.Product Size: L/W/H 346*118*209mm


FEATURE DESCRIPTION:

Wireless Features:

- 1. Press and hold the "power button" to turn on the device, and the RGB lights will turn on with a sound prompt;
- 2. Activate mobile wireless, search for device name "X62" and connect. After succesful pairing, there will be a prompt sound;
- 3.Long press "+"or "-"-buton on the devices or on Mobile phones to select songs you like.
- 4.Short press "+" or "-" buton to adjust volume up and down. Or adjust the mobile phones volume.
- 5.Short press "play/Pause" buton on the devices or on Mobile phones to play/stop the music.

Remark: Under Wireless playing mode, insert USB/TF Card will disconnect the Wireless and switch the playing from USB/TF Card. You can press the "M" button to switch to Wireless mode again.

Button Description:

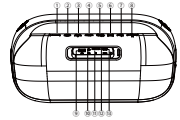

- 1.Short press: Volume down; Long press: Previous track
- 2.Long press for 3 seconds: Power on/off
- 3.Short press: switch light mode
- 4.Short press: Connect/Disconnect TWS pairing
- 5.Short press: Switch audio effects (Indoor-Outdoor-Bass Boost)
- 6.Short press: Mode switching;
- 7.Short press: Pause/Play; Long press for 3 seconds: Disconnect Bluetooth
- 8.Short press: Volume up; Long press: Next track
- 9.USB port
- 10.AUX interface
- 11.TF card
- 12.Charging indicator light
- 13.TYPE-C charging port

Note: Simultaneously press ② and ⑥ to force shutdown

TWS Function:

- 1.Turn on two speakers (both in playback and Bluetooth pairing mode) and click the TWS button on one speaker to enter TWS pairing mode with a prompt sound (the machine that has pressed the TWS button is the host). After successful pairing, there will be a prompt sound.
- 2.When TWS is connected, click the TWS button to disconnect and there will be a prompt sound to restore normal operation. Normal power on/off, TWS can be reconnected. After manually disconnecting the TWS, the TWS cannot be reconnected when it is turned on or off normally.
- 3.BT, USB flash drive, TF card, AUX mode all need to have TWS function and be able to reconnect.
- 4.Machines that have successfully connected to TWS will automatically enter TWS interconnection every time they are turned on (Not actively disconnecting TWS)

USB/TF card Function:

- 1. Insert the USB flash drive/TF card into the slot, the stored music will be played automatically.
- 2. Long press "+" or "-" button to select your favourite song, short press "+" or "-" button to adjust the volume up and down.
- 3. Short press the "Play/Pause" button to play or pause.
- 4. When not in use, Long press the "Power Button" to switch off the power.

AUX-IN Function:

- 1.For other compatible music devices or your MP3/MP4 players, use the supplied Audio Cable to connect from the device's "Line Out" to the "Aux In" of thisdevices. Then press the "M" buton to switch to AUX-IN state.
- 2.Short press "+"or "-" button to adjust volume up and down. Or adjust the mobile phones' volume.
- 3.Short press "Play/Pause" buton on the devices or on Mobile phones to play/stopthe music.

RGB Lighting Function:

Short press the RGB light button to switch between different color light modes.

REMARKS:

- 1. Short press the "M" button to switch between different modes, in the order of USB flash drive, TF card, AUX audio, and wireless mode.
- 2. Power off the unit, put the provided charge cable into the charge slot of unit,connect the other end to PC or other charger with DC 5V output (Notinduced!)(When playing music during charging, please put the volume tomidle, because for some music with heavy bass, the charger may not beable to afford the high current temporarily under the maximum volume)
- 3.Charge time should be about 6 hours. (When charging full, the indicator lightwill switch OFF)
- 4. In order to prolong the life of batery, please do not charge more than 10 hours.
- 5. In the music play alarm low power mode, the volume will be reduced according tothe output, if you increase the sound again may automatically shut down, at thistime to plug the charging cable activation.

How to use:

- 1.The charger is not included in the accessories. Please use the Universal 5V/2 charger to charge this device, and we are no responsible for any damage causedby using other charger.
- 2.Power off the unit, put the provided charge cable into the charge slot of unit,connect the other end to PC or other charger with DC 5V output (Notinduced!)(When playing music during charging, please put the volume tomidle, because for some music with heavy bass, the charger may not beable to afford the high current temporarily under the maximum volume)
- 3.Charge time should be about 6 hours. (When charging full, the indicator lightwill switch OFF)
- 4. In order to prolong the life of batery, please do not charge more than 10 hours.
- 5. In the music play alarm low power mode, the volume will be reduced according tothe output, if you increase the sound again may automatically shut down, at thistime to plug the charging cable activation.

Troubleshooting:

- 1. Auto shutdown: the battery will automatically turn on the battery protection when the battery is low, please charge it for 1 hour and use it.
- 2. Unable to play music: The storage path of the music file cannot be recognized by the player. Please store the music file in a removable device and directory.
- 3. No sound when connecting to computer: The computer interface is connected incorrectly, please select the correct audio output port and try to switch to other modes of M.
- 4. Button unresponsive or wrong function: Switch off the computer and try again.

PDF
Adobe

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.