
## 80\*100mm

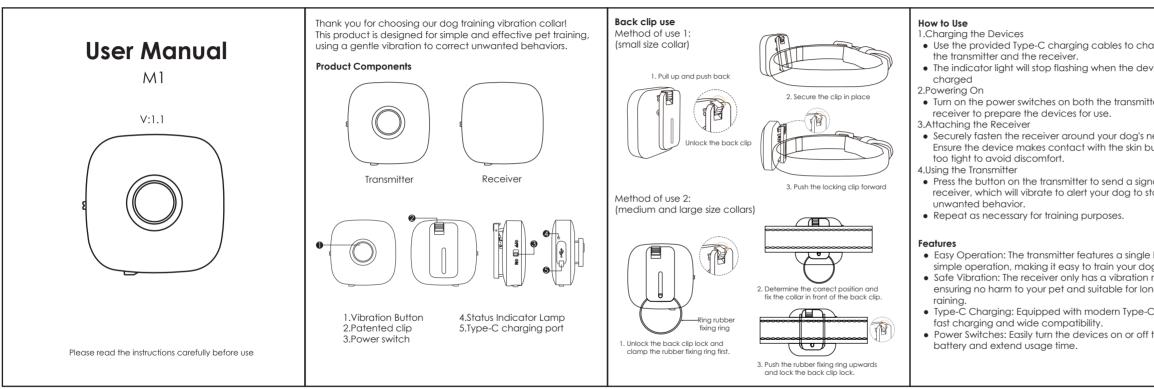

<ul> <li>Important Notes</li> <li>1.Do not use the device while charging to ensure safety.</li> <li>2.Avoid prolonged use of the vibration mode. Each training session should last around 10-15 minutes to prevent stress on your pet.</li> <li>3.This product is suitable for pets aged 6 months and older.</li> <li>4.If your pet shows signs of discomfort, stop using the device and consult a veterinarian.</li> <li>5.Regularly check both the transmitter and receiver to ensure proper functioning.</li> </ul>	FCC Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which
5.Regularly check both the transmitter and receiver to ensure	television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: •Reorient or relocate the receiving antenna.
<ul> <li>Charging Instructions</li> <li>The indicator light will flash while charging.</li> <li>When fully charged, the indicator light will stop flashing.</li> <li>It's recommended to disconnect the charger once the battery is fully charged to avoid overcharging.</li> </ul>	the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.
<ul> <li>Troubleshooting</li> <li>1.The receiver does not vibrate?</li> <li>Ensure both the transmitter and receiver are powered on, and check the battery levels.</li> <li>2.The vibration seems weak?</li> <li>The battery might be low; please recharge the device.</li> <li>3.The device won't charge?</li> </ul>	RF Exposure Information The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition, compliance with exposure requirements.
<ul> <li>Check the Type-C cable or try using a different charging port.</li> </ul>	CEFC ROHS 🖞 🖉 😘 made in china
	<ul> <li>1.Do not use the device while charging to ensure safety.</li> <li>2.Avoid prolonged use of the vibration mode. Each training session should last around 10-15 minutes to prevent stress on your pet.</li> <li>3.This product is suitable for pets aged 6 months and older.</li> <li>4.If your pet shows signs of discomfort, stop using the device and consult a veterinarian.</li> <li>5.Regularly check both the transmitter and receiver to ensure proper functioning.</li> <li>Charging Instructions <ul> <li>The indicator light will flash while charging.</li> <li>When fully charged, the indicator light will stop flashing.</li> <li>It's recommended to disconnect the charger once the battery is fully charged to avoid overcharging.</li> </ul> </li> <li>Troubleshooting <ul> <li>I.The receiver does not vibrate?</li> <li>Ensure both the transmitter and receiver are powered on, and check the battery levels.</li> <li>2.The vibration seems weak?</li> <li>The battery might be low; please recharge the device.</li> <li>3.The device won't charge?</li> </ul> </li> </ul>