

- For the best viewing effect, please use the projector in dark room. 1. Do not install this projector in the area which directly blown by the air conditioner, to prevent projector failed caused by water vapor condensation or excessive temperature.
- 2. Ensure that the environment is ventilated to prevent overheat caused by heats build-up.
- 3. Prevent foreign objects from falling into the machine. Never insert any metal objects into the machine. If foreign objects fall into the machine accidentally, please power off immediately and seek professional
- 4. Do not place any liquid on the machine to avoid leakage. 5. Avoid violent vibrations when transporting. Please protect the lens
- 6. Do not touch the vents when using the projector to avoid burns due to excessive temperature.
- 7. Do not look directly at the lens while the projector is running to
- 8. Please clean the filter regularly to prevent malfunction caused by

Notice 🖄
Do not open the case of projector to prevent electric

 
seek professional assistance for maintenance matters.

Warn 🖄 Do not touch! The inside of the projector contains uninsulated

Warn 🖄

Do not install the projector around flammable objects to prevent

Important Safety Notes



place it horizontally and leave a space of about 30cm between the projector and the wall.






Do not block the vents Do not install in dust or smoky places

		Product		X1 max
		Lumen		300 Ansi
		Native Resolution		1920x1080
		Video		Support 8K/4K Decoding
		Audio		Dual Stereo Speakers, Support Dolby
		System		Android 9.0 OS, OTA Upgrade Su
		CPU+GPU		Amlogic T972 + ARM Mali-G31 N
		DDR+Flash		2GB RAM+16GB ROM
		WiFi		Dual Band WiFi 2.4/5GHz
		BT		BT 5.0
		Interface	HD	HD IN*2
			USB	USB 2.0 Port*2
			Earphone	3.5mm Earphone
			AV	AV IN


Specifications

Rated Power Input AC 110-240V 50~60HZ Operating Temperature Storage Temperature -20 ~ 65°C 0 ~ 90% Non-condensing Operating Humidity

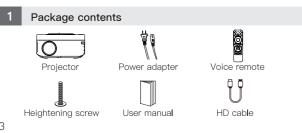

Projector Introduction

Power Jack -

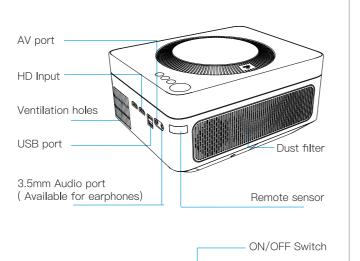

Paring method(Bluetooth mode connection) 1. Select [Settings] > [Bluetooth & Remotes] > [Add accessory]. 2. Press and hold the left & right direction buttons at the same time for 3-5 seconds until the red light flashes.

Select the Input Source

1. Press the Ubutton to turn on the unit.

to select the DVD mode.

projection picture.

3 DVD Playback

Bluetooth Remote

Vavigation Key •

Return • Home •—

VOL +/- •

Mute •

Voice Key •

Power ON/OFF • (b) Input Source

Setup • GETUP (1) Mouse

Fast Reverse Fast Forward

Pause/Play • Stop

Previous

 
Next

3. Select the name [Bluetooth remote] of the list to connect. 4. After pairing, you can now use the voice button to search

Projection Size/Distance Reference

The projection screen size (or size of images) is determined by the distance between the lens of the projector and the projection surface.

The projection image size is to up to 200"





Connect the included power adapter to DC socket

on the projector, and then to the wall outlet.

Power–On/Off Operation

1 Power connection

button on projector.

Power on/off by the Power on/off by


remote control.

Screen Adjustment

Adjust the size and position of the picture by adjusting the projection angle (height of the image), tilting the image left and right, adjusting the focus, zoom out/zoom in the image size, adjusting the keystone correction.


1 Adjust the height screw

 Raise the front of the projector. 2. Screw on the heightening screw to adjust the picture to the height you want.

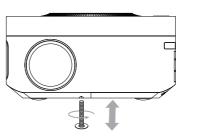

2 Adjust the focus(Sharpness adjustment)

After the machine is placed horizontally, turn the focusing ring up and down to make the picture clearer.

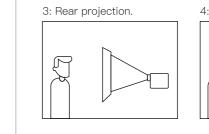

Screen Adjustment

 
3 Projection Methods Depending on the installation method, select the appropriate

 













4 Keystone Correction

Screen Adjustment

If the machine installed tilted, please set the keystone correction to adjust. If unable to get the satisfactory sharpness, move the machine slightly forward or backward.



Correct keystone manually. Default value is 0 (Vertical & Horizontal Correction).

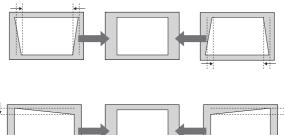


5 Eletronic Zoom

Screen Adjustment

No more space constraints, no need to change the projector distance, just move the projector to fit the screen size, you can customize your projection screen size from 35% to 100%.



Digital Zoom 100%--->35%.

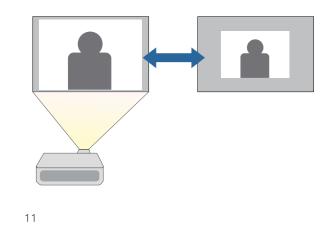

System Initial Setup

1 Language Select

1. Select [Setting], open [Device Preferences], click [Language], choose your preferred language.

2 Date & time

1. Select [Settings], open [Device Preferences], click [Date & time], then you can access to [Set time zone] and [Use 24-hourformat].

3 Network

1. Select [Settings], click [Network & Wi-Fi] to access to the Wi-Fi settings page.

2. Choose the Wi-Fi option and enter passwords to connect.

4 Bluetooth connection

1. Select [Apps], open [FOTA update], click [Check Version],

follow the on-screen instructions to upgrade the firmware

5 Bluetooth connection

System Initial Setup

A. Bluetooth Speaker Mode

You can use this device as a standalone Bluetooth speaker.

Open [Settings], select [Bluetooth speaker] to switch to Bluetooth speaker mode (or open the app named Bluetooth Speaker).

② Enable Bluetooth on your smartphone and select [ZH_

③ Play the music you want.

X1MAX] as the device to be added.

④ Press the [Back] button on the remote control to exit this

B. Projector Mode

You can connect Bluetooth headphones or a speaker to ZH_X1MAX while in projector mode.

1 Turn on your device's Bluetooth.

12 13

ry], turn on your device's Bluetooth and choose the name of your device to complete the Bluetooth connection.

System Initial Setup

Once connected to a wireless network, you can access online services, enjoy movies, music and pictures, and browse internet. Apart from the apps installed, you can also install any other apps either from the App Store or by a USB

Installed Apps, like Netflix, TikTok, YouTube, Chrome, Prime Video, WPS office, etc.

up reminding customer to update, please click "CANCEL",

do NOT update.(Installed Netflix is very stable, so updating is not recommended).

App Manager Press [Home] button select [Settings] >[Apps] > [See all apps] and press [Ok

Select an app and check the current version, open or force stop, check the storage used or clear data, or clear cache, or clear default, or uninstall it.

14 15

1 Connect to HDMI/AV Playback Devices

Select the Input Source

This device supports connections with various HDMI/AV playback devices such as streaming media player. TV stick. TV box, DVD player, set-top box(STB), game machine or other devices(HD cable provided).

1) Connect this device to an HDMI/AV playback device with an HDMI/AV cable.

 
② Press [Input Source] key or Select [SignalSource] to access the menu, then select the source channel you need.

Press [Menu] on the remote control, you can set parameters of the picture for Signal Source.

* It can be set to stay on the previous input source after you reboot this device.

2 Connect to USB Storage Device With this device, you can enjoy music, video, and picture, or install apps that are stored on a USB storage device.

② Select File Manager app and press [OK]. ③ Select a file, then press [OK].





Screen Mirroring

1 For iOS devices:

① Please ensure the iOS device and projector connected to the same Wi-Fi network.

2. Press the 3 Input Source button to enter and use buttons ② Select [Cast] on home page > open [iOS Cast].

 
Open the disc cover by lightly pressing the cover and insert a playable DVD or CD disc. Make sure the label side is facing up, and then close disc cover.

start automatically. 5. Press ▶ button to fast forward and rewind.

6. Press ▶ button to search next or previous file.

7. During playback, press the MI button to pause and press again to resume.

* Press the
Menu key to enter the setting and adjust the





③ Open the Screen Mirroring from the control center on iOS device.

4 Search for available devices > connect to [Bytefly-xxxxxx] to start mirroring screen. 4. The player will scan the disc, and then the playback will

① Select [Cast] on home page > open [Miracast].

Screen Mirroring

3 A scan for wireless display devices will start. Select your

Data for reference only

mirrored by the wireless display.

2 For Android devices:

① Select [Cast] on home page > open [Miracast].

② Open the Wireless Cast on Miracast-compatible device to search available devices, select [ZH_X1MAX] to connect. 3 Accept the connection invitation from the device. If the screen is synchronized, means screencast completed.


2 Press the Windows key and P key on your keyboard at the same time > [Project] > Select Connect to a wireless display.

⚠ If the Connect to a wireless display option is not listed, this means your device or video card does not support Miracast.

desired wireless display device named [ZH_X1MAX]. 4 Once connected, your Windows device should now be

Certain content may be unavailable to be casted due to copyright restrictions. In this case, you can stream those content via the same app installed in your projector.

Maintenance Suggestion

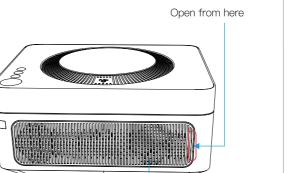

To make this projector work longer, we recommend you to follow the ideas.

- 1. Before cleaning the projector, turn off the projector, then turn off the main power and unplug it from the outlet. 2. Clean the filter regularly every month to prevent clogging.
- 3. Make sure to close the projector off once you finished using it. 4. Make sure not to use it continuously for more than 6 hours

Troubleshooting

1 Unable to boot up

2 Remote control is insensitive or unresponsive

projector still cannot boot up.

* Check if the power cord is connected properly, and if the

power light is on. Try to unplug and plug the power if the

- * Do not cover IR receiver. * In infrared mode, make sure remote points at IR receiver
- * The batteries are out of power or the battery is not installed

* There is an obstacle between the remote control and the

* Pair the Bluetooth remote control and make sure it is

working within 5 meters. 3 No network connection

working properly.

connection.

* WiFi is not connected properly, or the WiFi signal is poor. * Please connect hotspot of smart phone to verify if router is

4 Image or audio is unstable

* The connection cables are not securely connected to the projector or the signal source. * The Internet bandwidth is limited or over-occupied.

* The projector is out of effective range of Bluetooth

Warranty Card

1. This projector supports Three Guarantees Service Warranty for 1 year from the date of purchase (non-artificial damage). * The video source is not turned on or connected correctly. 2. Within warranty, we support warranty service for any failures

* The projector is not correctly connected to the input source caused by product technology. 3. The following situations are not covered by the warranty:

- --- Accessories except the projector.
- Damage caused by external force and other natural disasters. 4. When the product fails, please contact the dealer or supplier

* Cooling fan is not working properly. If abnormal, please return

8 Blurry display * The lens is not clean. * The projection lens is not correctly focused.

Troubleshooting

6 Computer can't display through HDMI cable

7 Black screen or abnormal picture after booting for a while

* Make sure the power plug is working and firmly fitted into the

*The vents are blocked(Cleaning every three months is

* HDMI cable not securely connected.

* Try to turn off HDMI 2.0.

* Reboot the projector.

5 No input source

* The projector and the screen are not aligned properly * The environment is too bright.

If you have any other problems or suggestions, please

9 Screen freeze

for repair.

* Please reboot the projector to test again. If the screen still freeze, please turn off for 10 minutes and turn on again.

contact our online services to help you immediately.

* The video or audio file format is not supported by the projector.

- -- Products that have been disassembled and repaired without
- in time to arrange for repair withi this warranty card. 5. This warranty liability is limited to product failure repairs

within the warranty period.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Caution: Changes or modifications not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, p ursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against h armful interference in a residential installation. This equipment generates uses and can radiate radio freq uency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a partic ular installation. If this equipment does cause harmful interference to radio or television reception, which c an be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement .

Radiation Exposure Statement

To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

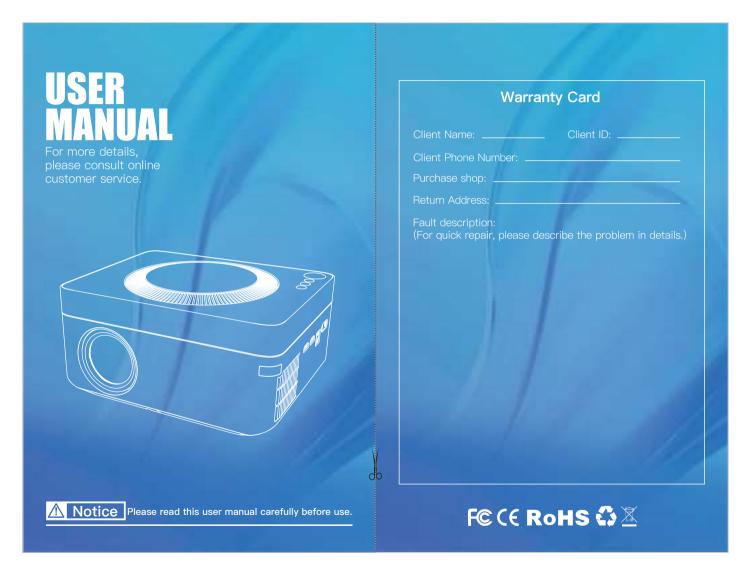

封面

封底