

YAESU

The radio

FT1XDR/DE

Operating Manual

144/430MHz

DIGITAL/ANALOG

TRANSCEIVER

C4FM FDMA



Read this information first

Basic Operation

Repeater Operation

Using the Memory

Scanning Function

Using the Digital GM Function

Using the APRS Function

Using the GPS Function

Convenient Functions

Communicating with a
Specific Remote Station

Functions Used As Needed

Appendix

Table of Contents

Read this information first.....	2	Repeater Operation	40
Introduction.....	5	Repeater Shift.....	41
How to Read This Manual.....	6	Automatic Repeater Shift (ARS).....	41
Checking Bundled Items.....	6	A Wide Variety of Memory Functions.....	42
Safety Precautions (Be Sure to Read).....	7	Using the Memory	42
Before Transmitting Radio Waves.....	11	Registering to Memory Channel.....	43
Names and Functions of Controls.....	12	Split Memory.....	44
Preparation.....	15	Recalling a Memory Channel.....	44
Installing the Antenna.....	15	Recalling Home Channel.....	45
Attaching the Accessory Belt Clip/Protective Cap.....	15	Returning to the Previous Frequency.....	45
Attaching the Protective Cap.....	15	Deleting Memory Channel.....	46
Attaching the Belt Clip.....	15	Restoring Deleted Memory Channel.....	46
Basic Operation	15	Using Memory Tag.....	46
Attaching a Hand Strap.....	16	Assigning a Name to a Memory Channel.....	47
How to Use the Battery Case (FBA-39) Optional.....	16	Displaying Memory Tag.....	47
Installing/Removing the Battery Pack.....	17	Using Memory Bank.....	48
Installing the Battery Pack.....	17	Registering a Memory Channel in a Memory Bank.....	48
Removing the Battery Pack.....	17	Recalling Memory Bank.....	49
Charging the Battery Pack.....	17	Canceling Memory Channel Registration in Memory Bank.....	49
Connecting an External Power Supply for Use in Vehicle (USA/EXP version only).....	20	Assigning Name to Memory Bank.....	49
Connecting to an External Power Supply Using a Power Cable (USA/EXP version only).....	20	Convenient Preset Receiver Memory Channels.....	51
Using a microSD memory card.....	22	Registering Your Favorite Preset Receiver Memory Channels in Memory Bank.....	51
Usable microSD memory cards.....	22	Recalling Preset Receiver Memory Channel to Listen to the Weather Broadcast.....	51
Cautions when using a micro SD memory card.....	22	Recalling Preset Receiver Memory Channel to Listen to the International VHF (Marine) Radio.....	52
Mounting and dismounting microSD memory card.....	22	Recalling Preset Receiver Memory Channel to Listen to the World Broadcast.....	54
Formatting a microSD memory card.....	24	Worldwide short wave broadcast.....	54
Performing Communication.....	25	Using the Scanning Function.....	56
Turning on the Transceiver.....	25	VFO Scan.....	56
Adjusting the Volume Level.....	26	Scanning Function	56
Selecting an Operating Band.....	27	Canceling Scanning.....	57
Selecting a Frequency Band.....	29	Skipping a Frequency You Do Not Want to Scan (Skip Search Memory).....	57
Tuning in to a Frequency.....	30	Specifying the Frequency You Do Not Want to Scan.....	58
Selecting Communication Mode.....	30	Deleting a Frequency Registered to the Skip Search Memory Channel.....	58
Performing Communication.....	31	Selecting a Reception Method When Scanning Stops.....	59
Selecting Communication Mode.....	32	Memory Channel Scanning.....	59
Listening to the Radio.....	33	Specifying a Skip/Selected Memory Channel.....	60
Listening to the AM/FM Radio.....	33	Scanning Only the Selected Memory Channel.....	61
Switching between AM Antennas.....	33	Scanning a Memory Bank.....	61
Miscellaneous Settings.....	34	Memory Bank Link Scan.....	62
Setting clock time.....	34	Programmable Memory Channel Scan (PMS).....	63
Setting the Time Signal.....	34	Registering to a Programmable Memory Channel.....	63
Muting Audio.....	35	Performing Programmable Memory Channel Scan.....	64
Changing the Transmission Power Level.....	36		
Adjusting the Squelch Level.....	37		
Changing the Frequency Step Manually.....	37		
Changing the Mode Manually.....	38		
Locking keys and switches.....	39		
Restoring to Defaults (All Reset).....	39		
Repeater Operation.....	40		
Communicating Via the Repeater.....	40		
Tone Calling (1750 Hz).....	40		

Table of Contents

Using the Digital GM Function

(Digital Group Monitor Function)..... 65

What is the GM function?	65
Standard Operation of the GM Function.....	65
Using the GM Function	65

Using the APRS Function 67

What is the APRS (Automatic Packet Reporting System)?....	67
--	----

Using the GPS Function 68

What is GPS?	68
Activating the GPS Function.....	68
Method of Positioning by GPS.....	69
Displaying Current Position Information of Your Station....	69
Displaying Position Information of Remote Station in Digital Mode ...	69
Saving GPS Information (GPS Log Function).....	71
Checking Tracks on a PC	71
Explanation of GPS Screen and Operation	72
Smart Navigation Function	73
Using the Smart Navigation Function	73
Description of the BACK TRACK Function Screen...	74
Dual Reception (DW) Function.....	75
VFO Dual Reception VFO mode → Priority memory channel...	75

Convenient Functions..... 75

Memory Channel Dual Reception Memory channel → Priority memory channel ...	76
Home Channel Dual Reception Home channel → Priority memory channel ...	76
AF-DUAL Function for simultaneous signal reception over the other frequency while listening to the radio...	77
Using the DTMF Function.....	79
Confirming the entered DTMF code by the sound...	80
Sending the Registered DTMF Code.....	80
Sending a DTMF Code Manually.....	81
Searching for signals with the signal strength graph. Band Scope Function...	82
Taking picture with the optional camera mounted on speaker microphone...	82
Using the Tone Squelch Function.....	84

Communicating with a Specific Remote Station... 84

Selecting a Tone Frequency.....	85
Searching for the Frequency of the Tone Squelch Used by the Remote Station	86
Selecting a DCS Code	86
Searching for the Frequency of the DCS Used by the Remote Station...	87
Notification of Call from the Remote Station by Vibration of the Vibrator ...	88
Selecting Vibrator Operation Mode	88

Notification of a Call from a Remote Station by the Bell ...	89
Changing the Number of Times the Bell Rings ...	89

Calling Only a Specific Station

New Pager Function ...	90
Flow of Operation to Use the Pager Function ...	90
Setting the Code of Your Station	91
Turning on the New Pager Function.....	91
Calling a Specific Station	92
Being Called by the Remote Station (Standby Operation) ...	93



Set Mode 94

Using the Set Mode	94
Resetting the Set Mode Options	94

Functions Used As Needed 94

Set Mode Option List	95
Displaying the GPS screen	103
Setting the display method of the remote station information ...	104
Setting the display method for BACKTRACK	104
Setting the search channels for the BAND SCOPE function...	105
Changing the Lighting Condition.....	105
Selecting a Display Language	106
Adjusting the LCD Contrast Level.....	106
Adjusting the LCD Backlight and Keypad Key Light Brightness Level ...	107
Changing the Opening Message Displayed Immediately after Power-on ...	107
Measuring the Battery Voltage and the Transceiver Temperature Power Supply Voltage Measurement Function/Temperature Measurement Function ...	108
Changing the Display Pattern of the PO Meter ...	109
Switching between AM Antennas.....	109
Reducing receiver sensitivity Attenuator (ATT) Function ...	109
Setting the transmission modulation level.....	110
Changing the mode manually	111
Switching between digital and analog mode.....	111
Setting the AMS transmission mode.....	112
Setting the squelch type for the digital mode.....	113
Setting the pop up time of the remote station information ...	113
Setting the Standby Beep	114
Displaying the version of the DSP program	115
Adjusting the microphone sensitivity Microphone Gain...	115
Muting Voice	116
Simultaneously radio broadcast reception	116
Changing the sound volume setting method	116
Setting memory bank link.....	117
Assigning a name to a memory bank.....	117
Assigning a name to a memory channel.....	117
Prohibiting registration to memory channel Memory Channel Protect Function	118

Table of Contents

Setting memory skip function.....	118
Registering to a memory channel with the lowest memory channel number	
Memory Channel Write Function ...	118
Notifying a call from a remote station by the bell ...	119
Selecting a DCS code.....	119
Transmit and receive a DCS Code with a inverted phase DCS INVERSION Function ...	119
Setting the transmission method of the DTMF code...	120
Setting DTMF code.....	120
Calling only a specific station	
New Pager Function ...	120
Enabling no-communication squelch function	
PR FREQUENCY Function...	120
Adjusting the squelch level	
SQL LEVEL Function ...	121
Setting the signal strength to output sound	
S Meter Squelch Function...	121
Setting the squelch type for transmission and reception SQL EXPANTION FUNCTION ...	122
Setting the type of tone squelch	123
Selecting a tone frequency	123
Setting the sound and speed during tone search Tone Search Function ...	123
ON/OFF for the Weather Alert Feature.....	124
Setting the surveillance interval time for priority channels DW TIME Function ...	124
Turning illumination off when scanning stops SCAN LAMP Function...	125
Setting the time to resume scan	
SCAN RE-START Function...	125
Selecting a reception method when scanning stops...	126
Setting the range for SCAN	126
Turning off the power automatically	
APO Function...	127
Preventing accidental transmission	
Busy Channel Lockout (BCLO) Function...	128
Muting the key operation confirmation tone	128
Turning off the BUSY Indicator	129
Setting the clock shift for the micro computer	
Clock Type Function ...	129
Setting interval to save GPS position information ...	130
Permitting Transfer of Home Channel	
Frequency to VFO ...	130
Using the White LED as a Flashlight	131
Setting the conditions for locking	
LOCK Function ...	131
Setting the operation of 	132
Turning on/off the transceiver at the specified time Timer Function ...	132
Password Function	133
Setting the PTT delay time	
PTT DELAY Function...	134
Setting the ARS function RPT ARS Function.....	134
Setting the direction for repeater shift	
RPT SHIFT Function...	135
Setting the range for repeater shift	
RPT SHIFT FREQ Function...	135
Disabling reception while no signal is received	
Reception Save Function...	136
Changing the frequency step manually	136
Setting clock time.....	136
Restricting the continuous transmission time	
TOT Function ...	136
Setting the frequency selection range for operation in the VFO mode	
VFO MODE Function ...	137
Notification of a call from a remote station by vibration...	138
Saving/ Loading data to/from microSD memory card ...	138
Saving/ Loading memory channel information to/from microSD memory card ...	138
Saving/ Loading GROUP ID information to/from microSD memory card ...	139
Formatting a microSD memory card	140
Setting the optional microphone with camera for use ...	140
Registering CALLSIGN	141
Using the transceiver for packet communication...	142
Clone Operation.....	143
Connecting an external device.....	144
Connecting to a PC	144
Connecting the FT1XDR/DE to external devices	145
Data Cable (CT-170)	145
Data Cable (2.5Φ) (CT-176).....	145
Optional Parts.....	146
Appendix	146
If you suspect malfunction Check the following items before requesting for repair...	147
The transceiver does not turn on.	147
There is no sound	147
There is no transmission of radio waves.....	147
The keys or  does not respond.....	147
The battery pack cannot be charged or battery power depletes immediately after charging...	148
Index.....	149
Specifications	152

Introduction

Features of the FT1XDR/DE

○ Digital communication (C4FM (Quaternary FSK), FDMA system).....	31
○ Equipped with AMS (Automatic Mode Select) Function.....	32
Automatically selects between 4 modes of transmission to fit the signal being received.	
○ External power supply connection	20
○ Simultaneous reception on two different bands, or within the same band (V+V/U+U)	28
○ Independent switching keys for A-band and B-band and TX/BUSY display	28
○ Wide-band reception over the range of 500 kHz to 999.900MHz	28
○ Waterproof design conforming to IPX5 equivalent, which protects the transceiver from rain and splashes.....	11
○ Individual side keys, full keyboard for easy character entry, tilted main dials	12
○ Easy-to-see dot matrix display	14
○ WIRES-X connection support	See WIRES-X instruction manual*
○ Equipped with GM function	See GM function instruction manual*
○ Large-capacity 1266ch memory, with twenty-four 100ch memory banks	42
○ Display memory tags comprised of up to 16 one-byte characters	46
○ Convenient reception of preset receiver memory channels.....	51
By selecting preset frequencies, you can receive shortwave broadcast, and international VHF radio stations with ease.	
○ A wide variety of scan functions	56
○ Built-in GPS unit allowing display of your current location and heading information	68
○ Ready for APRS® communication using the world standard 1200/ 9600bps AX25 modem (B band only).....	See APRS instruction manual.*
○ High-resolution band scope function to display ± 50 channels	82
○ A variety of individual selective calling functions; such as tone squelch (CTCSS) and DCS functions	84
○ Vibrator to alert you of signal reception, in addition to the audible bell.....	88
○ New pager function for calling only specific stations.....	90
○ Illumination by white LED for easy viewing of the LCD outdoors.....	131
○ Built-in temperature sensor.....	108
○ Battery save function to prolong the operating time of the battery.....	136
○ Data terminal for communication with external equipment or firmware update	144
○ Built-in bar antenna for AM reception.....	33
○ Micro SD memory card slot.....	22
○ Snapshot function (an optional camera microphone MH-85A11U is required)	82

* WIRES-X, GM function and APRS instruction manuals are not included in the product package.

 

They are available and may be downloaded from the Yaesu.com website.


 


Introduction





How to Read This Manual

Typical explanatory expressions used in this manual are as follows:

For pressing the  key short Press .

For pressing the  key long Press and hold  for over 1 second.

For pressing  →  Press  and then .

For pressing or turning  while pressing the  key..... Turn  while pressing .

Caution



...Explains caution to observe during operation.


Tip




...Explains operating suggestions or useful tips.

Checking Bundled Items


FT1XDR/DE

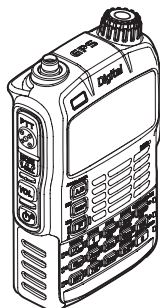


Antenna

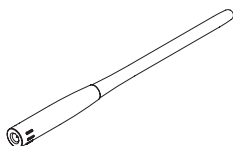


Lithium-ion battery pack
(SBR-14LI: 7.2 V,
2,200 mAh)

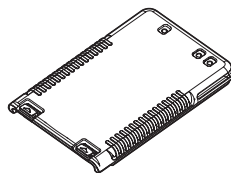

Belt clip

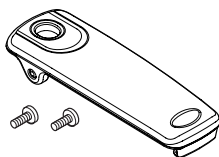


PC connection cable
(SCU-19)

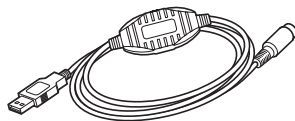


Battery charger
PA-48B/C/U* or SAD-11B

* "B" suffix is for use with 120 VAC (Type-A plug), "C" suffix is for use with 230-240 VAC (Type-C plug), and "U" suffix is for use with 230 VAC (Type-BF plug).

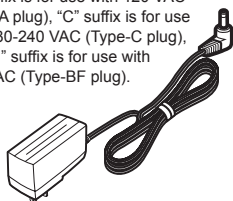

Card clip

 

Protective plate for battery pack



- Quick Manual
- Warranty Card
- Instruction Manual (this manual)

Cautions

- Check that the name of the shop dealer from which you purchased the product and the date of purchase are indicated on the warranty card.
- If any item is missing, contact the shop dealer from which you purchased the product.

Safety Precautions (Be Sure to Read)

Be sure to read the safety precautions to use this product safely.

We are not liable for failures and other problems caused due to misuse or use of this product by you or a third party as well as the damages caused through use of this product by you or a third party except in the case where we are ordered to pay for damages under the laws.

Types and Meanings of Symbols



DANGER

Indicates an imminently hazardous situation which, if not avoided, could result in death or serious injury.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.




CAUTION


Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or only property damage.

Types and Meanings of Legends



Indicates a prohibited action, not to be done in order to use this product safely. For example,  indicates that the product should not be disassembled.



Indicates a required action, to be done in order to use this product safely. For example,  indicates that the power plug should be removed.



DANGER



Do not use this product in “an area where use of it is prohibited”, e.g., inside the hospital, airplane, or train.”

This product can affect electronic or medical devices.



Do not use this product while riding a bicycle or driving a car. Accidents can result.

Be sure to stop the bicycle or car at a safe place before using this product.



Those who are carrying a medical device such as a cardiac pacemaker should not perform transmission near the device. When transmitting, use an external antenna and keep as far as possible away from the external antenna.

The radio wave emitted by the transmitter can cause the medical device to malfunction and result in an accident.



Do not use this product or the battery charger in a place where inflammable gas is generated.

A fire or explosion can occur.