NOKIA	Included in this package: • Phone • Activation card • Charger	Explore your phone: To open the apps list, p
		To open an app or sele or feature and select S
	Initial Phone Setup: Your phone already has a SIM card installed.	To go back to the previ
		To go back to the home Power/End key .
	Your phone's battery may not be fully charged. Use the charger included in your package to charge your phone fully before the first use.	
Quick Start Guide	To turn your phone ON/OFF , press and hold the Power/End key .	

e:

press the center key.

lect a feature, scroll to the app SELECT.

vious view, press the back key.

me screen, press the

Security Settings:

N139DL

Make and Receive Calls:

1. Type in the phone number.

2. Press the Call key .

3. To end the call, press the **Power/End key**.

When the phone rings, press the **Call key** to answer.

BC

To reject a call, press the **Power/End key**.

Voicemail Setup:

For instructions on how to set up voicemail, contact your service provider. When you have new voice mail QO appears in the status bar. Swipe down and tap the notification to listen to the voicemail.

Text and Picture Messaging:

1.Press the center key, and select Messages > New.

2. In the **To** field, press **#** until you are able to enter numbers and then type in a phone number, or select **Contacts** to add a contact from your contacts list.

3.Write your message.

4. To add a picture to the message, select **Options** > Add attachment.

5. Select the location of the picture, then the picture, and select Done.

6.Select SEND.

Turn on Wi-Fi:

1. Press the center key and select **Settings** > **Network** & Connectivity > Wi-Fi.

2. Turn Wi-Fi to On.

3. Select **Available networks** and the network you want, enter a password if needed, and select Connect.

Using your Mobile Internet:

1. Press the center key, and select **Internet**.

2.Select Search Internet.

3. Write a web address, and select GO.

4. Use the center key to move the mouse cursor in the browser.

Bluetooth® Connectivity:

1. Press the center key, and select **Settings** > **Network** & Connectivity > Bluetooth.

2. Turn **Bluetooth** to **On**.

3.Select Nearby devices to find a new device or Paired devices to find a device you have paired your phone with previously.

You can set the phone to ask for a screen lock code.

1. Press the center key and select Settings.

2.Scroll right to Privacy & Security.

3.Select Screen Lock > Screen Lock > On, create a four-digit code. Note, however, that you need to remember the code you created, as Tracfone is not able to open or bypass it.

Lock and unlock your phone:

If you want to avoid accidentally making a call when your phone is in your pocket or bag, you can lock your keys and screen.

To lock your keys and screen, press and hold the *** key** or close the fold.

To unlock the keys and screen, select **Unlock**.

Notification and Status Icons:

*	Bluetooth connection is on	
(?-	Wi-Fi is on	
★	Airplane mode is on	
	Battery status	
Regulatory Agency Information		

Regulatory Agency Information		
FCC ID	2AJOTTA-1398	
Max. SAR (W/kg) - Head	1.06 W/kg	
Max. SAR (W/kg) - Body	1.17 W/kg	
HAC (Hearing Aid Compatible) & Rating	M4/T4	

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.