# Hisense E60 (HLTE236E)

**User Manual** 

Before using your phone, read the User Manual thoroughly.

Manufactured by Hisense Communications Co., Ltd.



# **Contents**

Phone Basics	5
Your phone at a glance Carrying out basic operations Using the notification center Using SIM and MicroSD cards Battery charging	5 6 11 12 14
Other hardware features	16
Troubleshooting	16
I can't turn my phone on My phone keeps turning off automatically I can't use an application on my phone My phone's standby time is too short My phone isn't charging properly Touchscreen error when charging I've forgotten my password My PIN is locked I can't use the Internet or make calls My calls don't connect Phone doesn't make a sound when it rings  Phone Making calls	17 17 18 18 19 19 19 20 20 21
Making calls from contacts  Making calls from recents	21 21
Contacts	21
Importing contacts Creating contacts Searching for contacts	22 22 22
Messages	23
Sending messages Viewing messages Searching messages	23 23 23
Camera	23
Taking photos Taking panorama Recording videos	23 24 25
Photos	25

Viewing photos or videos	25
Deleting photos or videos Sharing photos or videos	25 26
	20
Chrome	26
Using Chrome	26
Clock	26
Alarm	26
Clock	27
Timer	27
Stopwatch	28
Sound Recorder	28
Recording sound	28
Playing a recording	28
Managing recordings	29
Calculator	29
Making calculation	29
FM Radio	30
Listening to radio	30
Security and Privacy	30
Face unlock	30
Safety	31
Safety precautions	31
Safe battery charging	35
Protecting your hearing	35
Protecting the environment	35
Specific Absorption Rate (SAR)	36
Reducing your radiation exposure	37
Other important information Disclaimer	37
ONLY FOR MEXICO	38 38
FCC Compliance	39
Specification	42
•	

## Safety symbols in this document

The following symbols are used throughout this document:



**Warning:** situations that could cause injury to yourself or others.



**Caution**: situations that could cause damage to your device or other equipment.




**Notice**: notes, usage tips, or additional information.

# **Phone Basics**

Use the information in this section to get to know your phone better

## Your phone at a glance

Get to know your phone with the following figure and legend.

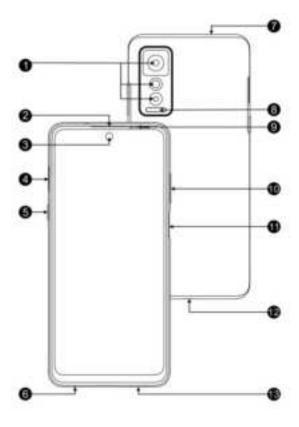

1.Rear camera	8.Flash lamp
2.Receiver	9.Ambient light
3.Front camera	10.Volume button
4.Card slot	11.Power button/Fingerprint
5.Al button	12.USB port
6.Microphone	13.Loudspeaker
7.Headset socket	

The figures and descriptions are for reference only, please refer to the descriptions of actual product.

#### **Carrying out basic operations**

This section describes how to carry out basic functions on your phone.



Before using your phone for the first time, fully charge your battery. For more information on charging your battery, see

#### Battery charging.

#### Turning your phone on

- To turn your phone on, press and hold the power button until the screen turns on.
- When turning your phone on for the first time, or after performing data reset, follow the onscreen instructions to set up you phone.
- To force restart your phone, press and hold the power button until your phone vibrates.

#### **Turning your phone off**


To power off your phone, press and hold the power button, and then tap the icon.

#### Using touchscreen gestures

This section describes how to use touchscreen gestures to help control your phone.


## **Tapping**

To open an app, to choose a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.

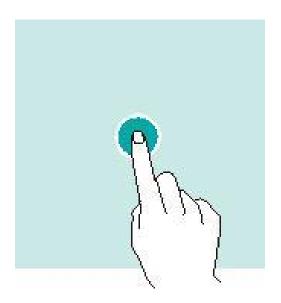


## **Tapping and holding**

Tap and hold an item on the screen for more than 2 seconds to access available options.

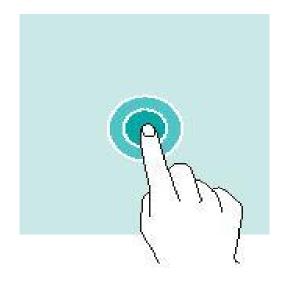


## **Swiping**

Swipe to the left or right on the home screen or the Apps screen to view other panels.

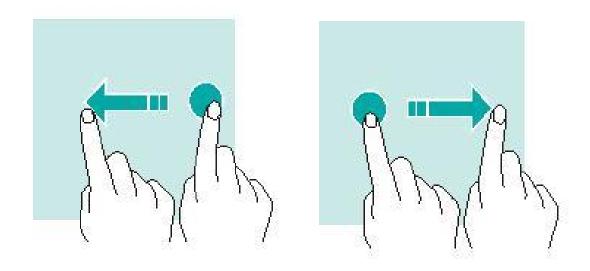


Swipe upwards or downwards to scroll through a web page or a list of items.

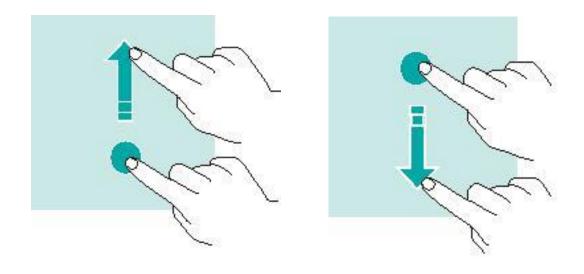


# **Spreading and pinching**

Spread two fingers apart on a web page, map or image to zoom in a part.

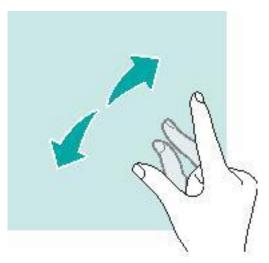


Pinch to zoom out.

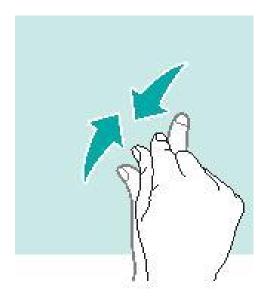

#### **Dragging**

To move an item, tap and hold it and drag it to the target position.

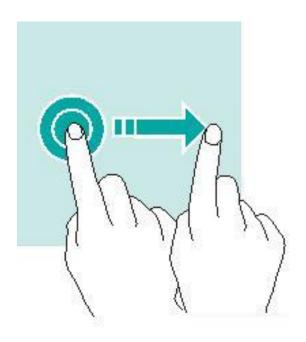

#### Using the navigation bar

You can find your navigation bar control at the bottom of you screen.

- To go back to the home screen, tap
- To open the list of recent apps, tap
- To go back to the previous screen, tap

#### Locking and unlocking screen

#### Locking the screen

- •To lock the screen, press the power button.
- •Go to Settings > Display > Screen timeout to change how

quickly your screen goes to sleep. The screen locks and goes into sleep mode when you don't use your phone for a while. This is to save power and stop accidental phone use.

#### Unlocking the screen

To unlock the screen, press the power button and swipe up.


#### Using the notification center

The notification center is where you can view the latest otifications relating to the operation of your phone.

#### Opening the notification center

To open and view the notification center:

- 1 Swipe down from the top of the screen to see the notification center.
- 2 Swipe down again from the top of the screen to see the shortcuts tab.

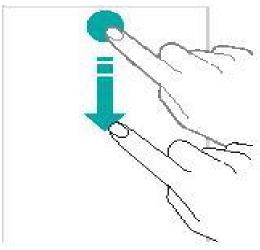

#### Closing the notification center

Swipe up or tap O to close the notification center.

#### **Setting notification options**

To set notification options, go to **Settings > Apps & notifications > Notifications**.

## **Using SIM and MicroSD cards**

#### **Inserting SIM and MicroSD cards**

Always ensure that SIM and MicroSD cards are inserted correctly into your phone.

The following figure shows the correct way to insert SIM and MicroSD cards into your phone.



When inserting your card tray, make sure that the card tray is level and that the card is aligned correctly.



Do not use cut or modified SIM or MicroSD cards with your phone, as these may not be recognized and could damage the card tray.

#### **Ejecting SIM and MicroSD cards**

Always ensure that SIM and MicroSD cards are ejected correctly from your phone.

The following figure shows the correct way to eject SIM and MicroSD cards from your phone.



To eject SIM or MicroSD cards, insert your SIM eject pin into the small hole next to the card tray.

Be careful not to scratch your phone or hurt yourself when using

your SIM eject pin. Store your SIM eject pin out of the reach of children to prevent accidental swallowing or injury.

## **Battery charging**

Follow instructions in this section to charge your battery safely and preserve battery life.

#### Charging your battery

Fully charge the battery before using it for the first time, or when the phone has not been used for a long time, or when the battery is low. To charge your battery, do the following:

- 1 Connect your USB charging cable to your USB power adapter.
  Plug the end of the USB cable into the USB port, and the USB power adapter into a power socket.
- 2 Once your battery is fully charged, disconnect your phone from your USB charging cable.

#### Important safety precautions



The following precautions are extremely important and must

be followed at all times:

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

To charge your phone safely, it is also important to pay attention to the following points:

• Use only approved chargers, batteries, and cables. Using an

nunapproved or incompatible power adapter, charger, or battery may damage your phone, shorten its lifespan, or cause a fire, explosion or other hazards.

- Avoid using your phone when it is charging. Do not cover your phone or power adapter.
- Connect your charger properly. Not connecting your charger properly can cause serious damage to your phone. Any damage caued by misuse is not covered by the warranty.

• Your phone can be safely charged at temperatures between 0°C and 40°C. Charging in environment where the temperature is below 0°C or higher than 40°C will harm battery. Performance and shorten battery life. Regular, long-term charging in extreme temperatures will damage your battery.

 Unplug your charger from the electric socket when not charging your phone.

#### **Protecting your battery**

For safe and effective charging that also protects your battery, you must also pay attention to the following points:

 If your AC power supply is lower voltage, or you charge from computer or other non-standard sources, you may need to charge your phone for longer.

- Your phone might not start straight away if the battery is low. Your phone will start normally once it has charged for a short while.
- The time your phone needs to charge may depend on room temperature and your battery level.
- The phone and charger may heat while charging. This is normal
  and shouldn't affect your phone's lifespan or performance. If your
  battery becomes much hotter than usual, stop charging your
  phone and put it in a cool place. If you phone surface is hot,
  avoid touching your phone for too long.

#### Other hardware features

USB on-the-go (OTG)

Your phone is USB on-the-go (OTG) compatible. This means your phone can host other USB devices, such as mice, or keyboards. Use a standard OTG data cable when using this function.

## **Troubleshooting**

This section lists common problems you may have when using your phone. Check to see whether your issue is listed here before contacting the service center.

## I can't turn my phone on

If you can't turn your phone on, try the following:

- Press and hold power key for two seconds or longer.
- Check that he battery is fully charged before turning your phone on.
- Press and hold the power button until your phone vibrates.
- Check that your battery is properly connected to your phone, and that the connecting points are clean. If your phone has a built-in battery, contact the service center.

## My phone keeps turning off automatically

If you phone keep turning off automatically, try the following:

- Check your battery power. If the power is low, charge your phone.
- Check softwares or applications to see if they are normal. If not, restart your phone.

## I can't use an application on my phone

If you can't use an application on your phone, try the following:

- Check if your phone has sufficient storage. Delete some messages from your phone.
- Check if the application is damaged. Uninstall and reinstall the application. If cannot be fixed, try resetting system.
- Chances are that the application is not compatible. Uninstall the

application and choose a compatible version.

Check and enable applications management permissions.

## My phone's standby time is too short

If your phone's standby time is too short, try the following:

- Chances are that the battery performance decreases. Contact service center to change the battery.
- If you play games or listen to music for a long period of time,
   shorten the time.
- If the screen is too bright, adjust the brightness of the screen.
- If the phone is used in weak signal environment, the standby time
   will be short. Please move to strong signal locations.
- Turn off cellular data, GPS, Bluetooth, Wi-Fi switch when not using them.
- Close the application not used.
- Uninstall the applications not used for a long period of time.

## My phone isn't charging properly

If your phone isn't charging properly, try the following:

- Ensure that your phone is charging at a normal temperature.
- Plug the charger into a different socket.
- Recharge your phone for about half an hour.

- Chances are that the battery has a problem. If the battery has been built-in, contact service center.
- Ensure that the charger is not defective. If the charger is defective,
   replace it.
- If the charger fails to charge, please change or repair it.

## Touchscreen error when charging

If there is touchscreen error when charging, try the following:

- If the charging equipment is incompatible with your phone, it may cause some problems. Use charger supplied and stable charging equipment.
- Check whether softwares or applications are normal or not.
   Restart your phone.

#### I've forgotten my password

If you forget your password, contact service provider.

## My PIN is locked

If you enter wrong PIN three times in a row, contact service provider.

#### I can't use the Internet or make calls

If you can't use the Internet or make calls, try the following:

- Chances are that signal is too weak. Move to an open area and try again.
- Chances are that the phone is out of service area. Check if the Internet is available.
- Chances are that airplane mode is on. Turn off airplane mode.
- Check if software is abnormal. If so, restart the phone.
- Check if SIM card has failure. If so, check or change SIM card.
- Ensure that the dialing is right.
- Check if cellular data setting has failure. If so, go to Settings to set up cellular data.
- Check if pre-paid charge has reached its limit. If so, contact service provider.

## My calls don't connect

If your calls don't connect, try the following:

- Check if phone number is too long.
- Ensure international roaming service and international call service are enabled. If not, contact service provider.

## Phone doesn't make a sound when it rings

If your phone doesn't make a sound when it rings, check if silent or vibrate mode is enabled.

## **Phone**

## **Making calls**

To make calls:

- 1 Tap 🔽.
- 2 Tap to enter a phone number.
- 3 Tap make a call.

## **Making calls from contacts**

To make calls from contacts:

- 1 Tap 🔼
- 2 Tap Contacts to choose a contact.
- 3 Tap the contact number.

# **Making calls from recents**

To make calls from call logs:

- 1 Tap 🔽
- 2 Tap Recents to view all calls. Tap the name or number of the person you want to call.
- **3** Tap **%**.

## **Contacts**

## **Importing contacts**

To import contacts to your phone:

- 1 Tap 🔼 .
- 2 Tap = , then tap Settings > Import.
- 3 Select an import option.

## **Creating contacts**

To create a new contact:

- 1 Tap 🔼 .
- 2 Tap
- **3** Enter the contact's name, phone number and other contact information, and then tap **Save**.

## **Searching for contacts**

To search for contacts:

- 1 Tap 🔼 .
- 2 Use one of the following search methods:
- Scroll up or down the contacts list.
- Tap Search contacts at the top of the screen to search for a contact.
- 3 Select a contact. You can now call them, send them a text

message, or edit their contact information.

# Messages

## **Sending messages**

To send messages:

- 1 Tap
- 2 Tap to create a message.
- 3 Add recipients and enter a message.
- 4 Tap sms to send the message.

## Viewing messages

To view messages:

- **1** Tap 📮 .
- 2 Select a contact on the message list.
- 3 View your conversation.

## **Searching messages**

To search messages:

- 1 Tap
- 2 Tap to enter keywords to search messages.

## Camera

## **Taking photos**

To take photos:

- **1** Tap ...
- 2 Swipe to **Capture** on the screen. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap to take a photo. Your picture will be automatically saved to ...

## **Taking panorama**

To capture a panorama shot:

- **1** Tap ...
- 2 Swipe to **Panorama** on the screen. Hold your phone steady and then tap to start shooting. Slowly move your phone in the direction indicated, holding the phone steady and ensuring the arrow stays levels with the center line.
- 3 Tap when you are finished. Your picture will be automatically saved to

## **Recording videos**

To record videos:

- **1** Tap .
- 2 Swipe to **Video** on the screen. Tap to start recording the video. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap to finish recording.

## **Photos**

## Viewing photos or videos

To view photos or videos:

- 1 Tap 🔧
- 2 Select a photo or a video.

## **Deleting photos or videos**

To delete photos or videos:

- 1 Tap \*\*.
- 2 Tap and hold the photo or video that you want to delete, tap ...

## **Sharing photos or videos**

To share photos or videos:

- 1 Tap
- 2 Select the photo or video that you want to share.
- 3 Tap Select your sharing method.

## **Chrome**

## **Using Chrome**

Connect the web to search for information and bookmark your favorite web pages to access them conveniently.

- **1** Tap 🤦
- 2 Enter the address field in the search bar. You will have access to web pages; moreover, bookmarks, multiple window switching and other functions are supported.

## Clock

This app includes the following functions:

#### **Alarm**

Tap . From the **Alarm** tab, you can do the following steps to set your alarms:

#### Adding an alarm

Tap and set the alarm time, repeat times, alarm sound, and others.

#### **Enabling or disabling an alarm**

Turn on or turn off the switch next to an alarm.

#### **Configuring the alarm settings**

Tap Settings to configure the alarms.

#### **Deleting an alarm**

Tap and hold a alarm, Select the alarm that you want to delete.

Then tap

#### Clock

Tap Signature Clock tab, you can do the following steps to set your clock:

#### Adding a city

Tap . Enter a city name in the search bar or select a city from the list.

#### **Deleting a city**

Tap and hold a city, Select the city that you want to delete. Then tap.

#### **Timer**

1 Tap

2 Tap Timer.

3 Set the countdown time and tap to start the timer. Tap to pause the countdown.

## **Stopwatch**

- 1 Tap .
- 2 Go to the **Stopwatch** tab.
- 3 Tap to start the stopwatch. Tap Lap to count laps. Tap to pause the stopwatch. Tap Reset to reset the stopwatch.

## **Sound Recorder**

The device supports long periods of recording. Make sure your device has available storage before recording.

## **Recording sound**

- **1** Tap ...
- 2 Tap to start recording.
- 3 Tap to stop recording. Then tap , the recording file is automatically saved in the phone.

## Playing a recording

- 1 Tap ...
- 2 Tap to find your recording.

3 Tapt o play the recording.

## **Managing recordings**

- 1 Tap ...
- **2** Tap .
- 3 Tap and hold a recording. You can rename, share or delete the recording file.

## **Calculator**

Use calculator to do simple or complicated calculations.

## **Making calculation**

Tap , you can do simple calculations:

- Tap the number and calculate sign to do simple calculations.
- Go to advanced calculator tab by swiping your screen left.

## **FM Radio**

#### Listening to radio

To use the FM Radio, first you need to connect your headphones.

1 Tap to activate.volume to a comfortable level.

# **Security and Privacy**

#### **Face unlock**

Face unlock can be used to unlock your phone.

#### Adding a face

To add your face:

- 1 Tap Settings > Security > Face unlock.
- 2 To set a screen lock Password, PIN or Pattern along with your face, follow the onscreen instructions.
- 3 Read the instructions carefully.
- 4 Register your face. You can now use your face to unlock the screen.

#### **Deleting a face**

To delete your face:

- 1 Tap Settings > Security > Face unlock.
- 2 Enter your Password, PIN or Pattern.
- 3 Tap DELETE FACE DATA, and then tap DELETE.

# **Safety**

This section contains information on the secure and safe operation of your phone.

## **Safety precautions**

For your safety and that of others, ensure you read, understand, and follow all of the information in this section.

Failure to obey the following safety information could result in fire, electric shock, injuries, or damage to your device or other property. Read all the safety information below before using your phone.

- Using unapproved or incompatible power adapters, chargers, or batteries may damage your phone, shorten its lifespan, or ausea fire, explosion, or other hazards.
- Your phone's ideal operating temperature is 0°C to 35°C. Your phone's ideal storage temperature is -20°C to 45°C.
- Pacemaker manufacturers recommend keeping a minimum distance of 15 cm between phone and pacemaker to prevent potential interference with the pacemaker. If you use a pacemaker, hold your phone on the side opposite to your pacemaker and do not carry your phone in your front pocket.

- Keep your phone and battery away from excessive heat and direct sunlight. Do not place your phone or battery on or in heating devices, such as microwave ovens, stoves, or radiators.
- Do not use your phone in a moist environment, such as bathroom.
   Prevent your phone from being soaked or washed in liquid.
- Follow local laws and regulations while using your phone. To reduce the risk of accidents, do not use your wireless phone while driving.
- While flying in an aircraft or immediately before boarding, only use your phone according to instructions provided. Use of a wireless phone in an aircraft may disrupt wireless networks, can cause danger to aircraft operation, and may be illegal.
- To prevent damage to your phone's parts or internal circuits, do not use it in dusty, smoky, damp, or dirty environments or near magnetic fields.
- When charging your phone, plug the adapter into a socket which is near your phone and which is easy to reach.
- When not in use, unplug the charger from outlets and from the phone.
- Do not use, store or transport your phone in areas where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your phone in these

- environments increases the risk of explosion or fire.
- Dispose of your phone, battery, and accessories according to local regulations. Do not throw phones or batteries away in your household trash bin or other non-recycling trash bin. Improper battery use or disposal may lead to fire, explosion, or other hazards.
- Consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.
- Obey any rules or regulations set by hospitals and health care facilities.
- Do not crash, throw, puncture, drop, squeeze, or bend your phone.
- Do not try to take apart your phone or its accessories. Only authorized personnel are allowed to service or repair the phone.
- Use a dry soft cloth to clean your phone. Do not use water, alcohol, detergent or any chemicals.
- Keep your phone and charger out of the reach of children. Do not let children use the phone or charger without supervision.
- Phone accessories and phone accessory parts, especially small parts, must also be kept away from children to prevent choking.
- Power off your phone in any area where there is a risk of

explosions. Do not charge your phone or use your phone in areas where there are chemicals or particles in the air. Obey all signs and instructions.

- Strictly obey relevant instructions in this guide while using USB cable. Failure to follow instructions may result in your phone or PC being damaged.
- Only use USB version 2.0. USB equipment with your phone.

#### Safe cleaning and maintenance

To ensure your safety and that of others, you must pay attention to the following safety tips when cleaning and maintaining your phone:

- Turn off your phone before cleaning and maintenance. Your charger should be unplugged from socket. Your phone and charger should be disconnected to prevent electric shocks or short circuiting.
- Do not wipe your phone or charger with benzyl alcohol, chemical substances, chemical agents or abrasive cleaning agents. This is to avoid damaging phone parts or the functioning of your phone.
   You may clean your phone with a slightly damp anti-static cloth.
- Do not scrape or alter the phone case, or the paint on the phone, as it may cause allergic reaction. If such reaction occurs, stop using your phone immediately and seek medical help.



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Fully understand user manual before use.
- Ensure your player at low volume levels or power off before you leaving.

## Safe battery charging

Follow the information on safe battery charging in the Battery charging, Safety precautions, and Protecting your battery sections of this user manual.

#### **Protecting your hearing**



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Fully understand user manual before use.
- Ensure your player at low volume levels or power off before you leaving.

#### **Protecting the environment**

- Obey the local regulations on device packaging, battery and used device disposal and bring them to the collection point for proper recycling.
- Take your used, unwanted lithium batteries to a designated place.
   Do not dispose of used devices or batteries in a household rubbish

bin.

 Proper collection and recycling of your device help ensure electrical and electronic equipment waste is recycled in a manner that conserves valuable materials and protects human health and the environment.

## **Specific Absorption Rate (SAR)**

- Your phone is tested to comply with applicable requirements and regulations of the European Union of human exposure to radio wave.
- These requirements set a SAR limit of 2.0W/kg averaged over ten gram of tissue when use in heador Body, and set a SAR limit of 4.0 W/kg averaged over tengram of tissue when use in Limbs.
- Specific Absorption Rate (SAR) is used to measure radio waves absorbed by a body. The device complies with RF specifications when the device used at a distance of 5 mm from your body.
- This product was tested and recorded the maximum SAR value was 1.08W/kg for the head, 1.10W/kg for the body, 3.05 W/kg for the limb.
- The actual SAR level will be much lower than above value since the device has been designed to use the minimum energy for necessary communication with the base station.

#### Reducing your radiation exposure

You can reduce your exposure to radiation from your phone by doing the following:

- Use your phone in areas with good reception. Be especially careful in underground car parks and on train and car journeys.
- Use your phone when all the signal strength bars are displayed.
- Use a hands-free kit.
- During calls, keep your phone away from your abdomen (for pregnant women) and your lower abdomen (for teenagers).

### Other important information

#### Important data usage and billing information

Your phone regularly connects to mail and Internet servers to improve your experience. This creates data exchanges that may be charged along with your existing package, or which may use prepaid credit.

To avoid billing problems related to Internet services, it is strongly recommended to use a suitable package or plan which includes unlimited Internet and emails and to avoid changing the default settings.

You can connect to Wi-Fi for faster, more streamlined service. If you can, use Wi-Fi for streaming, and for downloading games, videos and films.

#### **Disclaimer**

Unofficial headsets, chargers, and other accessories are not compatible with your phone. Using unofficial accessories can affect performance. The factory is in no way responsible for any damage that occurs as a result of using unofficial accessories.

This user manual is intended to provide a general overview. Actual specifications and functions of your phone may be different from those contained in the user manual.

Your phone was fully tested after production. If there are any damages or defects due to manufacturing, follow the terms and conditions in the warranty card.

If there are issues with your phones related to operator features and services, follow the operator terms and conditions.

Note that your phone has specification and function limitations.

These limitations cannot be considered manufacturer damage or as damage or defect of any kind.

Only use your phone for the purposes or functions for which it was designed.

#### **ONLY FOR MEXICO**

"For use in Mexico, the operation of this product is subject to the following two conditions: (1) this equipment or device may not cause detrimental interference and (2) this equipment or device

must accept any interference, including interference that may cause unwanted operation."

#### **FCC Compliance**

This phone complies with section 15 of FCC Regulations. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

FCCI D: 2ADOBHLTE236E

- Connect the equipment into an outlet on a circuit different from

that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for

help.

This equipment complies with FCC radiation exposure limits set

forth for an uncontrolled environment. End user must follow the

specific operating instructions for satisfying RF exposure

compliance. This transmitter must not be colocated or operating in

conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for expo-

sure to radio waves established by the Federal Communications C-

ommission(USA).

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device

may not cause harmful interference, and (2) this device must

accept any interference received, including interference that may

cause undesired operation.

FCC - The highest SAR value reported to the FCC for this type of

devices is 0.38 W/kg when used over the ear, 0.73 W/kg when

used at 10 mm away from the body and 0.73 W/kg when used at a

wireless access point (HOTSPOT) 10mm.

FCC ID:2ADOBHLTE236E

40

Importador: Hisense México S. de R.L. de C.V. Blvd. Miguel de Cervantes Saavedra, No. 301 Torre Norte, Piso 2,Col. Ampliación Granada,Municipio o Demarcación Territorial Miguel Hidalgo, C.P. 11520, Ciudad de México.

R.F.C. HME110512IY3 Tel: +52 55 55313515

MARCA: HISENSE

MODEL: HLTE236E

**ELECTRICAL CHARACTERISTICS** 

ADAPTADOR:

**BRAND: HISENSE** 

MODEL: TPA-46050200UU

INPUT: 100-240V~50/60Hz,0.15A

OUTPUT: 5.0 V == 2000mA

RECHARGEABLE BATTERY:

**BRAND: HISENSE** 

MODEL: LPN385510

MADE IN CHINA

# **Specification**

Hisense
Hisense E60
HLTE236E
174.07×79.47×8.7mm
Android 11
SC9863A, Octa Core,
CortexTM A55 1.6GHz
4GB RAM + 64GB ROM
Rear:16MP+5M+2MP
Front:8MP
6.95 inch
FHD+ (2460×1080)
16.7M
WCDMA: B1/2/4/5
LTE: B1/2/4/5/7/12/26/28
2G:Quad band
Band 10/38/66
Download:150 Mbps
Upload: 50 Mbps
802.11b/g/n
BT v4.2
GPS, aGPS
Yes
Micro USB 2.0, type-C
3.85 V == 5 100 mAh

Labeling requirements. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modification warning. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

FCC Compliance If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://WWW.MPEGLA.COM