

Exhibit 21

User's Guide



User's Guide



User's Guide for QCP™ 2008 and QCP™ 2035 phones

This manual is based on the production versions of the QCP 2008 and QCP 2035 phones. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. patents:

4,901,307	5,056,109	5,099,204	5,101,501	5,103,459
5,107,225	5,109,390	5,193,094	5,228,054	5,257,283
5,265,119	5,267,261	5,267,262	5,280,472	5,283,536
5,289,527	5,307,405	5,309,474	5,337,338	5,339,046
5,341,456	5,383,219	5,392,287	5,396,516	D356,560
5,408,697	5,414,728	5,414,796	5,416,797	5,426,392
5,437,055	D361,065	5,442,322	5,442,627	5,452,473
5,461,639	5,469,115	5,469,471	5,471,497	5,475,870
5,479,475	5,483,696	5,485,486	5,487,175	5,490,165
5,497,395	5,499,280	5,504,773	5,506,865	5,509,015
5,509,035	5,511,067	5,511,073	5,513,176	5,515,177
5,517,323	5,519,761	5,528,593	5,530,928	5,533,011
5,535,239	5,539,531	5,544,196	5,544,223	5,546,459
5,548,812	5,559,881	5,559,865	5,561,618	5,564,083
5,566,000	5,566,206	5,566,357	5,568,483	5,574,773
5,574,987	D375,740	5,576,662	5,577,022	5,577,265
D375,937	5,588,043	D376,804	5,589,756	5,590,069
5,590,406	5,590,408	5,592,548	5,594,718	5,596,570
5,600,754	5,602,834	5,602,833	5,603,096	5,604,459
5,604,730	5,608,722	5,614,806	5,617,060	5,621,752
5,621,784	5,621,853	5,625,876	5,627,857	5,629,955
5,629,975	5,638,412	5,640,414	5,642,398	5,644,591
5,644,596	5,646,991	5,652,814	5,654,979	5,655,220
5,657,420	5,659,569	5,663,807	5,666,122	5,673,259
5,675,581	5,675,644	5,680,395	5,687,229	D386,186
5,689,557	5,691,974	5,692,006	5,696,468	5,697,055
5,703,902	5,704,001	5,708,448	5,710,521	5,710,758
5,710,768	5,710,784	5,715,236	5,715,526	5,722,044
5,722,053	5,722,061	5,722,063	5,724,385	5,727,123
5,729,540	5,732,134	5,732,341	5,734,716	5,737,687
5,737,708	5,742,734	D393,856	5,748,104	5,751,725
5,751,761	5,751,901	5,754,533	5,754,542	5,754,733

5,757,767	5,757,858	5,758,266	5,761,204	5,764,687
5,774,496	5,777,990	5,778,024	5,778,338	5,781,543
5,781,856	5,781,867	5,784,406	5,784,532	5,790,589
5,790,632	5,793,338	D397,110	5,799,005	5,799,254
5,802,105	5,805,648	5,805,843	5,812,036	5,812,094
5,812,097	5,812,538	5,812,607	5,812,651	5,812,938
5,818,871	5,822,318	5,825,253	5,828,348	5,828,661
5,835,065	5,835,847	5,839,052	5,841,806	5,842,124
5,844,784	5,844,885	5,844,899	5,844,985	5,848,063
5,848,099	5,850,612	5,852,421	5,854,565	5,854,786
5,857,147	5,859,612	5,859,838	5,859,840	5,861,844
5,862,471	5,862,474	5,864,760	5,864,763	5,867,527
5,867,763	5,870,427	5,870,431	5,870,674	5,872,481
5,872,774	5,872,775	5,872,823	5,877,942	5,878,036
5,870,631	5,881,053	5,881,368	5,884,157	5,884,193
5,884,196	5,892,178	5,892,758	5,892,774	5,892,816
5,892,916	5,893,035	D407,701	5,898,920	5,903,554
5,903,862	D409,561	5,907,167	5,909,434	5,910,752
5,911,128	5,912,882	D410,893	5,914,950	5,915,235
5,917,708	5,917,811	5,917,812	5,917,837	5,920,284
D411,823	5,923,650	5,923,705	5,926,143	5,926,470
5,926,500	5,926,786	5,930,230	5,930,692	

Other patents pending.

Kyocera is a US-registered trademark and QCP is a trademark of Kyocera Corporation. QUALCOMM is a registered trademark and registered service mark of QUALCOMM Incorporated. Other product and brand names may be trademarks or registered trademarks of their respective owners.

 
Copyright © 2000 Kyocera Wireless Corp. All rights reserved. Printed in the United States of America.

Contents

1 Features of the QCP 2008 and QCP 2035 Phone	1
Menus	2
2 Getting Started.....	3
To turn on the phone	3
To turn off the phone	3
To find your phone number	3
To make a call	3
To end a call	3
To answer a call	3
To silence the ringer/alert	4
To lock the keypad	4
To unlock the keypad	4
To adjust the volume	4
Screen icons	5
3 Battery	7
4 Using the Contacts directory....	9
To save a phone number	9
Speed dial and 1-Touch Dial ...	12
Contact cards	14
To delete a contact card	15
To search the Contacts directory	15
To enter letters, numbers and punctuation marks	17
5 Settings	21
Silence All	23
Keyguard	23
To turn keyguard off	24
Sounds	24
Display	24
Security	25
Call Information	26
Network	27
Extras	29
Messaging	30
Accessories	32
6 Tools	35
Web Browser	35
Alarm Clock	37
Calculator	37
Tip Calculator	38
Bust Out game	39
Stopwatch	39
Countdown Timer	39
7 Troubleshooting	41
8 Phone care and safety.....	45
Glossary	49

1 Features of the QCP 2008 and QCP 2035 Phone



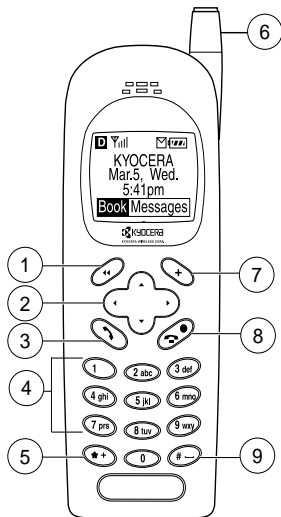

- ① Erases the last character in or moves to the previous menu.
- ② Adjusts volume when on a call, scrolls up, down, left or right through lists and menus, and positions the cursor during text entry.
- ③ Starts, answers or ends a call.
- ④ Enters a number, letter, or punctuation mark.
- ⑤ Enters a capital letter.
- ⑥ Pull out the antenna to make or answer a call. Push in the antenna when the phone is not in use.
- ⑦ Selects a menu item.
- ⑧ Turns on and turns off the phone, ends a call, or returns to standby mode.
- ⑨ Enters a space during text entry.



Menus

My Info	Contacts	Calls	Settings	Tools	Messages
My Information	View All Add New Find Name Speed Dial List Voice Dial List Business List Personal List Info	Recent Calls	Silence All Keyguard Sounds Display Security Call Information Network Extras Messaging Accessories	Web Browser Voice Memo Scheduler Alarm Clock Calculator Tip Calculator Bust Out Stopwatch Countdown Timer Memo Pad	Voicemail In-Box Out-Box Filed Settings

Quick menu reference



- Press  to scroll up, down, left or right through the menus.
- Press  to select a menu item.
- Press  to go back to the top level of the current menu.
- Press  to return to idle standby mode.

2 Getting Started


This section explains how to use the basic features of two types of Kyocera Wireless Corporation (KWC) phones:

- **QCP 2008** dual-mode CDMA digital and analog cellular service at 800 MHz
- **QCP 2035** trimode CDMA digital service at 800 and 1900 MHz, and analog service at 800 MHz


To turn on the phone

1. Fully extend the antenna.
2. Press  for one to two seconds.
When the phone locates a signal, the  appears and the phone is ready to make or receive a call. Once the phone is on, it enters idle standby mode when no numbers have been entered and no call is in progress.



To turn off the phone

- Hold down  until “Powering off” appears (about three seconds).

To find your phone number

- From idle standby mode, press .


To make a call

1. Fully extend the antenna.
2. Press  to turn on the phone.
3. Enter the phone number.
4. Press .

To end a call



- Press .


To answer a call

- Press .




To silence the ringer/alert

When you receive a call, you may silence the ringer or stop the vibration alert in one of three ways:


- Press .
- Press  up or down.
- Select **Silence** on the screen.





To silence all alerts (including the ringer) in idle standby mode, press and hold , then select the setting you want.

To lock the keypad


1. To protect your phone from accidental keypresses when a call is not in progress, press up and hold .
2. Press  to lock the keypad. A message appears “Keypad guard is active. Press  to unlock.”

To unlock the keypad



1. Press up on .

2. Press . A message appears “Keypad guard is active. Press  to unlock.”
3. Press up on , then press .

To adjust the volume

To manually adjust the volume during a call, press  up or down.

Follow these instructions to set the phone to automatically adjust the earpiece volume based on the amount of noise around you or the other person's voice volume level:

1. Select **Settings** → **Sounds** → **Smart Sound**.
2. Select one of the following:
 - **Enabled** adjusts the volume automatically.
 - **Disabled** keeps the volume level the same until you manually adjust it using .
3. Press .

Screen icons

Your phone has a five-line screen. The following icons may appear on the top line:



The phone is operating in CDMA digital mode.



Current signal strength. When this icon is visible, you can make and receive calls.



No signal. You cannot make or receive calls.



A call is in progress. (In idle standby mode, this icon is not visible.)



The alarm clock is set.


The phone is set to make no noises for incoming calls, new messages, or other alerts. The backlighting or vibrator will be used instead.

The phone is outside of its home area.

DRAFT


3 Battery

Your phone comes with an internal lithium ion (Lilon) battery. Leave this battery in the phone at all times. The battery is partially charged when you receive the phone.

Before using your phone, fully charge the battery by connecting the AC Adapter to the phone, then connecting it to a wall outlet. Let the phone charge until you receive a text message stating that charging is complete or the battery icon is full . You can safely recharge the battery at any time, even if it has a partial charge.

Power-save mode

Your phone automatically switches to power-save mode after about 15 minutes. Power-save mode decreases the drain on the battery. When the

phone is in power-save mode, you cannot make or receive calls, and “Power Save Mode” and () appear on the screen.

Battery performance

Follow these guidelines to improve battery performance.

- Do not disassemble or short-circuit the battery.
- Keep the metal contacts at the base of the battery clean.
- If you have not used an internal or external battery for more than a month, recharge it before using it.
- Avoid extreme temperatures, direct sunlight and high humidity.
- Never dispose of any battery in or near a fire. It could explode.

DRAFT

4 Using the Contacts directory

NOTE—Some features in this section have not been implemented, tested or validated.

Your phone has a tool called the Contacts directory, which works like a set of phone index cards. Use the Contacts directory to store information about a person or a company on a virtual contact card.






The Contacts directory stores a minimum of 100 cards. On each card you can store a name and a phone number, as well as street addresses, email addresses, URLs, and notes about the person or company. You can also set up a speed dial number. You can designate each card as personal or business to help you find numbers by type. Phone numbers and cards can be set up as secret, so you can access them only with a security code.

Note—If you have the Q-Suite Connectivity Kit Contacts Manager application (sold separately) on your computer, you can download phone book entries from your computer to the Contacts directory on your phone. Refer to the documentation that came with that application for more information. Before using the Contacts directory, refer to the following sections:


- “To enter letters, numbers and punctuation marks” on page 17.
- “To enter special characters” on page 18.
- “To enter pauses and hyphens” on page 19.

To save a phone number

1. Make sure your phone is in idle standby mode, then enter the phone number you want to save.

2. Select **Save** by pressing  to the right, then press .
3. Select the type of number (work, home, mobile, pager, or fax).
4. Select an option:
 - a. To add to an existing contact, select **Add** and press  up or down to find the contact, or press  to select “Find Name,” then proceed to step 5.
 - b. To create a new contact, select **New** and enter a name for the contact. Proceed to step 5.
5. Select **Done** by pressing  twice.
 - a. Select an option:
 - **Save & Exit** saves information and returns you to idle standby mode.
 - **Speed Dialing** asks you to choose a speed dial location from the list. You can choose any location except 1, which is

reserved for your voicemail number.

- **Secrecy** allows you to set restrictions, lock or hide the phone number.
 - **Primary Number** allows you to classify this number as the primary number for the contact.
 - **Classify Contact** allows you to classify the contact as **business** or **personal**.
 - **View Contact** allows you to enter an email address, street address, a URL, or notes.
6. Press . The message “Contact Successfully Saved!” appears.


Note—Multiple items, such as addresses, are indicated on the contact card by dots next to the applicable icon. For example, if there are two addresses, the icon will show one dot next to it to indicate a second address exists. A

maximum of six phone numbers, two email addresses, two street addresses, two URLs, and one note may be entered for each contact.

Important—Some pieces of information can be added only after you save a card, including speed dial number and secrecy status.


To save a phone number automatically

The Auto-Save setting tells the phone to ask you to save a number in the Contacts directory after you have called the number three times.

1. From idle standby mode, select **Settings** → **Extras** → **Auto-Save**.
2. Select **Enabled**.
3. Press .

To save a phone number as a contact card

This allows you to create a new contact card and add necessary information.


1. From idle standby mode, select **Contacts** → **Add New** → **phone number**.
2. Enter the phone number up to 50 digits.
Tip—When you save a number as a contact card, include long distance information so you can use the number from anywhere. If it's a local number, you pay only local rates.
3. Select **Save** by pressing  twice.
4. Select the type of number (work, home, mobile, pager, or fax).
The screen shows “Add to an existing contact or create a new contact?”
5. If this is a new card, select **New** and follow these steps:
 - a. Enter a name for this card up to 50 characters long. (If you need to know how to use the keypad to enter letters, see page 20.)

b. Select **Done** by pressing  twice.



c. Select an option:

- **Save & Exit**
- **Voice Dialing**
- **Speed Dialing**
- **Secrecy**
- **Primary Number**
- **Classify Contact**
- **View Contact**

See page 10 for more information on contact options.

d. Press . The message “Contact Successfully Saved!” appears.

6. If you are adding to an existing card, select **Add** and follow these steps:


a. Press  up or down to select a contact from the list, or press  to select “Find Name.”

b. Select an option:

- **Save & Exit**
- **Voice Dialing**

- **Speed Dialing**
- **Secrecy**
- **Primary Number**
- **Classify Contact**
- **View Contact**

For more information on contact options, refer to page 10.

c. Press . The message “Contact Successfully Saved!” appears.

Speed dial and 1-Touch Dial

To set a speed dial or 1-Touch Dial location




Follow the steps below to set a speed dial location for speed dialing and 1-Touch dialing. Up to 98 locations can be saved.

Note—Location 1 cannot be used; it is reserved for your voice mail number.


1. Open a saved contact card.
2. Select **Speed Dialing**.
3. Choose a speed dial location.
4. Select **Assign**.

Note—You can overwrite an existing assignment.

To remove a speed dial location

1. From idle standby mode, select **Contacts** → **Speed Dial List**.
2. Select the speed dial location by pressing  twice.
3. Select **Speed Dialing** and choose the speed dialing location you wish to remove by pressing .
4. Select **Remove** by pressing .

To speed dial

- Enter the one- or two-digit speed dial number and press .

To enable 1-Touch Dialing

1. Select **Settings** → **Extras** → **1-Touch Dialing** → **Enabled**.
2. Press .

To use 1-Touch Dialing


- Enter the one- or two-digit speed dial number and hold down the last number to dial. For example, if the

speed dial number is 15, press 1, then press and hold 5 to dial.


To redial the last number called

- Press  twice.


To call from the Contacts directory or Recent Calls list

1. From idle standby mode, select **Contacts** → **View All**.
2. Highlight a name or phone number and press .

To call your voice mail number

- To call your voice mail number from either idle standby mode or from a notification, press and hold .

To change your voice mail speed dial number

1. Select **Settings** → **Messaging** → **Voicemail Number**.
2. If a number exists, select **Edit**.
3. Enter or change the voice mail speed dial number.
4. Select **Save** → **OK**.
5. Press .

The Recent Calls list

The Recent Calls list shows the last 15 call entries. These entries include calls you have received, places, missed, and forwarded, as well as call-waiting and three-way calls.

Each type of call in the list is identified by an icon as shown below.



Call to



Forwarded
call



Call
from



Call
waiting



Three-
way
call



Missed
call

To view the Recent Calls list

1. From idle standby mode, select **Calls** → **Recent Calls**, or select the **Recent Calls** soft option from the missed call alert. [VERIFY]

2. To view details about a call, select the entry you want, then press .
 - (Optional) What does **Save** do?
 - (Optional) To see the duration of the call, select **Time**.
 - (Optional) To see the full number, select **Number**.
 - (Optional) To go back to the calls list, press .

To dial from the Recent Calls list

1. From idle standby mode, select **Calls** → **Recent Calls**.
2. Select the call in the list or display the call detail and press .

Contact cards



This section explains how to work with contact cards.

To change a contact card


You can edit information on a contact card, including the name, phone number, phone number type, speed dial location, secrecy status, voice dial

status, street address, email address, URL, and notes.

1. From idle standby mode, select **Contacts** → **Find Name**.
2. Select the type of card (All Contacts, Personal, Business, or Speed Dial.)
 - d. Enter the name on the card you want and select **Find**.
3. Select the contact card you want to edit and select **View** → **Edit** → **Options**.
4. From the list, select the type of information you want to change.
5. To change information, enter new information over the old.
6. To delete information:
 - a. Select the information you want to delete.
 - b. Select **Erase** → **One Item**.
 - c. Select **Yes** to confirm you want to delete this information.

7. If finished, select **Done** and press . To continue making changes, select **View**, and go back to step 5.
8. When you are finished, press  to return to idle standby mode.


To delete a contact card

1. From idle standby mode, select **Contacts** → **View All**.
2. Select the card you want to delete by pressing  twice.
3. Select **Erase**.
4. The message “Erase just this number or the entire contact?” Select **Number** to delete just the number or **Contact** to delete the entire contact record, then **Yes** to delete or **No** to cancel.



To search the Contacts directory

The Contacts directory automatically sorts entries by speed dial location

number, but there are several ways to find a phone number or full card in the Contacts directory. You can search by name, by speed dial number, voice dial status, or card type.



After you find the entry, you can display the full card or call a number by highlighting the phone number and pressing .

To scroll through all contact cards

1. Select **Contacts** → **View All**. A list of all contacts appears in alphabetical order.
2. To find the entry you want, press  down to scroll through the entries.
3. Press  to display the full card.



To search by name

1. Select **Contacts** → **Find Name**.
2. Enter all or part of the name and select **Find**. A list of matching names appears.

3. Use  to scroll through the list to find the entry.
4. Press  to display the full card.


To search by speed dial location

You can display a list only of numbers assigned a speed dial number in the Contacts directory.

1. Select **Contacts** → **Speed Dial List**. A list of names and speed dial numbers appears.
2. To find the entry you want, press  down to scroll through the entries.
3. Press  to display the full card.


To search by card category

You can display a list of numbers based on the category set for the card.

1. Select **Contacts** → **Business List** or **Personal List**. A list of names appears.
2. To find the entry you want, press  down to scroll through the entries.




3. Press  to display the full card.


Dialing from the Contacts directory




1. Use one of the search options on page 15 to display the phone number in a list or on the contact card.
2. Select the phone number you want.
3. Press .

To enter letters, numbers and punctuation marks


You can enter any combination of letters, numbers, and punctuation marks in all but the number field in a contact card.

The QCP 2008 and QCP 2035 phones offer several different methods of entering text. When you are in a text entry screen, start entering text if you wish to use the default  rapid text entry mode. To change the entry mode, press , then use  to scroll to the

 
text or number entry mode you wish to use and press .

- To enter spaces between words, press .
- To move the cursor, press .
- To delete characters, press .

To use rapid text entry

- T9[®] rapid text entry, shown on your phone by , allows you to enter text quickly and easily by storing a database of commonly used words. For example, to enter the word “how,” you can spell out the word by pressing only three keys, 4-6-9. This is the default text entry setting.

To use normal text entry

- Normal alpha text entry, shown on your phone by , allows you to enter text in the conventional manner of one keypress per letter. Press the key once for the first letter, twice for the second letter, and so on. After you have cycled through the letters, the

key number appears. For example, if you press **2 abc** twice, the letter *b* appears. Two seconds after you choose a character, the cursor moves one space to the right.

To switch cases

- Press **# -**. A graphic appears. To change back to lower-case, press **# -** again. [DOESN'T WORK]

To enter punctuation

 
1. Press **+ .**.
2. Use **⬆** to scroll to the text entry mode you are currently using and press **+ .** again.
3. Press **⬆** to scroll through the list of symbols, and press **+ .** to see a list.
4. Press **⬆** to scroll through the list.

To enter numbers

- The number setting, shown on your phone by **123**, allows you to enter numbers using the number keys. Press the key once for each number.

There are three screens of characters, each matched to a number key.




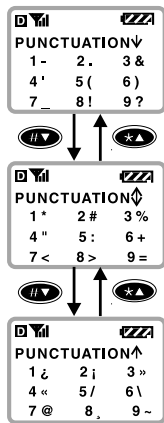

 1. Use **⬆** to scroll between the screens.
2. With the correct screen visible, press the appropriate number to enter each punctuation mark.
3. To exit the list without entering a punctuation mark, press **⬅**.




 
 







To enter special characters



Your phone supports English, French, Spanish, and Portuguese character sets. If you select English, the number keys enter the letters printed on the keys. If

you select another language, you can also enter letters with accents, cedillas, circumflexes, and other marks.

Key	French
	A À Â Ã Ç 2
	D E Ë Ê Ë F 3
	G H Î Ï 4
	M N O Ô Æ 6
	T U Ü Ú V 8

Key	Spanish
	A Á B C 2
	D E É F 3
	G H Í 4
	M N Ñ O Ó 6
	T U Ü Ú V 8

Key	Portuguese
	A Â Ã Ä B C Ç 2
	D E Ê Ë Ê F 3
	G H Í 4
	M N O Ò Ó Ô Õ 6
	T U Ü Ú V 8

1. Press  to the right and select **Settings** → **Display** → **Language**.
2. Select the language from the list, then press .
3. Press the keys in the chart to enter special characters.

To enter pauses and hyphens

You can insert pauses and manual hyphens along with numbers in your Contacts directory. You may wish to enter pauses or manual hyphens when dialing numbers that require you to pause and enter an option, such as

calling your company's voice mail system.

There are two kinds of pauses:

 
- **Hard pauses** cause the phone to stop dialing until you select Resume.
- **Timed pauses** are two seconds long.
- Hyphens (need info)

By default, your phone enters hyphens using the North American numbering plan. Pauses and manual hyphens count toward the 32-character limit.

1. Start entering the number.
2. Press one of the following keys:
 - 1 to insert a hard pause
 - 2 abc to insert a timed pause
 - 4 ghi to insert a manual hyphen
3. Enter the rest of the numbers and the name as usual.


5 Settings

The Settings menu options are shown on the next two pages.

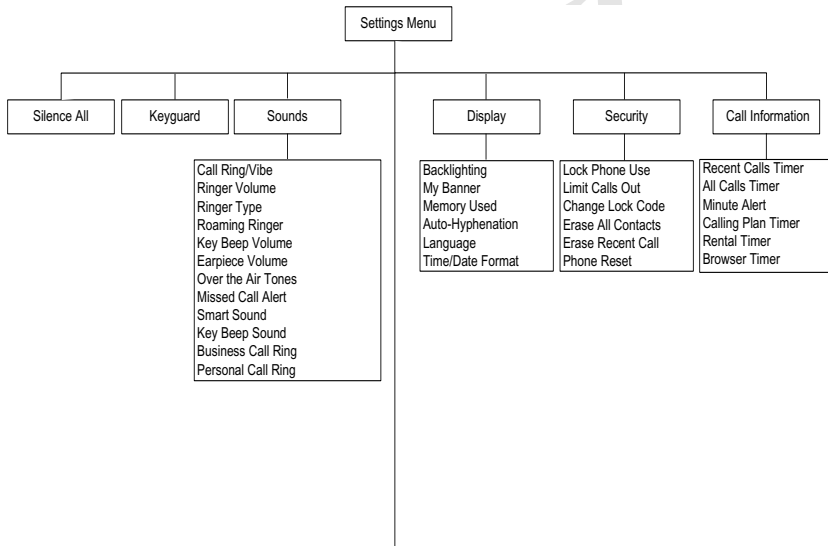

Continued on next page

 
Settings menu (continued)

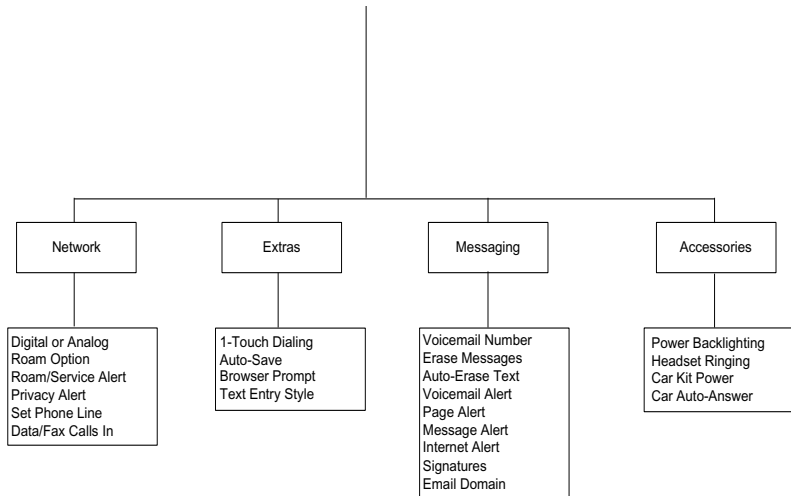

NOTE—Some features in this section have not been implemented, tested or validated.




Silence All

This feature allows you to silence all phone sounds, including the ringer and all alerts, while leaving the phone on. You can have the phone alert you by vibration or intense flashing of the backlight.


1. Select **Settings** → **Silence All**.
2. Highlight and select one of the options. (**Normal** returns the alert to the ringer.) When the phone is in silent mode, the screen shows a bell with a slash through it. If the bell with slash icon is flashing, that means the **Lights Only** option is active.
3. Press  to save your selection.

Keyguard



The Keyguard locks your keypad to protect your phone against accidental keypresses when the phone is turned on and a call is not in progress.

- You can always answer calls by pressing  whether the keyguard is turned on or not. If you answer a call, the keyguard is turned on again at the end of the call. Also, if the keyguard is on you can still silence an incoming call by pressing  or by pressing up or down on .





To turn keyguard on

1. Select **Settings** → **Keyguard**.
2. Highlight one of the locking options and press  to save:
 - **Guard Now** locks the keypad immediately.
 - **15s auto-guard** locks the keypad if no keys are pressed for fifteen seconds.

- **30s auto-guard** locks the keypad if no keys are pressed for thirty seconds.
- **1m auto-guard** locks the keypad if no keys are pressed for one minute.
- **Auto-guard off** unlocks the keypad and restores it to normal.

Shortcut—To turn the keyguard on quickly in standby mode, press up and hold , then press  to lock the keypad.

To turn keyguard off

1. Press up on .
2. Press  to unlock the keypad. A message appears, “Keypad guard is active. Press  to unlock.”
3. Press up on .

Sounds

You may change the alert sounds your phone makes from this menu option.

1. Select **Settings** → **Sounds**, then the setting you want:
 - Call Ring/Vibe
 - Ringer Volume
 - Ringer Type
 - Roaming Ringer
 - Key Beep Volume
 - Earpiece Volume
 - Over the Air Tones
 - Missed Call Alert
 - Smart Sound
 - Key Beep Sound
 - Business Call Ring
 - Personal Call Ring

Display

You may change your phone’s display from this menu option.

1. Select **Settings** → **Display**, then the setting you want:
 - Backlighting
 - My Banner
 - Memory Used

- Auto-Hyphenation
- Language
- Time/Date Format

Security

You must enter your four-digit lock code (typically 0000 or the last 4 digits of the phone number) to set any of the options on the Security menu. To change your lock code, see “To change your lock code” on page 25.)

To lock and unlock the phone

When you lock your phone, you can only call a number set up as an emergency number, a service provider (OTASP) number, or a priority number. You can still receive incoming calls.

To lock the phone

1. Select **Settings** → **Security** → **Lock Phone Use**.
2. To lock the phone every time you turn on the phone, select **On power**

up. To lock the phone immediately, select **Now**.

3. Press  .


To unlock the phone

- Select **Unlock** and enter your four-digit lock code.

To limit calls out

- Select **Settings** → **Security** → **Limit Calls Out**. Select **No** for unlimited calls, or select **Yes**, to **Contacts** to allow calls to contacts only.

To change your lock code

1. Select **Settings** → **Security** → **Change Lock Code**.
2. You will see the message "Change Lock Code?"
 - a. Select **Yes** and enter a new code, then press  .
 - b. Select **Exit** to leave your lock code unchanged.

To erase all contacts

1. Select **Settings** → **Security** → **Erase All Contacts**.
 - Select **No** to leave contacts unchanged.
 - Select **Yes** to erase all contacts. You will see the message, "Erase ALL contacts?" Select **No** to cancel or **Yes** to erase all contacts.

To erase recent calls

1. Select **Settings** → **Security** → **Erase Recent Call**.
 - Select **No** to leave the Recent Calls list unchanged.
 - Select **Yes** to erase all recent calls. You will see the message, "Erase ALL recent calls list entries?" Select **No** to cancel or **Yes** to erase all recent calls.

To reset the phone

1. Select **Settings** → **Security** → **Phone Reset**.
 - Select **No** to cancel.

- Select **Yes** to reset the phone. You will see the message, "Reset ALL phone settings?" Select **No** to cancel or **Yes** to reset the phone.

Note—Your four-digit lock code, Recent Calls timer, Contacts directory, In- and Out-Box contents, memos, and service programming are **not** reset when you reset your phone.

Call Information

This setting allows you to view information about calls and alerts.

Recent Calls Timer

- This timer displays the total number and duration of recent calls you have made and received. Press **Reset** to reset the timer to zero.

All Calls Timer

- This timer displays the total number and duration of all calls you have made and received. You cannot reset this timer.

Minute Alert

- You can set an alert to beep ten seconds before the end of every minute during a call.

Rental Timer

(not available on all phones)

- If available from your service provider, this timer can be activated if the phone is to be used as a rental. **Note**—the timer can only be reset by your service provider.


Browser Timer

- This timer displays the total number and duration of data calls you have made and received. Press **Reset** to reset the timer to zero.

Network


Use this setting to view or change options such as roaming and privacy alerts.

To select digital or analog mode

1. Select **Settings** → **Network** → **Digital or Analog**.
2. Select an option by pressing  :
 - **Automatic** automatically switches the phone between digital and analog.
 - **Analog only** sets the phone to work in analog mode only.
 - **Analog call** forces a call into analog mode until the end of the call.
 - **Digital only** sets the phone to work in digital mode only.

Roam Option


Use this setting to determine which signals your phone will accept.

1. Select **Settings** → **Network** → **Roam Option**.
2. Select an option by pressing  :
 - **Automatic** (recommended setting) accepts any system the phone service provides.

- **No Roaming** prevents you from making or receiving calls outside of your home service area.

Roam/Service Alert


Use this setting to have the phone alert you if you roam outside of your home service area.

1. Select **Settings** → **Network** → **Roam/Service Alert**.
2. Select an option by pressing  :
 - **Disabled** will not alert you if you roam outside your home service area.
 - **When no service** alerts you with three tones, decreasing in intensity, when service is lost. When service is required, you will hear three tones in increasing intensity.
 - **On roam change** alerts you with two tones, decreasing in intensity, when a less preferred service is acquired. When a more preferred

service is acquired, you hear three tones, increasing in intensity.

- **On any change** alerts you with three increasing tones if there is a change in roaming service or three decreasing tones if the phone loses service.

Privacy Alert

1. Select **Settings** → **Network** → **Privacy Alert**.
2. Select an option by pressing  :
 - **Enabled** plays an audible alert whenever enhanced privacy is lost when a call is in progress.
 - **Disabled** does not play any alerts.

Note—The phone always shows a text alert regardless of these settings.


Set Phone Line

- This setting allows you to change what number is displayed on your phone if you have more than one phone number (check with your

service provider to see if your phone supports more than one phone number.) For example, you may want to set the phone to use one number when home and one number when travelling on business.

Data/Fax Calls In

These settings tell the phone how to handle voice and data calls.

1. Select **Settings** → **Network** → **Data/Fax Calls In**.
2. Select an option by pressing  :
 - **Standard** allows only voice calls.
 - **Fax, next call** sets the phone to fax mode for the next incoming call or the next ten minutes.
 - **Data, next call** sets the phone to data mode for the next incoming call or the next ten minutes.
 - **Fax, until off** forces the phone into fax mode until the phone is turned off.

- **Data, until off** forces the phone into data mode until the phone is turned off.

Extras

These settings allow you to program various options, such as 1-Touch Dialing, Auto-Save and additional prompts.

1-Touch Dialing

- For more information on 1-Touch Dialing, refer to “Speed dial and 1-Touch Dial” on page 12.

Auto-Save

- For information on Auto-Save, refer to “To save a phone number automatically” on page 11.

Browser Prompt

You will receive an additional prompt whenever you attempt to launch the browser.

1. Select **Settings** → **Extras** → **Browser Prompt**.

2. To leave settings unchanged, select **Disabled**. For an additional prompt, select **Enabled**.

Text Entry Style

You may set the text entry style you wish to use when entering text messages.


1. Select **Settings** → **Extras** → **Text Entry Style**.
2. For basic (default) text entry, select **Basic**. For advanced text entry, select **Advanced**. For more information on text entry styles, see “To enter letters, numbers and punctuation marks” on page 17.

Messaging

To change your voicemail number

1. Select **Settings** → **Messaging** → **Voicemail Number** → **Edit**.
2. Enter a new voicemail speed dial number and press  to save.

To erase messages

1. Select **Settings** → **Messaging** → **Erase Messages**.
2. Select an option by pressing  :
 - Entire In-box
 - Read In-box
 - Read Net Alerts
 - Read Pages
 - Read Messages
 - Entire Out-Box
 - Sent Out-Box

Note—Selecting Entire In-box or Read In-box deletes text messages only. It does not affect voice mail notifications.

To delete messages automatically


Use this setting to have old, read messages automatically deleted from the phone if space is needed to store new messages. (This setting does not affect voice mail notifications.)

1. Select **Settings** → **Messaging** → **Auto-Erase Text**.
2. Select an option by pressing  :

- **Read In-box msg**
- **Never**
- **Only if Urgent:** messages are deleted only if the messages were labeled “urgent” or “priority.”

Alerts

For voice mail, pages, text messages, and Internet browser alerts, choose the alert type as follows:

1. Select **Settings** → **Messaging**, then the type of alert (Voicemail, Page, Message, or Browser).
2. Select an option by pressing  :
 - **Disabled**
 - **Vibrate once**
 - **Vibe & remind**
 - **Low beep once**
 - **Low beeps**
 - **Loud beep once**
 - **Loud beeps**


Signatures

You may create up to two signatures for insertion into outgoing messages.

1. Select **Settings** → **Messaging** → **Signatures** → **New**.
2. Enter signature text and press  to save.

Email Domain

If your phone has the ability to send messages as email, you may enter up to two domain names to be saved. When sending an email to a saved domain, you only need to enter the beginning of an email address, and the domain name is automatically added when you send the message.

1. Select **Settings** → **Messaging** → **Email Domain** → **New**.
2. Enter the domain name and press  to save.

Accessories

Your phone comes with several features for additional convenience.

Power Backlighting

This allows backlighting to remain on when external power, such as an AC Adapter, is used with the phone.

1. Select **Settings** → **Accessories** → **Power Backlighting**.
2. Select **Normal** to keep the default setting, or **Always on** to keep backlighting on.


Headset Ringing

When a headset is attached to the phone, you may choose to have alert sounds come out of either the phone or the headset.

1. Select **Settings** → **Accessories** → **Headset Ringing**.
2. Select **Out of phone** to have the alerts come out of the phone, or **Out of headset** to have alerts come out of the headset.

Car Kit Power

When you are using car power to power the phone, you can tell the phone how long to leave the phone on once the car ignition is turned off.

1. Select **Settings** → **Accessories** → **Car Kit Power**.
2. Select an option by pressing  :
 - **30 s, phone on** allows the phone to receive power from the car for 30 seconds after the ignition is turned off, and also leaves the phone on until you turn it off.
 - **30 s, phone off** allows the phone to receive power from the car for 30 seconds after the ignition is turned off, and also turns the phone off after 30 seconds.
 - **30 m, phone on** allows the phone to receive power from the car for 30 minutes after the ignition is turned off, and also leaves the phone on until you turn it off.

- **30 m, phone off** allows the phone to receive power from the car for 30 minutes after the ignition is turned off, and also turns the phone off after 30 minutes.
- **3 h, phone on** allows the phone to receive power from the car for 3 hours after the ignition is turned off, and also leaves the phone on until you turn it off.
- **3 h, phone off** allows the phone to receive power from the car for 3 hours after the ignition is turned off, and also turns the phone off after 3 hours.

Car Auto-Answer

If your phone is attached to a Hands-Free Car Kit (sold separately), you may set it to answer an incoming call after 5 seconds.

- Select **Settings** → **Accessories** → **Car Auto-Answer** → **After 5 seconds**.

DRAFT

6 Tools

The QCP 2008 and QCP 2035 phones offer a range of helpful tools, including:

- Web Browser
- Alarm Clock
- Calculator
- Tip Calculator
- Bust Out game
- Stopwatch
- Countdown Timer

NOTE—Some features in this section have not been implemented, tested or validated.

Web Browser

This section includes information on how to use your phone's web browser. You can use your phone to browse the Internet if you have obtained phone Internet services from your service provider and if over-the-air Internet access is available in your area.

The QCP 2008 and QCP 2035 phones can support Internet messages called Net Alerts.

To learn more about the features of your web browser, contact your service provider. When you sign up for Internet service, they may provide access to a personal configuration web page. This page allows you to edit some phone browser settings from a desktop or laptop computer. For example, you could format the home page on your web browser, set up some applications for easy access, and assign bookmarks to favorite pages.

To start the browser

1. Select **Tools** → **Web Browser**.

To exit the browser


- Press .

To make or receive calls from the browser

- Press .

Note—You cannot receive incoming calls while a data call is in progress. Answering an incoming call will end your browser session.

To bypass an incoming call

- If you are in the browser and do not wish to answer an incoming call, press . This will silence the ringer. When you return to idle standby mode, a missed call alert will be displayed.

Browser options

The main browser window has several options:

- **Home** returns you to the main browser window, or home page.
- **Mark Site** bookmarks the site location.
- **Options** contains several items:
 - **Bookmarks**


- **Goto New URL**
- **Show URL**
- **Phone.com**
- **Encryption**
- **Restart**

 
- **Help** displays online help.

Indicators and alerts

Audible and visual alerts may be displayed while using the browser.


Indicators

- When you are in a secured browser session, the  will be displayed.
- Links are identified with an underline and an arrow, as follows:



- If there are several items to be selected, the items are numbered and the chosen item shows an arrow

next to it. Press  up or down to scroll through the list.



- If information is available above or below the displayed text, a scroll bar will be shown. Press  up or down to scroll through the list.

Net Alerts


If your service provider activated Internet services on your phone and you are in an area that provides over-the-air Internet access, you may receive Net Alerts. Net Alerts are Internet messages such as stock quote alerts, traffic updates, or email. They are different from pages and text messages because the information in Net Alerts is stored on the Web, not on your phone. For more information, see “Alerts” on page 31.

Alarm Clock


The Alarm Clock is used to set an alert for a specific time. (The alert occurs only if the phone is on.)


1. Select **Tools** → **Alarm Clock** → **Enable** → **Set**.
2. Enter numbers on the keypad to set the hour and minutes. (Press  to move from hours to minutes and to select a.m. or p.m.)
3. Press  twice to save the setting and exit.
4. When the alarm rings:
 - Select **Snooze** to silence the alarm for 15 minutes.
 - Select **Off** to turn off the alarm.

Calculator

The Calculator tool is used to complete basic mathematical equations. Use the keypad to enter numbers and  to select an operation.

1. Select **Tools** → **Calculator**.

 
2. Press  to select and insert characters to complete the following functions:


- = Inserts the **equals** character and performs the “equals” function.
Tip — Pressing  for a few seconds also performs the “equals” function.
- ÷ Inserts the **division** character after the last number entered.
- Inserts the **subtraction** character after the last number entered.
- + Inserts the **addition** character after the last number entered.
- X Inserts the **multiplication** character after the last number entered.
- .
- Inserts the **decimal** point character after the last number entered.
- C Clears all numbers entered and displays a zero.


MR Displays the value currently stored in memory.

M+ Adds the current digit to the value stored in memory.

MC Clears the value currently stored in memory.

 Changes the sign of the current number.




 Clears one function or one digit from the display and returns the calculator to digit enter mode. If held down, it clears all of the digits and operations and displays a zero.

 Exits the calculator and returns to standby mode.


Tip—Use the scroll bar if the equation is too large to fit on one screen.

Tip Calculator

1. Select **Tools** → **Tip Calculator**.

2. Enter the amount of your bill and press .
3. Select the amount you wish to include as a tip (15%, 18%, 20%, 10%, 5%, Other) and press .
4. Your total bill including tip is calculated and displayed.
 - Select **Done** if you are finished.
 - Select **Split** to divide the bill among guests. Enter the number of guests and press . The amount each guest owes is displayed.

Bust Out game


The goal of this game is to eliminate bricks arranged in levels. To do this, you send a moving ball upwards using  to scroll a paddle left or right along the bottom of the display.

The game is paused and exited if an incoming call alert is received, and can be returned to play once the incoming

call alert is ended. The game cannot be paused while the phone is off.

Stopwatch



The Stopwatch feature counts upwards to a hundredth of a second until you manually stop it.

1. Select **Tools** → **Stopwatch**.
2. Select **Start** to have the stopwatch begin counting.
3. Select **Stop** to quit counting.
4. Select **Reset** to set the counter back to zero and have the stopwatch begin counting again.
5. Press  when finished.

Countdown Timer

This feature counts down for a specified amount of time, down to the second. It beeps (using the volume set for alerts) when that amount of time has elapsed.

1. Select **Tools** → **Countdown Timer** → **Set**.

2. Scroll up or down using  to set the hours, minutes, and seconds. To move the cursor, press  to the right.
3. Select **Start** to begin the countdown. When the time has elapsed, the phone beeps repeatedly. The time 00:00:00 flashes on the screen. If you need to pause the countdown, select **Stop**.
4. When the alarm rings, select **Off** to silence the alarm.

7 Troubleshooting

What is my lock code?

The default lock code is usually either 0000 or the last four digits of your phone number. If you forget your lock code, call your service provider.



How do I lock and unlock the phone?

To lock your phone, select **Settings** → **Security** → **Lock Phone Use**. To lock your phone every time you turn it on, select **On power up**. To lock your phone immediately, select **Now**. To unlock the phone, select **Unlock** and enter your four-digit lock code.

My ringer is off. How do I turn it back on?

Select **Settings** → **Silence All** → **Normal** to return the ringer to normal.


How do I change the ringer volume?

Select **Settings** → **Sounds** → **Ringer Volume**. Press  up or down to change the volume, then press .


How do I change the ringer type?

Select **Settings** → **Sounds** → **Ringer Type**, then select a ringer.


How do I store phone numbers?

From idle standby mode, enter the phone number you want to save and press .


How do I change my banner?

Select **Settings** → **Display** → **My Banner**. Enter your changes and select **Save** by pressing .

How do I speed dial?

Enter the one- or two-digit speed dial number and press .

How do I set the time and date on the phone?

Select **Settings** → **Display** → **Time/Date Format**. Select a time/date format and press  .

How do I erase all recent calls?

Select **Settings** → **Security**. Enter your lock code, then select **Erase Recent Calls** → **Yes**.

What does the “D” on my phone mean?

Your phone is operating in CDMA digital mode.

What does the “R” on my phone mean?

Your phone is roaming outside of its home service area.

My phone displayed the message “Reading Info. Please wait ... “ when I turned it on. What does this mean?

Your phone is performing routine maintenance. This normally takes a few minutes.

How do I get accessories for my phone?

To shop online for phone accessories, visit our Accessory Store at www.kyocera-wireless.com/store, or order by phone at 800-211-1537 or 510-683-4004.

Where to find help

Your service provider

For questions about your phone and phone service, contact your service provider. Your service provider's customer support department can answer questions about your phone, phone bill, call coverage area, and specific features (such as call forwarding or voice mail) available to you.

Your phone documentation

If you have questions about the features of the phone, refer to this guide and other materials provided with your phone. To view or download the most current version of this user's guide, visit us at www.kyocera-wireless.com.

Kyocera technical support

If you have additional questions, contact the Kyocera Wireless Corp. Customer Care Center in any of these ways:

- Kyocera Wireless Corp. Web site:
www.kyocera-wireless.com
- U. S. and Canada: (800) 349-4478
- Other countries: (858) 882-1400
- Email: phone-help@kyocera-wireless.com

Before requesting support, please try to reproduce and isolate the problem.

When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider
- The actual error message or problem you are experiencing
- The steps you take to reproduce the problem
- The phone's electronic serial number (ESN) and part number (MCN). The ESN usually starts with a "B" and the MCN usually starts with a "61-."

DRAFT

8 Phone care and safety

Use the following guidelines to optimize the performance and life of your phone, antenna, and battery.

Road safety comes first

While driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle. Check the local laws and regulations on the use of wireless phones in vehicles. Always obey them, and exercise caution while driving.

The following guidelines are based on recommendations of the Cellular Telecommunications Industry Association (CTIA):

1. **Get to know your wireless phone and its features, such as speed dial and redial.** Carefully read your instruction manual and learn to take advantage of features most phones offer, including automatic redial and memory. Work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. **When available, use a hands-free device.** A number of hands-free wireless phone accessories are readily available. You can purchase accessories online at www.kyocera-wireless.com/store.
3. **Position your wireless phone within easy reach.** Make sure you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. **Suspend conversations during hazardous driving conditions or situations, and do not engage in stressful or emotional conversations.** Let the person with whom you are speaking know you are driving. Rain, sleet, snow, ice, and heavy traffic can be hazardous. As a driver, your first responsibility is to pay attention to the road.

Suspend conversations that have the potential to divert your attention from the road.

5. **Do not take notes or look up phone numbers while driving.** If you are reading or writing while driving a car, you are not watching where you are going. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. **Dial sensibly and assess the traffic.** If possible, pull to the side of the road before placing a call. Try to plan your calls before you begin your trip, or attempt to coincide your calls with times you may be stopped.
7. **Use your wireless phone to call for help.** Your wireless phone can be used to protect yourself and your companions in dangerous situations. Dial 911 or other local emergency numbers in case of a fire, traffic accident, road hazard or other emergency. Remember, it is a free call.
8. **Use your wireless phone to help others in emergencies.** If you see a traffic accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency numbers, as you would want others to do for you.
9. **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. You can use your wireless phone to lend a hand.

Air bags

If you have an air bag, DO NOT place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. Air bags inflate with great force. If equipment is carelessly placed or not

properly installed, you or your passengers risk serious injury.

Potentially unsafe areas

Posted facilities—Turn your phone off in any facility when posted notices require you to do so.

Aircraft—FCC regulations prohibit using your phone on a plane that is in the air. Turn your phone off before boarding aircraft.

Vehicles—RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer of the device to determine if it is adequately shielded from external RF energy. Your physician may be able to help you obtain this information.

Blasting areas—Turn off your phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres—Turn off your phone when you are in any area with a potentially explosive atmosphere. Obey all signs and instructions. Sparks in such areas could cause an explosion or fire, resulting in bodily injury or death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include:

- fueling areas such as gas stations
- below deck on boats
- transfer or storage facilities for fuel or chemicals
- vehicles using liquefied petroleum gas, such as propane or butane
- areas where the air contains chemicals or particles such as grain, dust, or metal powders
- any other area where you would normally be advised to turn off your vehicle engine

Use with care

Use only in normal position (to ear). Don't bend the antenna or touch it unnecessarily. Pull out the antenna

when on a call and push it in when the phone is not in use. Avoid dropping, hitting, bending, or sitting on the phone.

Keep phone dry

If the phone gets wet, turn the power off immediately and return it to the dealer for service.

Resetting the phone

If the screen seems frozen and the keypad does not respond to keypresses, return it to the dealer for service.

Qualified service

Changes or modifications not expressly approved by the party responsible for compliance could void the warranty and the user's authority to operate the equipment.

Accessories

Use only Kyocera-approved accessories with Kyocera phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if said accessories cause damage or a defect to the phone. To shop online for phone accessories, visit www.kyocera-wireless.com/store. To order by phone, call (800) 211-1537 (USA) or (510) 683-4004 (other countries).

FCC/IC Notice

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio frequency (RF) energy

Your telephone is a radio transmitter and receiver. When it is on, it receives and sends out RF energy. Your service provider's network controls the power of the RF signal. This power level can range from 0.006 to 0.6 watts.

In August 1996, the U.S. Federal Communications Commission (FCC) adopted RF exposure guidelines with

safety levels for hand-held wireless phones. These guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies in the following reports:

- **ANSI C95.1** (American National Standards Institute, 1992)
- **NCRP Report 86** (National Council on Radiation Protection and Measurements, 1986)
- **ICNIRP** (International Commission on Non-Ionizing Radiation Protection, 1996)


Your phone complies with the standards set by these reports and the FCC guidelines.

DRAFT



DRAFT


Glossary

1-Touch Dial	The ability to dial a phone number by pressing a single key corresponding to the memory location of the phone number.
4-way navigator key	A button on your QCP 2008 or QCP 2035 phone which allows you to navigate up, down, left or right depending on menu choices. This key also controls volume while on a call.
analog mode	One of two ways in which a phone communicates. The other is digital mode . Dual-mode phones can switch between the two modes.
Auto-Save	A feature which allows your phone to prompt you to save a phone number after you have dialed it three times.
Automatic Gain Control	A feature which allows the phone to automatically adjust the earpiece volume based on the amount of noise around you or on the other person's voice volume level.
bookmark	A Web file that lets you quickly connect to a site you have previously visited and marked (like a bookmark in a book).
CDMA	Code Division Multiple Access, a digital technology produced by QUALCOMM for use in the cellular telephone industry. CDMA digitally encodes the sound of voices and key beeps to ensure callers' privacy.
call forwarding	A programmable phone option that sends incoming calls to another number.

call waiting	A service-provider feature, which beeps if another call comes in while you are on the phone. You can usually switch back and forth between calls by pressing a key such as  .
cellular	Wireless phone service in the 800 MHz frequency range.
contacts directory	A tool within a phone which works like a set of phone index cards.
data cable	An electrical wire capable of transmitting information between two or more devices.
data port	A connector that connects devices, such as a computer, to a phone and allows phones to act as modems or faxes.
data port connector	A phone jack where you can connect devices such as a computer, for the use of your phone for non-voice communications.
digital mode	A state in which phones send voices and key beeps as digitally encoded signals instead of analog sounds. See CDMA and analog mode .
domain name	The address of a network connection, written as a sequence of words separated by dots, such as server.business.org
dual band	A phone which can operate in two frequency ranges, usually the 800 MHz band and the 1900 MHz band.
dual-mode	A phone which can operate in either CDMA digital or analog cellular service at 800 MHz, and can switch between digital mode and analog mode.

email	Electronic mail, a store-and-forward service for text and graphical messages from one computer to another. The information is stored for you until you log in to the system to receive the messages.
idle standby mode	The mode the phone is in when it is turned on, no numbers have been entered on the display, and no call is in progress.
Internet	The worldwide set of interconnected networks that share the same network address scheme and use the TCP/IP protocol.
hard pause	A delay which is programmed into a stored number. The phone does not continue dialing until you press a specific key.
key beep volume	The level of noise that you get when you press a key on the phone.
keyguard	A feature which can be turned on when no call is in progress to protect the phone from accidental keypresses.
lock code	A four-digit sequence that lets you restrict access to certain phone numbers or all phone numbers.
memory location	One of 99 reserved spaces for data. Each memory location can hold a phone number of up to 50 digits and associated text, such as a name of up to 50 characters.
menu item	A command which is associated with a certain menu on the phone.
missed call alert	A display indicator that tells you when you didn't answer an incoming call.

NAM	Number assignment module, which consists of a phone number and network information that your service provider programs into your phone. If available, this allows you to have two phone numbers that are activated in different service areas, thus avoiding roaming fees.
OTASP	Over the air service provisioning/programming, which allows you to program a phone over the air.
power save mode	When you haven't used your phone for a certain amount of time, the phone goes into a lower-energy-consumption state, and stays here until a call comes in or you press a key.
power off	To turn off the phone by pressing  . When you turn off the phone, it is unable to send or receive calls. See idle standby mode .
power on	To turn on the phone by pressing  . When you turn on the phone, it is able to send and receive calls.
recent calls list	The last ten unique incoming or outgoing calls, when the phone number is available.
roam alert	A display icon that tells you that you are moving out of your home service area, and phone prices, feature availability, and service may change.
roaming	Using telephone services outside of the area covered by your home service provider.
service area	An area in which a service provider's terms of use apply uniformly.

service provider	A company which provides certain phone services, such as basic phone service, long distance, call waiting, three-way calling and so on. Phones may have the ability to perform these functions, but they cannot do so unless the infrastructure is available and you have opted to pay for the service(s).
signal strength	The degree of radio frequency energy available to the phone. Weather and distance both affect signal strength. If signal strength is weak, call quality may decrease or the call may be disconnected. An icon on the phone displays the signal strength.
Silence All mode	A state in which all phone sounds are silenced, including ringer and alerts. When the phone is in Silence All mode, you may still receive vibration alerts or have the backlight flash.
speed dial	The process of quickly dialing a stored phone number by entering the memory location and pressing  .
Smart Sound	A feature which allows the phone to automatically adjust the earpiece volume based on the amount of noise around you or on the other person's voice volume level.
soft options	Items which can be selected from the phone's menu.
standby time	The amount of time that the phone can maintain power when it is on and in idle standby mode.
talk time	The amount of time that you can talk on a wireless phone when the battery is fully charged.

three-way calling	A service-provider feature which allows phone calls between three people instead of two.
trimode	A phone which can operate in CDMA digital service at 800 and 1900 MHz, and analog cellular service at 800 MHz.
URL	Universal Resource Locator, the address of an Internet location. A URL typically uses the form http://www.locationname.com
web browser	A tool which allows you to browse the Internet.
wireless phone	A fixed or portable phone which is not connected to a power infrastructure by physical cable.

DRAFT

DRAFT

Index

Numerics

1-Touch Dial 12, 13

A

alarm clock 5, 37

answering calls 3

Auto-Save 11

B

battery

care and safety 7

charge icon 5

improving performance 7

Bell icon 5

C

calculator 37

calls

answering 3

ending 3

making 3

characters

French 18

international 18

Portuguese 18

Spanish 18

Clear key 1

contact

deleting 15

editing 14

Contacts book

calling from 13

countdown timer 39

D

data/fax setup 29

dialing

from Contacts book 17

from Recent Calls list 14

E

End/Power key 1

ending calls 3

H

hanging up 3

hard pause 20

I

Internet browser 35

K

keypad

locking 4

L

languages

- entering special characters 18
- letters
 - entering special characters 18
 - international characters 18
 - switching cases 18
- locking
 - keypad 4
 - phone 25
- M**
- making calls 3
- messages
 - auto-delete 30
- N**
- Navigator key 1
- numbers, entering 18
- O**
- on call icon 5
- P**
- performance
 - battery 7
- phone number
 - finding your own 3
 - saving as contact 11
 - saving automatically 11
- powering off the phone 3
- powering on the phone 3

- power-save mode 7
- Q**
- QCP 2008 3
- QCP 2035 3
- R**
- radio frequency, *see* RF energy
- Recent Calls list
 - description of 14
 - dialing from 14
 - viewing 14
- redial, last number called 13
- resetting the phone 46
- RF energy 46
 - exposure 46
- S**
- safety
 - RF energy 46
 - road 45
- saving a phone number 9
- screen
 - icons 5
- searching
 - by card category 16
 - by name 16
 - by speed dial location 16
- Select key 1

Shift key 1

silence

- alerts 4

- ringer 4

Silence All Mode 23

Smart Sound (see also volume,
adjusting automatically) 4

Sounds 24

Space key 1

speed dial 12

standby time

- battery charge icon 5

stopwatch 39

T

talk time

- battery charge icon 5

timed pause 20

timer

- countdown timer 39

- stopwatch 39

turning off the phone 3

turning on the phone 3

U

unlocking

- phone 25

V

voice mail

- calling 13

- setting speed dial number for 13

volume

- adjusting automatically 4

- automatic gain control (AGC) 4

- setting 4

- Smart Sound 4

DRAFT



10300 Campus Point Drive, San Diego, California 92121-1714 USA

Visit us at: www.kyocera-wireless.com

To purchase accessories, visit: www.kyocera-wireless.com/store

80-B6426-1, Rev. -



English