

Model: SK-S1

Shenzhen Aukey E Business Co., Ltd.

www.aukey.com | support@aukey.com

No.102, Building P09, Electronics Trade Center



Huanan City, Pinghu Town, Longgang District

Shenzhen, Guangdong, 518111, CN

CE

RoHS

Made in China



AUKEY

User Manual

Bluetooth Speaker

Contents

English

01~04

Deutsch

05~08

Français

09~12

Español

13~16

Italiano

17~20

日本語

21~24

Thank you for purchasing the AUKEY SK-S1 Wireless Portable Speaker. Please read this user manual carefully and keep it in a safe place for future reference. If you need any assistance, please contact our support team with your product model number and Amazon order number.

Package Contents

Wireless Portable Speaker

3.5mm Audio Cable

Warranty Card

Micro-USB Cable

User Manual

Product Diagram

1. Call Button

2. Volume Down


3. Volume Up

4. Previous Tracks

5. Next Track

6. Multi-Function Button


7. LED Indicator

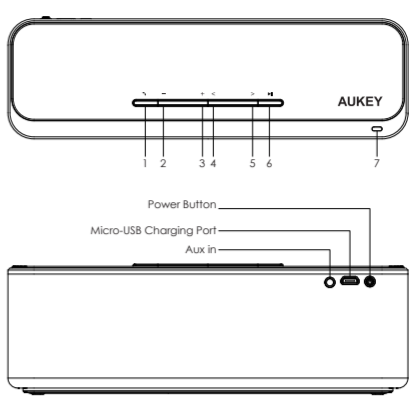

Power Button

Micro-USB Charging Port


Aux In



- 01 -

Charging

Please fully charge this speaker before first use. Connect it to a USB power source with the included Micro-USB cable to charge.

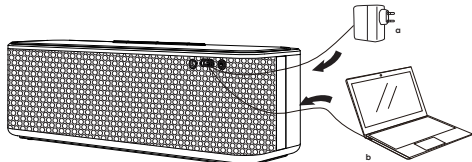

Power On / Off

To power on, press and hold the Power Button for 2 seconds. You will hear a voice prompt and the LED indicator will turn blue.

To power off, press and hold the Power Button for 2 seconds. You will hear a voice prompt and the LED indicator will turn off.

Paring

1. When you turn on the speaker, the speaker will automatically enter pairing mode and the LED indicator starts to flash blue rapidly.

2. Activate the pairing function on your phone or other compatible devices and select "AUKEY SK-S1".

3. If a code or pin is required for pairing, please enter "0000".

4. When successfully paired, you will hear a voice prompt and the LED indicator will stay blue.

Notes

- the speaker will automatically shut down after 10 minutes in pairing mode if no devices are paired
- if your paired device is switched off or disconnected, the speaker will automatically shut down after 10 minutes
- if the speaker exceeds the operating range, it will disconnect and go into standby mode. The connection will be reestablished once you reenter wireless range within 10 minutes. The speaker will automatically reconnect to the last successfully paired device. To connect to other devices, please repeat the previous "Pairing" section

- 02 -

Playing Audio via Auxiliary (AUX)

Connect SK-S1 to your PC or laptop using the included 3.5mm audio cable. Press Power Button to turn on and the LED indicator will turn green.

Notes

- The wireless connection on your speaker will be disconnected when an audio cable is plugged into the Aux port
- When playing audio using the Aux connector, control buttons may be accessed from connected device only
- For some computers, you may need to access the audio control panel to manually set the speaker as the default audio device

Functions	Instructions
Cancel pairing	When connected, press and hold the Multi-Function Button for 2 seconds
Answer / End a call	Short press the Call Button once
Reject an incoming call	Press and hold the Call Button for 2 seconds
Redial last number	Press and hold the Call Button for 2 seconds
Adjust volume	Short press the Volume Up / Down once
Next Track	Short press the Next Track once
Previous Track	Short press the Previous Track once
Pause / Resume	Short press the Multi-Function Button once

LED Indicator	Status
Rapidly blinking blue	Pairing mode
Blue on	Connected
Rapidly blinking red	Low battery
Red on	Charging
Red off	Fully charged

- 03 -

Specifications

Model Number	SK-S1
Technology	V4.0, CSR8635, A2DP, AVRCP, HSP, HFP
Power Input	DC 3V
Speaker Output Power	2 × 8W
Frequency	160Hz-20KHz
S/N	≥80dB
Charging Time	~4 hours
Play Time	~8 hours
Talk Time	Up to 30 hours
Standby Time	Up to 250 hours
Operating Range	Up to 10m / 33ft
Battery Type	Li-Polymer (7.4V 2000mAh)
Working Temperature	32°F ~ 104°F / 0°C ~ 40°C
Dimensions	220 × 60 × 44mm / 7.87" × 2.36" × 1.73"
Weight	675g / 23.8oz

Product Care

- Keep away from liquids, extreme heat, and strong magnetic fields.

Warranty & Customer Support

For questions, support, or warranty claims, contact us at the address below that corresponds with your region. Please include your Amazon order number and product model number.

Amazon US orders:

support@aukey.com

Amazon EU orders:

support.eu@aukey.com

Amazon CA orders:

support.ca@aukey.com

Amazon JP orders:

support.jp@aukey.com

*Please note, AUKEY can only provide after sales service for products purchased directly from AUKEY. If you have purchased from a different seller, please contact them directly for service or warranty issues.

- 04 -

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This modular complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- 05 -