X11	无线扬声器 -X11	无线扬声器-X11	无线扬声器-X11	无线扬声器-X1
				便携式无线音箱。
无线扬声器说明 硬携式无线音箱	技术规格: 无线标准: 5.2 传输距离: 10米 输出功率: 20W 播放时间: 2~6/\Bf(播放音量大小而定) 频率效应: 80Hz~10KHZ 频声数: 45mm*2 40 10W 输入电源: 5V==1A 最大电流消耗: 1A 电池类型: 可充电锂离子电池 3.7V 2400mAh 音频信号输入接口: 标准Φ3.5mm耳机插孔(立体声) 特 1. 无线连接; 2. 记忆功能,断点续播; 3. 支持U盘/TF卡/AUX播放模式; 4. 内置理离子电池; 5. 支持MP3/WAV音乐格式解码; 6. 使用高保真的扬声器,发出声音更自然和细腻; 7. 1+1设备串连功能; 8. 6级防水。	 中國國家 (1990年) 中國國家 (1990年)	使用说明: 1.无线配对 1.1.使用无线配对前,首先打开音频电源,它已经是默认的无线模式。 1.2.打开无线设备,搜索X11,连接配对,连接成功后,开始播放音乐体验。 2.适用于各种手机配件无线技术,无线适配器,无线播放器。 3.语音提示 3.语音提示 3.1.开/关机有语音提示音。 3.2.低电语音提示3次,155后关机。 3.3.按键到最大音量有语音提示,最小音量无语音提示。 4.模式切换 4.1.开机默认进入无线模式,模式切换顺序: 无线模式.TF卡模式.USB模式.AUX模式 4.2模式:后插优先。 5.LED灯 无线搜索状态:蓝灯不闪,无线配对状态:彩灯变化。 播放状态:彩灯慢闪约1.5秒/次; 开机状态:蓝灯不闪提示,充电状态红灯常亮,满电红灯灭。	 6.音量 开机默认音箱70%音量。 7.充电使用: 本机内置过充保护电路,可长(全充电。每个电池的播放时间 8.无工作状态,15分钟后自动关 故障排除: 1. 自动关机:电池电量不足时结 2. 无法播放乐:音乐文件存储距移动设备的根目录下。 3. 连接电脑无声:电脑界面连括 4. 按键无反应或功能错乱:关机

X11	Wireless Speaker-X11 Wireless Speaker १	Wireless Speaker -X11 Wireless Speaker ९	Wireless Speaker -X11 Wireless Speaker 🕅	Wireless Speak
Wireless Speaker Instructions Portable Wireless Speaker	Technical Specifications: Wireless standard: 5.2 Transmission distance: 10 meters Output power: 20W Play time: 2-6H Frequency effect: 80Hz ~ 10KHz Speaker: 45mm*2,4Ω 10W Input Power: 5V === 1A Maximum current consum ption: 1A Battery type: 18650 Li-ion 3.7V 2400mAh Audio signalinput interface: standard Φ3.5mm headphonejack(stereo) Features: 1.Wireless connection; 2.Memory function; 3.Support U disk/ TE card/AUX play mode; 4.Built-in lithium battery; 5.Support MP3/WAVmusic format decoding; 6.Use high-fidelity speakers, make the sound more natural and delicate; 7.1+1 serial function; 8.Water resistance IPX6.	 by by c c<td> Directions for use: 1. Device to connect 1.1 Turn on the device to default wireless mode. 1.2 Turn on wireless device, search model X11 and connect,play music after connection successfully. 2. Suitable for all kinds of mobile phones equipped with wireless. technology, wireless adapter, wireless players. 3. Voice prompt 3.1. there is a voice prompt when turn on/off. 3.2. Low-power voice prompt 3 times, shutdown after 15S. 3.3. there is voice prompt when the button to the maximum volume, no voice prompt at the minimum volume. 4. Mode switching 4.1. enter into wireless by default when starting-up, switching sequence is as follows: wireless mode -TF card mode -USB mode - AUX mode. 4.2. mode: post-insertion priority. 5. LED Lights Wireless search status: blue light does not flash, wireless pairing status: color light changes. Playback status : Color light blinks 1 time every 1.5 sec. Power on status: Blue light does not flash, red light is always on when charging, red light is off when fully charged. </td><td> 6.volume the default volume of speaker is 7. Charging to use The machine built overcharge p computer orcharger for a long ti Every battery playback time will different size of the volume. 8. No working status, automatic s Troubleshooting: 1. Auto power off: the battery pr activated when the battery is low hours. 2.Can not play music: the music be recognized, save file and storemovable device. 3. Connect the computer no sour connection error, please select 14. No function or function keys of the set of the</td>	 Directions for use: 1. Device to connect 1.1 Turn on the device to default wireless mode. 1.2 Turn on wireless device, search model X11 and connect,play music after connection successfully. 2. Suitable for all kinds of mobile phones equipped with wireless. technology, wireless adapter, wireless players. 3. Voice prompt 3.1. there is a voice prompt when turn on/off. 3.2. Low-power voice prompt 3 times, shutdown after 15S. 3.3. there is voice prompt when the button to the maximum volume, no voice prompt at the minimum volume. 4. Mode switching 4.1. enter into wireless by default when starting-up, switching sequence is as follows: wireless mode -TF card mode -USB mode - AUX mode. 4.2. mode: post-insertion priority. 5. LED Lights Wireless search status: blue light does not flash, wireless pairing status: color light changes. Playback status : Color light blinks 1 time every 1.5 sec. Power on status: Blue light does not flash, red light is always on when charging, red light is off when fully charged. 	 6.volume the default volume of speaker is 7. Charging to use The machine built overcharge p computer orcharger for a long ti Every battery playback time will different size of the volume. 8. No working status, automatic s Troubleshooting: 1. Auto power off: the battery pr activated when the battery is low hours. 2.Can not play music: the music be recognized, save file and storemovable device. 3. Connect the computer no sour connection error, please select 14. No function or function keys of the set of the

<u>(11</u>	无线扬声器-X11 便携式无线音箱《
	产品保修
长时间连接电脑或充电器,约四小时即可完 间会因使用不同大小的音量而有所不同。	用户名:
关机。	联系电话:
时会自动开启电池保护,请充电4小时后使用。 诸路径不能被播放器识别,音乐文件请存储在可	购买日期:
车接错误,请选择正确的音频输出端口。 关机后重试。	产品编号:
	维护故障:
	注意:产品保修期为6个月

eaker-X11 r ∛	Wireless Speaker -X11 Wireless Speaker १
ıker is 70% when starting-up.	Product warranty
rge protection circuit,canconnected to a ong time, about four hours to fully charge. e will be different due to the use of	Username:
e. natic shutdown after 15 minutes.	Contact number:
ery protection is automatically is low, please use it after charging for 4	Date of purchase:
music file storage.path cannot. Id store in the root directory of the p sound: computer interface. elect the correct audio output port. (eys wrong; try again after shutcown.	Product number:
	Maintenance failure:
	Noto: The product warranty is 6 months

Note: The product warranty is 6 months

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.