

亚马讯3002FCC说明书尺寸：258X120MM，双面3折4色。 折好尺寸8.6X12CM

背面

FCC Compliance Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Keys Function



Music button

Press this button to play the built-in music when the memory card is not inserted, contains 8 pieces of music. When the memory card is inserted into the microphone, press this button to play the music stored on the card.
Note: this button doesn't work in Bluetooth state.



Rhythms button

Press this button to play the built-in rhythms without memory card, contains 5 Rhythms.
Note: When the memory card is inserted and does not enter the Bluetooth mode, press this button to still play the built-in rhythm. When enter the Bluetooth mode, this button doesn't work.



Microphone switch/Voice changer button

Press this button to turn on the microphone, then press again to change the sound effect, including 5 different sound effects. Long press to turn off the microphone.



Switch

Long press to turn on the power, long press again to turn off the power.



Volume+/Previous

Short press to play the previous song, long press to increase the volume.



Volume-/Next

Short press to play the next song, long press to decrease the volume.



Pause/Play button

When playing a song, press to pause playing, and then press to continue playing.



Record button

Press this button to start recording, it can record for up to 15s, it will play back automatically after the record is done. This button is invalid in Bluetooth mode!



Mode conversion button

Press this button to switch the built-in mode to Bluetooth mode or memory card mode. The default is built-in mode.



Wireless mode

When the memory card is not inserted, press the key to enter Wireless mode, after connecting the mobile phone, you can play the mobile phone content without pressing other buttons to play, and the mobile phone controls the playback. Press again to exit Wireless mode.



Memory card mode

When the memory card is inserted, press the key to enter Memory card mode, press the key to play the music stored on the card.

Short press to play the previous song, and short press to play the next song. When playing, press the key to stop playing, and press it again to continue playing.

正面

WIRELESS KARAOKE TOY

USE MANUAL

Instructions must be retained since it contains important information.

- Musical development
- Optical interactive communication ability
- EQ cultivation
- Auditory development



NO.3002

Design by our hearts, bring your baby joy and happiness

Function introduction

- 8 Pieces of Music
- 5 Rhythms
- 5 Voices for changing
- Recording and play back function
- Wireless
- External memory card
- Volume +/-
- Built-in lithium battery

 
Two types



Parts drawing



Explanation of charging function



Charging port



Charging cable

Low power will make the sound of the product small, need to connect the charging cable to the charging hole to charge. Note: it cannot play normally during charging. It can be played normally only after the charging cable is removed from the power supply.



3.7V 1200mAh lithium battery is used, red light shines through the small round hole when charging, and the light goes out when full (charging time is about 7-10 minutes).

- Replacement of a battery with an incorrect type that can defeat a safeguard (for example in the case of some lithium battery types);
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- And a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Warm reminder

If no operation is performed for more than 10 minutes in the power-on state, a hibernation announcement will be played to enter the intelligent power-saving mode. Press any button to wake up.