

USER MANUAL




1 Main parameters

Item No.: E516-003

Material: plastic and electronic components


Batteries: Car battery: 4 pcs of 1.5V AA batteries.

Remote controller battery: 2 pcs of 1.5V AA batteries.

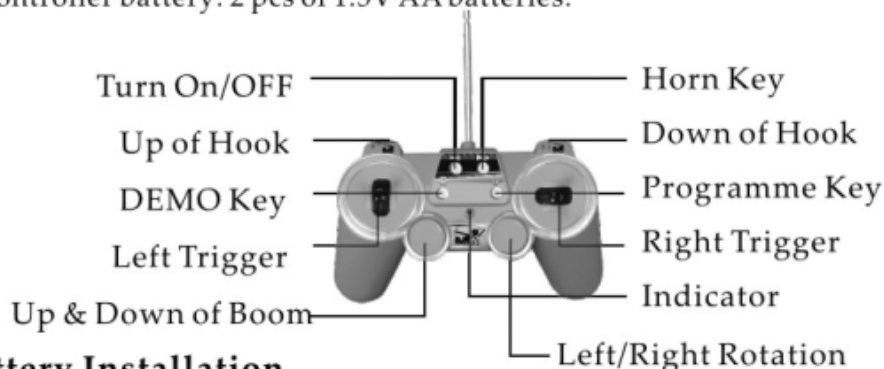

2 Battery Installation

1. Open the cover of battery case located in the back of controller, inserts 2 pcs of 1.5V AA batteries into the battery case, and then screw the cover (Fig 2A).
2. Please screw out the cover at the back of car by screwdriver, open the cover as the arrow showed, insert 4pcs of 1.5V AA batteries, then screw the cover (Fig 2B).

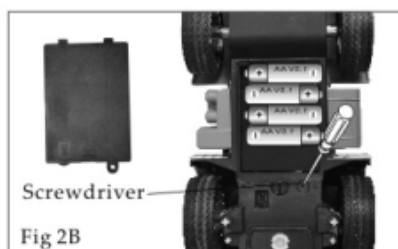

3 Basic Operation & Functions

Please confirm that the batteries of remote controller and car have been installed as the correct polarity, and the switches are "ON" and at the same channel (Fig 3A)

1. Turn ON/OFF

- Press the ON/OFF key, there will be a start-up sound; to press the key again after starting, the car would be turn off with a sound of DI (Fig 3B)

2. Horn Key

- To press the Horn Key on remote controller after starting the car, the car would emit a simulated sound.

3. Forward/Backward

- To push the Left Handle forward/backward, the car would go forward/backward; when forward, the lights on front and back would light on; when backward, the lights on front and back of the car flash on light would turn off when in mute condition (Fig 3C)

4. Turn Left Right

- To push the Left Handle forward/backward, Right Handle turns left/right, the car would turn left/right. The lights on left would flash when turn left, the lights on right would flash when turn right (Fig 3D).



5. 660 degree Rotation of Operation Station

- After starting the car, to press the Left/Right Rotation, the Operation station would do a motion of left/right rotation with sound. At the same, the alarm light on the top of the cab would flash and the lights of front and back would light on(Fig 3E).

6.Up&Down, In&Out of Crane Arm

- After starting the car, to press the key of Up&Down of Crane Arm the arm of the crane would raise up (come down) slowly; at the same time the second arm would hand over draw back slowly with a series of mechanical sound, flashing lights at the top of cab, lighting up of the front and back lights (Fig 3F)

7.Up&Down of Hook

- After starting the crane, press the Hook Up(Down) key, the hook of the crane would raise up (come down) slowly with a mechanical sound; at the same time, the light at the top of cab lights on and the lights on front and back flash(Fig 3F)
Maximum accepted weight of Hook is 130g)

These functions could be multiple used for simulating operation.

4 Advanced Functions

1.Mute Switch

- After starting the fire truck, to press the Horn key for a long time, the car could change to a mute condition. To press the Horn key again, it could be switched to the sound station.

2.DEMO Function

- To press the DEMO key, the car could operate a series of the functions automatically to exit this function through pressing any key

3. Programme Function

- To press the Programme Key when starting, after the indicator turns red the car is in a state of Programme, you could do a series of motion as you like and these motions would be saved. To press the Programme Key again, the fire truck would automatically operate the motions

4.Auto OFF


- Without receiving any remote controlled signals after starting, the car would auto off in 50 seconds. When turn off, the car would with a DI sound, and all the functions are at a state of stand-by. It only could be operated after restarting.

5.Athletics Function

- There are three channels A/B/C in the remote controller and the fire truck, so more than two players could play together through choosing different channel.

5 Notice

- 1.Don't play the toy on the road, select a safe place for operating to avoid dangerous.
- 2.Plays the toy in water may cause short circuit damage Please use the dry cloth to clean the car.
- 3.If abnormal speed or reaction, it may be because of insufficient battery power, please charge the battery.
- 4.The batteries should be charged under adult supervision. Please use the batteries recommended.
- 5.Please install the battery in a correct polarity.
- 6.Do not mix new and old batteries together, short-circuited.
- 7.Please charge the battery before initial use.
- 8.Don't break the remote control antenna to prevent injury.
- 9.Please check the plug case and other units of charger regularly to make sure that it is not broken.Don't use again if you find abnormality of the charger.
- 10.Please do not connect the product to different performance power.

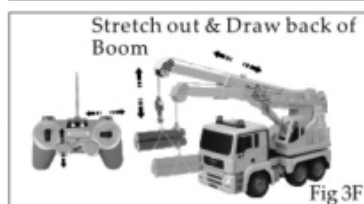

CHOKING HAZARD-small parts, not for children under 3 years.
Specifications colors and contents may vary from illustrations.

6 Caution

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.