

# Main Functions

## 1. Locate your item

If your missing item isn't nearby, the Find My App can still help you track it down using the Find My network — hundreds of millions of iPhone, iPad, and iMac devices around the world. Nearby devices securely send the location of your missing device to iCloud, then you can see where it is in the **Find My** App. It's all anonymous and encrypted to protect everyone's privacy.

## 2. Lost mode

When the device is disconnected with your iPhone(or others of parried Apple equipment) for more than a period of time and it cannot be connected through the **Find My** App, you can also select Lost Mode and tap Enable tab. Then enter and leave your message, contact number, etc. The person who finds it can get this information through the Finder App and contact you. Besides, when you is within the BLE connection region of the device, you will also be notified that the lost device is nearby. Then you can search for the device by function of Play Sound.

## 3. Play Sound

- Open the **Find My** App, tap the **Items** tab, then tap your item.
- Click **Play Sound**, when the item under the BLE connection region (generally straight forward about 20 meters) it will emit beep sound so you can find the item easily.



# Quick instructions

## 1. Turn on the device

- Insert the battery then the device will beep and turn on.

## 2. Pair the device

- Open the **Find My** App.
- Hold the device close to your iPhone, tap the **Items** tab, tap+ then **Add Other Item**.
- Select the device mark with **Sine Tag** then tap **Connect**.
- Type a name for your device, select an **Emoji** symbol.
- Tap **Agree** to acknowledge that this item will be linked to your Apple ID.
- Tap **Finish**.

## 3. Enable Lost Mode

- Open the **Find My** App, tap the **Items** tab, then tap your item.
- Under **Lost Mode**, tap **Enable**.
- Read the instructions, tap **Continue** and enter a phone number or email address.
- Confirm the information, customize the lost message, and tap **Activate** to complete the setup.

## 4. Remove the device

- Open the **Find My** App, tap the **Items** tab, then tap your item.
- Tap **Remove Item** and then tap **Remove** to complete the operation.

**Note:** After deleting the device, the device will emit beep sound. The device will not shut down, and it is in **pairing mode**. If there is no re-pairing within 10 minutes, the device will leave the pairing state, and the device and the App cannot be paired at this time. If you need to pair the device, you need to re-insert the battery. After the device emit one bee sound and enters the pairing state, it can be re-paired with the Ap

## Instructions for other functions

### 1. Power off

When removing the battery of device, the device will be powered off.

### 2. Device status confirmation

Make the bottom side of device upward and stay for 5 seconds then turn over the device make its topside upward and stay for 5 seconds. The device will emit beep, indicating that the device is working. If the device does not beep, it means the device is powered off and please confirm whether its battery voltage is sufficient to normal power supply.

### 3. The device enters the pairing state again

After deleting the device, the device will beep and not shut down for getting into **pairing mode**. If there is no re-pairing within 5 minutes, the device will leave the **pairing state**, and the device and the App cannot be paired at this time. If you need to pair the device, you need to re-install the battery of device then the device will beep. At this point, the device enters the pairing state and can be re-paired with the Find My App.

### 4. Factory Reset

Re-insert the battery 5 times in 30 seconds. Each time of re-insert the battery will emit one bee sound for indicating. After finish 5 times of battery re-insert, the device will emit a long and different beep sounds to indicate the factory reset is complete. After above, the device can now be paired under factory reset.

#### Note:

For new owner using, it's must that removing items from last owner. Factory reset will keeps some information to prevent original owner lost device.

# Instructions for device button

## **Note:**

Due to the potential risk of product damage during the disassembly process of the casing, the **button functionality** is reserved for use by maintenance personnel only, to assess whether the **motion sensor** is operating abnormally.

## **1. Device status confirmation**

Double-click the device button twice, the device will emit beep sound indicating that the device is working. If the device does not beep, it means the device is powered off. Please confirm whether the battery is sufficient to normal power supply. After re-setup the battery, please make sure that the device emits beep sound.

## **2. The device enters the pairing state again**

After deleting the device, the device will beep, the device will not shut down, and it is in **pairing mode**. If there is no re-pairing within 10 minutes, the device will leave the pairing state, and the device and the App cannot be paired at this time. If you need to pair the device, you need to click the device button **once**, and the device will beep. At this point, the device enters the pairing state and can be re-paired with the App.

## **3. Factory Reset**

First, double-click the device button the device will beep. Then long press the device button for eight seconds until the device beeps. Release the button to complete factory reset. The device can now be paired.

## **Note:**

For new owner using, it's must that removing items from last owner. Factory reset will keeps some information to prevent original owner lost device.

# FAQ:

## 1. When can the device be located?

When an item is separated from its owner for a period, it can be found by other Apple devices that are part of the Find My network and the owner can start to get the location of the device.

## 2. How to confirm whether the device has been turned on?

First, please turn the device **back up** for five seconds and then **face up** for five seconds. If the device beeps, it means the device is working. If the device does not emit beep sound, it means the device is turned off. Please reinstall the battery to power on the device.

## 3.How is the device designed to discourage unwanted tracking?

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

1. If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPad OS 14.5 or later.
2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved. These features were created specially to discourage people from trying to track you without your knowledge.

## 4.How is my privacy protected?

Only you can see where your item is. Your location data and history are never stored on the item itself. Devices that relay the location of your item also stay anonymous, and that location data is encrypted every step of the way. So not even Apple knows the location of your device or the identity of the device that helps find it.

## **5. How to replace the battery:**

- 1) Rotate the battery cover counter-clockwise to unlock and take off the upper cover of the battery compartment.
- 2) Remove the battery from battery compartment.
- 3) Install the new battery into the compartment as shown below, and making sure the positive pole upward. After hearing the power-up beep, rotate the battery cover clockwise to lock and fasten it.



## **6. What is the Find My network? And how does it work?**

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My App on your iPhone, iPad, iPod touch, Mac, or the Find Items App on Apple Watch. Simply pair your compatible product with the Apple Find My App to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple, can view its location.

# Regulatory Safety Information



## WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN

Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.

If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poison Information Centre for fast expert advice.

**警告：将电池放在儿童接触不到的地方** 由于化学灼伤和潜在的食道穿孔，吞咽可能会在短短 2 小时内导致严重伤害或死亡。

如果您怀疑您的孩子吞下了或插入了纽扣电池，请立即拨打救助电话以快速的获得专家建议。

## KEEP BATTERIES OUT OF REACH OF CHILDREN

- Keep in original package until ready to use
- Call a local poison control center for treatment information.  
Australia: 13 11 26 Canada: 1-800-268-9017(Ontario),  
1-800-567-8911(BC), 1-800-463-5060 (Quebec) US:  
800-498-8666. Verify suitable. emergency call numbers for your country.
- Do not use if the compartment is not secure.
- Dispose of used button batteries promptly and safely. Flat batteries can still be dangerous.
- Risk of fire and burns.
- Do not recharge, disassemble, heat (-20°C +70°C) or incinerate.

Rated Voltage: 3.0 Volt

額定電壓：3.0 伏

## Safety Statement

注意！

依据 低功率电波辐射性电机管理办法

第十二条 经型式认证合格之低功率射频电机，非经许可，公司、商号或使用者均不得擅自变更频率、加大功率或变更设计之特性及功能

## 第十四条

低功率射频电机之使用不得影响飞航安全及干扰合法通信，经发现有干扰现象时，应立即停用，并改善至无干扰时方得继续使用。

前项合法通信，指依电信法规定作业之无线电通信

低功率射频电机须忍受合法通信或工业、科学及医疗用电波辐射性电机设备之干扰。

## Article 12

Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.

## Article 14

The Application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication, if an interference is found, the service will be suspended until improvement is made and the interference no longer exists. The foregoing legal communication refers to the wireless telecommunication operated according to the telecommunications laws and regulations.

The low power frequency electric machinery should be able to tolerate the interference of the electric wave radiation electric machineries and equipment for legal communications or industrial and scientific Applications.

## 电池警告:

1.

此装置使用 CR2032 (锂锰电池)。

若未遵照下列准则，则装置内的锂离子电池寿命可能会缩短或有损坏装置、发生火灾、化学品灼伤、电解液泄漏及/或受伤的风险。

请勿拆解、整孔或损坏装置或电池。

请勿取出或尝试取出使用者不可自行更换的电池：

2.

请勿将电池暴露于火焰、爆炸或其他危险中。

请勿使用尖锐物品取出电池。

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

本设备符合 FCC 规则第 15 部分的规定。操作须满足以下两个条件:

- (1) 本设备不得造成有害干扰
- (2) 本设备必须接受任何接收到的干扰, 包括可能导致意外操作的干扰。

未经合规方明确批准的任何更改或修改都可能导致用户操作设备的权限无效。

#### 注意:

本设备经过测试, 符合 FCC 规则第 15 部分对 B 类数字设备的限制。这些限制旨在提供合理的保护, 防止住宅安装中的有害干扰。该设备会产生、使用并辐射射频能量, 如果不按照说明安装和使用, 可能会对无线电通信造成有害干扰。但是, 不能保证特定安装中不会发生干扰。

如果该设备确实对无线电或电视接收造成有害干扰, 可以通过关闭和打开设备来确定, 鼓励用户尝试通过以下一种或多种措施来纠正干扰:

- 重新调整或摆放接收天线。
- 增加设备和接收器之间的距离。
- 将设备连接到与接收器不同迴路的插座上
- 请咨询经销商或经验丰富的广播/电视技术人员寻求帮助

该设备已经过评估, 可满足一般射频暴露要求。

该设备可以在便携式暴露条件下使用, 不受限制。



# 产品主要功能

## 1、“查找”网络定位

当设备与手机(或其它完成配对的苹果装置)超出蓝牙距离，查找App仍然可以透过查找的网络功能帮你追踪你的设备，查找网络可以藉由全球数以万计的苹果装置帮你定位设备的所在位置，只要该设备附近有别的苹果装置，包含iphone, ipad, iMAC等苹果装置，您的查找App 中，即可收到設備的通知以及最新的位置。

## 2、丢失模式

如果设备与您的手机断开超过一段时间，在**查找App**中链接不上设备，也可以选择**丢失模式**。启用后，输入您的**留言**，**联系电话**等，捡到的人可以透过**查找App**得知这些信息，并与您联系。另外，当你的苹果装置在该设备的蓝牙传输范围内时，也会主动收到通知，遗失的设备就在附近，可以透过拨放声音来寻找该设备

## 3、播放声音

手机与设备在蓝牙范围内（一般是直視距離20米左右），在**查找App**中，点击，播放声音，设备会发出音乐，帮助 您快速找到附近的物品。

# 快速上手

## 1、设备开机

电池安装到设备后，设备响声后开机

## 2、绑定设备

- 打开 苹果 自带的“查找”App。
- 将设备靠近您的 iPhone，轻点“物品”标签，选择“添加新物品”，点击“其他支持的物品”。
- 带有Sine Tag字样的设备，轻点“连接”。
- 填写“自定义名称”以命名您的设备并选取一个表情符号。
- 同意将设备注册到您的 Apple ID。
- 轻点“完成”绑定成功。

## 3、启用“丢失模式”

- 打开苹果自带的“查找”App，点击屏幕底部的“物品”，然后点击物品的名称。
- 在“丢失模式”下方，点击“启用”。
- 按照屏幕指示操作，点击“继续”输入联系电话或者邮箱。
- 点击“下一步”核对信息后，请再次点击“启用”完成设置。

## 4、删除设备

- 打开苹果自带的“查找”App，点击屏幕底部的“物品”，然后点击物品的名称。
- 在列表的最下方找到“移除物品”，轻点“移除”完成操作。

说明：删除设备后，设备会发出提示音、设备不会关机，处于配对模式。如果5分钟之内，没有重新配对，设备就会离开配对状态，此时设备与App无法配对。如果需要配对设备，需要重新安装电池，设备响后，此时设备进入配对状态，可以跟App重新配对。

# 其它功能介绍

## 1、关机

设备在电池移除后，会进入关机状态。

## 2、设备状态确认

将设备先背面朝上五秒，再接着正面朝上五秒。设备响，说明设备在工作。如果设备不响，说明设备处于关机状态，请确认电池电压是否足够，是否正常供电。

## 3、设备重新进入配对状态

删除设备后，设备会发出提示音、但不会关机以便处于**配对模式**。如果5分钟，没有重新配对，设备就会离开**配对状态**，此时设备与App无法配对。如果需要再次进入配对状态，需要重新安装设备的電池，设备响后，此时设备再次进入**配对状态**，可以跟**查找App**重新配对

## 4. 恢复出厂设置

在30秒内，将装置的电池重新上电五次。每次上电都会发出一次哔声，第五次会听到较长的指示音，代表恢复出厂设置已完成，此时设备就可以在出厂模式下重新配对。

注意：

如果想要将设备转给另一个使用者使用，需先在Find My App中，移除设备，设备才可以跟新的账户配对

# 按键使用说明

注意:

因外壳的拆装过程容易造成损坏，按键仅开放给专业维修人员使用，用来确定运动传感器是否工作异常。

## 1、设备状态确认

双击设备按键两下，设备响，说明设备在工作。如果设备不响，说明设备处于关机状态。请确认电池电量是否足以正常供电，并重新安装，确认设备在电池重新安装后，会发出蜂鸣声。

## 2、设备重新进入配对状态

删除设备后，设备会发出提示音、设备不会关机，处于配对模式。如果10分钟，没有重新配对，设备就会离开配对状态，此时设备与App无法配对。如果需要配对设备，需要点击设备按键一次，设备响。此时设备进入配对状态，可以跟App重新配对。

## 3、恢复出厂设置

在设备开机后，双击设备按键，设备响，马上按住设备按键约 八秒，直到设备发出提示音，松开按钮，恢复出厂设置完成，此时设备可以进行重新配对。

注意:

如果想要将设备转给另一个使用者使用，需先在Find My App中，移除设备，设备才可以跟新的账户配对

# 常见问题

## 1、设备什么时候可以被别的苹果手机定位？

当设备与主人的苹果手机断开一段时间后，设备可以开始被别的苹果手机定位，主人就可以开始获得设备的位置。

## 2、如何确认设备是否已开机？

首先，请将设备先背面朝上五秒，再正面朝上5秒，设备响，说明设备在工作。如果设备不响，说明设备处于关机状态。请重新安装电池，开机。

## 3、如何防止设备被用于恶意跟踪？

当别人的设备混入您的随身物品时，并跟踪超过一段时间，您会通过以下两种方式被提醒：

- 1、如果您有iPhone, iPad, iMAC或者iPod touch等苹果设备，您会在苹果设备上获得提醒；此功能在iOS or iPadOS 14.5 及以后版本的苹果设备上有。
- 2、如果您没有苹果设备，如果别人的Sine Tag离开了自己的主人，并跟踪了您一段时间，当它移动时，它会发出音乐，以提醒您。当然，如果碰巧您身边的朋友正带着设备，或者您搭乘的地铁上很多人都有这个设备，也不必担心。因为只要设备没离开主人身边，就不会触发这样的提醒。

## 4、如何保护我的隐私？

您的设备在哪里，只有您自己能看到。您的位置数据和历史记录绝不会存储在苹果的服务器中。传递您设备位置数据的设备也始终保持匿名，而且位置数据在查找的每一步都有加密保护。因此，苹果都不知道您的设备的位置，以及帮忙找到它的设备是何身份。

## 5、如何给设备更换电池？

- 1) 将电池盖**逆时钟**方向旋转，取下电池仓的上盖；
- 2) 将电池取下。
- 3) 将新电池装到电池仓内(如下图)，注意正极(字体)朝上，听到上电的蜂鸣声后，将电池盖**顺时钟**旋转扣上。



## 6、“查找”网络是什么？如何工作？

Apple Find My 网络提供了一种简单、安全的方式，可以使用 iPhone、iPad、iPod touch、Mac 上的 Find My 应用程序 或 Apple Watch 上的 **Find Items** 应用程序在地图上查找兼容的个人物品。

只需将您的 兼容产品 与 Apple **Find My** App 配对，即可与您的 Apple 设备一起查看。如果您的物品丢失了，您可以将其置于**丢失模式**以向可能找到它的任何人显示消息和联系信息。Find My 网络是加密和匿名的，因此没有其他人，包含苹果官方都无法查看其位置。