9

LCLFLIP2

E T&TA

Let's get started





AT&T Eco Rating 2.0 only applies to TCL GFLIP2. For limited factors evaluated visit att.com/EcoSpace. Wireless Emergency Alerts is a registered Trademark and Service Mark of CTIA.

TCL is a registered trademark of TCL Technology Group Corporation. LTE is a trademark of ETSI. 4G LTE not available everywhere. Contains lithium-ion battery recycle or dispose of properly. © 2021 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks are the property of their respective owners.

POF Printed in USA

CJB69H0AQAAA

What else is in the box?

- [device name]
- USB-C data cable
- Wall charger
- Pre-installed SIM card
- Lithium-ion battery
- Safety & warranty information

Get Connected

Connect to Wi-Fi[®]

- 2. Press **Left Menu** 🕞 to turn on or off.
- Navigate down ⊕ to Available Networks
 > press OK ⊕ to select your preferred network.
- Navigate down ⊕ to enter a password, if required > press OK .

Use Bluetooth®

- From the Home screen, press OK (20) > Settings (20) > Wireless & network > Bluetooth.
- 2. Press Left Menu 🕞 to turn on or off.
- 3. Navigate down ⊕ to the name of the device to pair > press OK ⊛.

Setting Up Email

From the Home screen, press **OK** 🛞 > Tools 🛅 > E-Mail 💽 .

An email wizard will guide you to set up an email account, press **Right Menu** \bigcirc to continue.

- 1. Enter your email address of the account you want to setup.
- 2. Press **Right Menu** (a) to access **Next**, enter the password and press **Right Menu** (b).
- 3. You may be prompted to manually setup your email account.

Send E-Mail

Press **Left Menu** () to compose a new email from the Inbox screen.

- 2. Type the subject and the content of the message.
- 3. If necessary, press **Right Menu** → to add **Cc/Bcc** or add attachment to the message.
- If you do not want to send the mail right away, press Right Menu → and select Save as draft to save a copy.
- 5. Finally, press Left Menu 🕞 to send.

Find More Information

Manage Your Account with myAT&T

- On your phone:
 OK (Interpretation) > My AT&T
- On the web: att.com/myATT

Compatible device and online account required. Data and messaging rates may apply for app usage.

Need More Help?

On the web: att.com/DeviceHowTo

Give us a call

- 611 from any AT&T wireless phone
- 800.331.0500 or prepaid 800.901.9878



Your New Phone



Need more help? Go to **Apps > myAT&T**

Speed Dial

Quickly Set Up Speed Dial

- 1. From the Home screen, long press a keypad number, 2-9. Voicemail is automatically assigned to 1 and cannot be changed.
- 2. A window will appear on the screen, press **Right Menu** () to confirm assign an action.
- 3. Use Navigation to scroll to the one of 2-9 keypad number, press OK ∞ to set.
- 5. When complete, a notification will appear in the status bar: "Speed dial set."

Use Speed Dial

1. From the Home screen, long press the keypad number to dial the assigned contact.

Call Family & Friends

Make a Call

- 1. From the Home screen, begin dialing a number.
- 2. Press **OK** (a) or **Place/Answer Call** (c) to place the call.
- 3. To hang up the call, press **Power/Hang Up**

Set Up Voicemail Box

- 2. Enter Voicemail number, press **OK** (2) to save.

Call Voicemail

1. From the Home screen, press and hold (1.) for at least three seconds.

Text Messaging

Send a Text/Multimedia Message

- 1. From the Home screen, press **OK** ()> **Messages** ().
- 2. Press Left Menu 🕞 to create a new message.
- 3. Enter the phone number of the recipient in the To bar, or press Right Menu ⊙ > Select from contact or Select contact group.
- 4. Press Navigate down 🕁 to access SMS bar to type in the message.
- 5. Press **OK** 🔿 to send.

Use En KT9 to Quickly Type Words

- 1. En KT9 is a default input method.
- 2. When forming a word, press each key only once for each letter.
- 3. Once the word of your choice appears, use **Navigation** to highlight the word. Press **0** to add a space and proceed to the next word.
- Press (#™) to toggle between the other types of input methods: abc, Abc, ABC, 123, or to return to En KT9.

Using Navigation

Getting Started

- Navigate is located above the number pad that frames OK .
- Press Up, Down, Left, or Right on the ring to navigate the screen.
- To make a selection, press **OK** 🔍 .
- · Shortcuts accessible from the Home screen:
- Navigate up () to access Settings.
- Navigate down 🕁 to access Recent apps.
- Navigate left
 ⊕ to access Email providers, such as Gmail, Outlook, and more.
- Navigate right 🕀 to access Contacts.



Capture Life's Moments

Take a Picture

- 1. From the Home screen, press **OK** ()> **Camera** ().
- 2. Press **OK** 🛞 to take a photo.

Record a Video

- With the Camera open, press Right Menu > Take video to switch to video mode.
- 2. Press OK 🔿 to start/stop recording.

Share a Picture or Video

- 1. From the Home screen, press OK ∞ > Gallery Ω .
- 2. Select a photo or video, press **Right Menu**) > **Share** to send the picture or video.