
名称: 蓝悦F21说明书 材质: 128G双铜+风琴折 尺寸: 210*100mm 料号: Y.047.1170

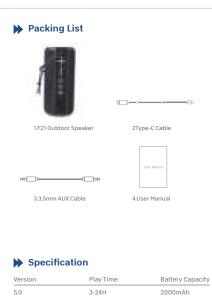





8.Type-C Charging Port

2

9 TF Card Slot

Buttons Button Function Turn on/off Switch Play Mode



- Plug the USB-C charging cable on your speaker, the battery indicator glows red.
- · When fully charged, the indicator goes out.

TWS Wireless Pairing

- 1. Turn on two F21 speakers.
- 2. Disconnect all devices with F21 speakers.
- 3. Double click the power button " (1)"on the one of speaker into TWS pairing mode.

English

33ft

Wireless Range



Input

DC-5V/1A

- 4. TWS pairng will be finished after prompt.
 5. Click the device name "F21" to pair on.(Refer to page 2 "Wireless connection")
- **▶** Alexa Connection
- 1. Disconnect wireless speaker with all devices.
- 2. Put your wireless device in pairing mode.
- 3. Open the Alexa app, click the "Settings".
- 4. Click Echo Dot device name.
- 5. Click the "Wireless".

Charging Time

3-4H

English

Click the speaker name "F21" to pair thewireless speaker with Alexa.

Warm Note:

Thank you for choosing us!

Every order will enjoy following after-sale policy: We hope you are satisfied with our products, more questions and problems, feel free contact us for help. Each of your suggestions and ideas is very important to us. Welcome to share design suggestions to our via your order of shopping plat. and become an important promoter of our brand.

- 30 Days refund,
- 180 Days worry-free warranty,
- Lifetime technical support.

▶ Use Tips:

- Full charge for first use
- Disconnect all device for Alexa Pairing

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

3

