



PODZ TWS EARBUD



QUICK START GUIDE

IMPORTANT SAFETY

 
Read all instructions before using your earbuds.
Important: Use of earbuds while operating a vehicle, motorcycle, watercraft or bicycle is not recommended and is illegal in some areas. Check and obey applicable laws and regulations on the use of earbuds while your operating a vehicle. Be careful and attentive while driving. Stop listening to your audio device if you find it disruptive or distracting while operating any of vehicle or performing another activity that requires your full attention.
• Never expose your earbuds to high temperatures, extreme cold or submerge in water.
• If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use.
• In order to avoid the risk of electric shock, never attempt to open your earbuds or repair them, consult a certified professional.
• Your earbuds are not to be used by children without adult supervision.
• Do not clean the earbuds with harmful chemicals or detergents.

MAINTENANCE

Store the earbuds.
When you're not using the earbuds, store them in the charging case. Close the charging case to help preserve battery life and keep the charging case free of debris. When storing the earbuds for an extended period of time (more than 4 weeks), make sure they are stored at room temperature and the charging case battery level is greater than 40%.
Clean the earbuds and charging case.
Earbud nozzles: Wipe only with a dry, soft cotton swab or equivalent. CAUTION: Never insert any cleaning tool into the nozzle.
Charging contacts (on earbuds) and charging pins (in charging case): To prevent rusting, wipe with a dry, soft cotton swab or equivalent.
Charging case: Wipe only with a dry, soft cotton swab or equivalent.


GETTING STARTED

- ① Micro USB charging port
- ② Charging Case LED indicators
- ③ Charging Case Power Button
- ④ Left earbud LED indicator
- ⑤ Left control button
- ⑥ Right earbud LED indicator
- ⑦ Right control button

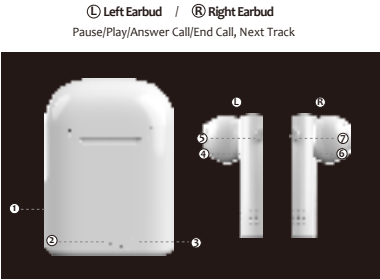

CHARGING YOUR CASE

 - Charge on the go charging case, with the included micro USB cable for 2-3 hours. (LED (2) will blink red)
Do not charge longer than suggested time. Do not charge overnight.
- When LED (2) is illuminated solid red, battery case is fully charged.

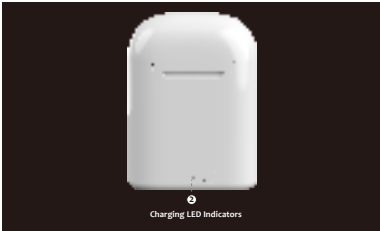


CHARGING YOUR EARBUDS



- Place Right and Left Earbuds into charging case and press the power button on the battery case (3)
- Charging case LED indicator (2) will illuminate Blue and the earbud LED indicators (4, 6) will illuminate Red, indicating that the earbuds are charging properly. When Earbuds LEDs (4, 6) off, earbud batteries are fully charged.
- After earbuds are fully charged, press the charging case power button (3) to turn the charging case off.


MONO MODE
(SINGLE EARBUD USE)



— Remove earbud from charging case and power on by pressing the control button (7) or (5) for 3 seconds depending on which earbud your using.

— Once earbud is powered on, proceed to **PAIRING**

STEREO MODE
(DUAL EARBUD USE)



— Remove both earbuds from charging case and place them in your ears.

 
— Make sure Bluetooth® Search Mode is turned off on your mobile device.

— Hold the right earbud button (7) for 3 seconds and then press left earbud button (5) for 3 seconds until they are powered on. (Earbud LEDs will flash Red and Blue to indicate that they are in Link mode.)

— Earbuds will automatically link together after a few seconds, and earbuds will have a tone (LEDs will flash blue)

— Once Earbuds are linked together you may proceed to pairing with your mobile device.

PAIRING



— Enable Bluetooth search mode on your mobile device and search for pairing name “PODZ TWS EARBUD ” and select it on your mobile phone. Once the earbuds are successfully paired a notification will sound.

— Now you can enjoy your true wireless Bluetooth Earbuds.

*Note: Once earbuds have been initially paired successfully with your mobile device they will automatically pair the next time they are powered on.

OPERATING BLUETOOTH EARBUDS

Function	Operation
Power On	Press (5) or (7) for 3 seconds
Power Off	Press (5) or (7) for 5 seconds
Play/Pause	Single press (5) or (7)
Answer	Single press (5) or (7)
Reject	Press (5) or (7) for 2 seconds

Earbuds	LED Indications (4) & (6)
Power On	Red and Blue LED will flash alternately
Link Mode	Flashing Blue + Red
Paired Successfully	Flashing Blue
Power Off	LED Off

Earbuds in Case	
Charging	Light Red
Fully Charged	Light Off

Charging Case	See CHARGING YOUR CASE
---------------	------------------------

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement Caution:

This Transmitter must be installed to provide a separation distance of at least 5 mm from all persons.

FCC Statement:

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

— Reorient or relocate the receiving antenna.

— Increase the separation between the equipment and receiver.

— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help."