



F&D OT1

Air Conduction Open-ear Headphone

Product Instructions



Please make sure to read this manual carefully and keep it properly

① Packing List:



F&D OT1*1



Case*1



Charging Cable*1




Product Brochure*1

② Specifications

Product Name: Air Conduction Open-ear Headphones	Model: OT1
Product Size: 142.8*50.3*30.1mm	Distance: $\geq 10\text{m}$
Bluetooth Version: BT5.3	Drive Unit: 14.2mm
Impedance: 16 Ω	Frequency Response: 20Hz-20KHz
Frequency Band: 2.400GHz-2.4835GHz	Battery: Headphones 70mAh; Case 400mAh
Charging Time: $\approx 1.5\text{h}$	Usage Time: $\approx 6\text{h}$
Standby Time: $\approx 30\text{h}$	Input: 5V=0.5A
Type Of Charge: Type-C	Weight: $\approx 11.8\text{g}$

Specifications are laboratory test data.

*The playback time is in SBC format, and the test volume is set at 60%, and results may vary depending on device settings, environment, usage, and many factors.

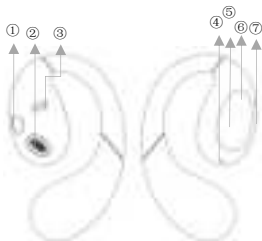

- ① Sound drain hole ② Sound output hole ③ Charging pin ④ Sound drain hole ⑤ Touch area
⑥ Led ⑦ Call mic

How To Wear?



③ Operation Instruction

Power On

- Long press for 3s to turn on (both headphones operate separately).
- Automatic power on after opening the case.

Power Off

- Automatic shutdown of the headphones when the headphones is placed in the case for charging.
- Automatic shutdown when Bluetooth is disconnected for 5min.
- Automatic shutdown when the power is exhausted.
- Long press the touch area for 5 seconds to shut down

Pairing

- Removal of the headphones and automatic entry into pairing mode.
- Failure to connect back to pairing mode.

Reset

- With both headphones on, press and hold the touch area for 5s immediately after both headphones are double tapped at the same time to clear the pairing record and enter the pairing state.

Bluetooth Pairing

Step 1 - Turn on your device's Bluetooth.



- When the device is connected to the headphones, the battery level of the headphones is displayed.

Step 2 - Select "F&D OT1" to connect.

Operating Instructions



Call control

Answer/Hang Up: Double touch L/R

Reject: long touch L/R 2s

Music control

Play/Pause: Double touch L/R

Previous song: Triple touch L

Next song: Triple touch R

Game mode

Long touch R 2s

Voice assistant

Long Touch L 2s

Charging Instructions



Charging The Case:

Using a device with a USB port to which it is connected for charging.























To Charge The headphones:

Place the headphones into the case to charge it, at which point Bluetooth is automatically disconnected.

***Note: When the headphones cannot be charged, please charge the case first.**

Indicator Light Description

Power on	The white light is on for 1s	 
Power off	The red light is on for 1s	 
headphones pairing	The red and white lights flash alternately	     
The headphones is charging	The red light stays on for 5s	 
The case is charging	The red light flashing	     
The case is fully charged	The red light is always on	 

Notes

- 1.Please fully charge the product before using it for the first time;
- 2.If the product has not been used for more than 2 weeks, please charge the product before use;
- 3.Please choose a charger made by a regular manufacturer and certified by the national for charging;
- 4.Please do not use it for a long time at a loud volume to avoid hearing damage.

Warning

- 1.Do not store and use the headphone to temperatures below 32 F(0 °C) or to temperatures above 113° F(45° C);
2. Do not throw to avoid damage to the headphone caused by falling;
- 3.Never disassemble the headphone. There are no user-serviceable parts inside;
4. Do not place in high temperature or fire to avoid danger;

5. Do not rain or place in water;
6. Do not use the headphone in a thunderstorm. This could prevent the headphone from working properly, and also increase your chance of being electrically shocked;
7. Do not use alcohol or any volatile liquid to clean this product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could

void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



WARRANTY CARD

END-USER'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No.: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our F&D Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorized Dealer. (Parts would be replaced when necessary)

A.Parts:_____1 year

B. Technical service free_____1 year

3. Under the following circumstances, service and parts will be chargeable even within the warranty period:

A. Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information. E.G.: Alteration of the date of purchase, serial numbers-altered or removed.

B. This unit being tampered with, altered in any way by any unauthorized technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occur in transit by or from the customer.

C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd

Add: Fenda Hi-Tech ParkZhoushi Road,Shiyan,Baoan,Shenzhen,China

P.C.: 518108

Http://en.fenda.com/



WARRANTY CARD

DISTRIBUTOR'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____

Last Name: _____

Address: _____

Contact No.: _____

Product Name: _____

Model No.: _____

Serial No.: _____

Date Purchased: _____

Invoice No.: _____

Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period from its date of purchase from our Authorized Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our F&D Authorized Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorized Dealer. (Parts would be replaced when necessary)

A.Parts:_____1 year

B. Technical service free_____1 year

3. Under the following circumstances, service and parts will be chargeable even within the warranty period:

- A. Failure to present the warranty card and receipt when servicing is required. Full particulars not clearly shown or alterations made against the actual information. For example: Alteration of the date of purchase, serial numbers-altered or removed.
- B. This unit being tampered with, altered in any way by any unauthorized technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occur in transit by or from the customer.
- C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.

Shenzhen Fenda Technology Co., Ltd

Add : Fenda Hi-Tech ParkZhoushi Road,Shiyan,Baoan,Shenzhen,China

P.C. : 518108

[Http://en.fenda.com/](http://en.fenda.com/)