

# 折页（风琴折）双面印刷 128克铜版纸 Size\*75\*105mm

## Welcome Guide USER MANUAL



PN-W26

Solar Power Bank

Thank you for choosing our Solar Charging Power Bank. In order to provide you with a better experience, we have provided detailed instructions for use.


### Product parameters

Type-C Input	DC5V/2.1A
Type-C Output	DC5V/3A
USB Output	DC5V/3A
Wireless Output	5W (5V=1A)
LED Flashlight Wattage	1W
Solar Panel Output	DC5V/0.24A (under 2500LUX)
Battery Capacity	2000mAh/3.7V
FM Band	87-108MHZ
Audio MAX Output Wattage	1W*2
Frequency Response	20Hz-18KHz
SNR	≥60db
Sound Channel	Dual Channel

### Package Include

1\*2000mAh Solar Power Bank  
1\*Charger Cable 1\*User Manual  
1\*Lanyard

### Product Detailed Drawing

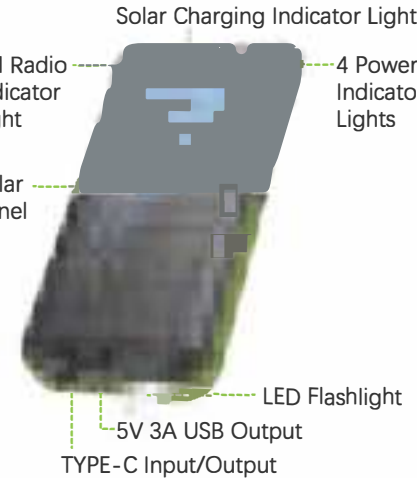

### Product Specifications

1. Exclusive design, fashionable and beautiful.
2. Original A-class polymer batteries, safe and stable.
3. Wireless Portable Charger, compatible with all Qi-enabled mobile devices.
4. High capacity solar portable charger, supports multiple USB port outputs at the same time.
5. Solar charging, charge your devices anytime, anywhere.
6. LED flashlight, great to have outdoors.
7. 2 built-in cables, charge your devices at any time.
8. Built-in high-sensitivity FM radio chip, receive more stations, clearer sound.

### Instructions

#### ※ Turn on/Turn off:

Gently press the power button, the LED battery indicator will blink indicating that the wireless charging function is on. If there are no charging devices, the power bank will automatically shut down in 30 seconds.

#### ※ How to charge the power bank:

##### • Solar supply

Put the power bank under direct sunlight and sunlight will convert into electricity to charge built-in lithium battery automatically (strong sunlight is advised).

##### • Power supply

Connect the TYPE-C input port and wall/car adapter USB port with a cable. The LED indicators will flicker while charging, with all indicators remaining constant indicating that the power bank has been fully charged.

#### ※ Charge mobile phones or other devices:

##### • Cable charging

Turn on the power button and the LED indicator will turn on. Plug a compatible cable into the power bank USB output port and the device, or use the built-in cable to charge.

##### • Wireless charging

Turn on the power button and the wireless charging indicator in the green is on. Put your mobile phone on the wireless charging area and it will charge. If you normally use a protective case for your phone, please make sure that your phone case is not made of metal and the suitable thickness is less than 4mm.

#### ※ Radio function:

Pull out the telescopic antenna, press and hold the round radio power switch for at least 3 seconds to turn on the radio. Gently press ▲ switch up or press ▼ switch down to

semi-automatically station search. The red indicator will be flickering during the search process. When a station is found, it will automatically play the content. Short press the power switch to turn off the sound, short press again to unmute. Turn the volume knob to the left/right to adjust the volume level, press and hold the power switch again for 3 seconds to turn off the radio. Note that using the radio to listen to radio programs and using the power bank function (cable charging/wireless charging) at the same time will interfere with the normal radio station search, causing a sound. This is a normal phenomenon, and is due to the power bank working when the internal chip switches frequency, causing interference to the radio's local vibration signal.

#### ※ LED flashlight function:

Press and hold the power button for at least 3 seconds to turn on or turn off the flashlight.

Note: Please turn off the LED flashlight to save the power when using the flashlight is not necessary.

### Product Maintenance

1. Keep it away from moisture and corrosive substances.
2. Please do not use chemicals to clean the power bank.
3. Please charge the power bank once every six months, especially when the product is not used for a long time.

### Common Problems and Solutions

★ Only one blue LED power indicator flickers when the power button is pressed.

The battery power is about to run out, please charge this product immediately.

★ Unable to charge a mobile device.

Please change the charger and charging cable and try to charge the phone again.

★ Unable to charge a mobile phone or other devices.

Please plug and unplug the charging cable again to connect the mobile phone and the charger.

★ Charging for a long time but it not becoming fully charged.

- Use a charger that supports 5V/2.1A or more output.
- Check if the button is flexible.
- Check if the charging indicator is normal when charging.
- Check whether the USB input cable is good and whether there is any abnormality after connecting the charger.
- Check whether the USB output cable is good and whether there is any abnormality when connecting the device that needs to be charged.

• Check if there is any abnormal noise or odor in the product.

- Please do not disassemble, otherwise it is not covered by the warranty.
- If the steps above do not fix the issue, please contact our after-sales service department at [support@fokimdo.com](mailto:support@fokimdo.com).

### Warning

1. This power bank is for charging devices within DC5V/3A specifications. Devices beyond the specifications will be damaged.
2. Keep dry and keep away from fire.
3. Please do not charge in high temperature. Suggested temperature: ≥45°C.
4. Please only connect devices that conforms to the output specifications of this product.
5. If the battery swells, leaks or emits an odor, stop using it immediately.
6. Please do not disassemble the power bank.

FCC Statement  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.  
NOTE: This equipment has been tested and found to comply with the limits for a wireless power charger, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.