

TOTAL SIZE: 551 MM X 70 MM FOLDED SIZE: 79 MM X 70 MM

PDF

ACCORDIAN STYLE FOLD

360 degree rotating clamp can adjust the angle of selfie stick

Reminder:

In order to protect your smartphone, please keep the Tripod stand in a
 smooth surface, and prevent other external forces from tipping the tripod.

▲ 360°

Do not press down on the tripod when the tripod is in position, as it could
 break or deform the legs.

Battery replacement instructions for shutter remote:

CR2032

- Use a fingernail or sharp hard object to push the back cover holding tab in towards the battery cover.
- Use the fingernail or sharp hard object, aligned with the gap of the battery
 cover, to carefully pry the battery out of the void, remove the battery, and
 replace it.
- Replace the battery cover so that the holding tab snaps back into place.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following
- I two conditions: (1) This device may not cause harmful interference, and (2) this device must
- accept any interference received, including interference that may cause undesired operation FCC Radiation Exposure Statement:
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Bytech NY INC, warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech's responsibility with regard to this limited warranty shall be limited solely to repair or replacement as its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 month period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. Please include \$5.00 for return shipping and handling.

WWW.BYTECHINTL.COM Bytech NY Inc. 2585 West 13street Brooklyn NY 11223 (718) 449-3700

©2021 BYTECH NY INC. *All trademarks and copyrights are the property of the respective companies.

🛚 Made in China 👘 F 🗲 🥵 🧏