

One-Year Limited Warranty

E-filliate warrants to the consumer that the product and all accessories provided in the sales package ("Product") are free from material defects in material and workmanship when used normally and in accordance with operation instructions. The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase.

If we repair or replace a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to repaired or replacement Products for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year limited warranty, whichever is longer. During the limited warranty period, E-filliate will repair or replace (at E-filliate's option) without charge, a Materially Defective Product. If we repair this Product, we may use new or refurbished replacement parts. If we choose to replace this Product, we may replace it with a new or

refurbished Product of the same or similar design. E-filliate will return repaired or replacement Products to you in working condition. We will retain defective parts, or equipment. Repair or replacement of Product is your exclusive remedy.

This warranty does not cover Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion, or Product that has been damaged due to repair, alteration or modification by anyone other than an E-filliate authorized representative.

Customer Service

We're here to help. If you have a problem with this product or have questions on how to use it, please contact us. You do not need to contact the retailer you purchased this product from. Please contact one of our service representatives before shipping merchandise to us.

Contact Us

efilliate.com
support@efilliate.com
(800) 592- 7031 toll free
(916) 858-1000
(916) 858 1009 FAX

11321 White Rock Rd.,
Rancho Cordova,
California 95742,
United States

Customer support is available between
8 a.m. and 5 p.m. Pacific Time,
Monday-Friday.

Stereo Wireless Earphones



Thank you for purchasing the Ultralight Active Wireless Earphones. The flexible silicone neckband will conform to the shape of your neck for an ultra-comfortable fit. The earbuds clip together magnetically for easy storage. A Micro-USB cable is included to recharge the earphones' battery.

Please read this user manual carefully to familiarize yourself with the functionality of your new Wireless Earphones. It is recommended that you completely charge the earphones before using them for the first time.

Charging the Wireless Earphones

Make sure the earphones are fully charged before using them for the first time. Charge the wireless earphones by connecting the Micro-USB charging cable to the earphones' charging port. Plug the USB connector into a USB port on any computer or USB power adapter. When the earphones' battery is empty, it will take up to three hours to fully charge it.

Controller Functions

Power On: Press and hold the HOME button for 2 seconds to turn the earphones on.

Power Off: Press and hold the HOME button for 4 seconds to turn the earphones off.

Play/Pause: Press the HOME button to pause playing, and press the key again to resume playback

Volume Up: Press the Volume Up button.

Volume Down: Press the Volume Down button.

Please note, the controller uses the active player app's functions. Function compatibility may vary across apps and devices.

Pairing the Earphones

For best results, place the earphones within one meter of your phone or tablet during pairing. Press and hold the POWER button on the earphone controller until the indicator light alternately blinks red and blue.

The earphones are now in pairing mode.

Enable the Bluetooth function of your phone or tablet, search the Bluetooth devices and select "Ultralight Earphones."

The blue indicator light will blink intermittently, indicating the earphones are paired.

To remove the pairing connection, go into your phone's Bluetooth settings, select the "Ultralight Earphones" and select the Forget option.

Important Safety Information

This product is splashproof and is designed to prevent perspiration or water droplets from affecting the performance during proper use.

The earphones should not be submerged in liquid or used in areas with excessive moisture.

Do not drop or toss the earphones or use excessive force when using them.

The wireless earphones contain a rechargeable polymer lithium battery. Keep the battery away from extreme temperatures. Do not expose it to direct sunlight. Avoid operating or storing the battery near fire or stoves, or inside sealed cars in hot weather.

The built-in lithium ion battery must not be exposed to flame or excessive heat. Exposing it to fire may cause the battery to generate heat, ignite or explode. For your safety, do not attempt to remove or modify the battery.

The wireless earphones should not be disposed of as municipal solid waste. To recycle it, contact your local hazardous waste processor or contact Call2Recycle on their website, call2recycle.org, or by phone at 877-273-2925 to find the nearest drop-off location for lithium-ion batteries.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.