

 
 
MANUAL

GUIDE LINES

Front
(English)

 DUET QUICK GUIDE	Thank you for purchasing this innovative iSWAG device. The specifications in this document are subject to change without notice. To download the full user's manual visit us at: www.iSWAG.com iSWAG and the iSWAG logo are registered trademarks of iSwag, Inc. Other trademarks are the property of their respective owners. Charge for 24 hours before using. 	Install SIM card / Memory card.  Get to know your new iSWAG device 	Connect your new iSWAG device to the computer using a USB cable.  Copy files from your computer to your new device. 	 Memory Card/Device Before using the device, please insert a memory card into the device. The device will automatically detect the memory card and display the memory card information on the screen. If the device does not detect the memory card, please check the memory card and the device. If the device still does not detect the memory card, please contact the nearest iSWAG service center. For additional information about the terms and conditions of iSWAG, please visit our website at www.iSWAG.com. Copyright iSwag, Inc. 2011
--	---	---	--	--

Back
(Spanish)

 DUET GUÍA RÁPIDA	Gracias por haber adquirido este innovador producto de iSWAG. Las especificaciones en este manual están sujetas a cambios sin previo aviso. La información básica del manual completo de usuario visitando nuestro sitio web: www.iSWAG.com iSWAG y el logotipo de iSWAG son marcas registradas de iSwag, Inc. El resto de las marcas comerciales son propiedad de sus respectivos dueños. Cargue por 24 horas antes de usar. 	Instalar tarjeta SIM / tarjeta de memoria.  Conecte su nuevo dispositivo iSWAG 	Conecte su nuevo dispositivo iSWAG a una computadora utilizando un cable USB.  Transfiera sus archivos de música desde su computadora a su nuevo dispositivo. 	 Memoria Card/Dispositivo Antes de utilizar el dispositivo, inserte una tarjeta de memoria en el dispositivo. El dispositivo detectará automáticamente la tarjeta de memoria y mostrará la información de la tarjeta de memoria en la pantalla. Si el dispositivo no detecta la tarjeta de memoria, verifique la tarjeta de memoria y el dispositivo. Si el dispositivo aún no detecta la tarjeta de memoria, póngase en contacto con el centro de servicio más cercano de iSWAG. Para obtener más información sobre los términos y condiciones de iSWAG, visite nuestro sitio web en www.iSWAG.com. Copyright iSwag, Inc. 2011
--	--	---	--	--