


PHOTOGRAPHS OF THE TEST CONFIGURATION


Set UUT as Master mode (Radar injected into Master)

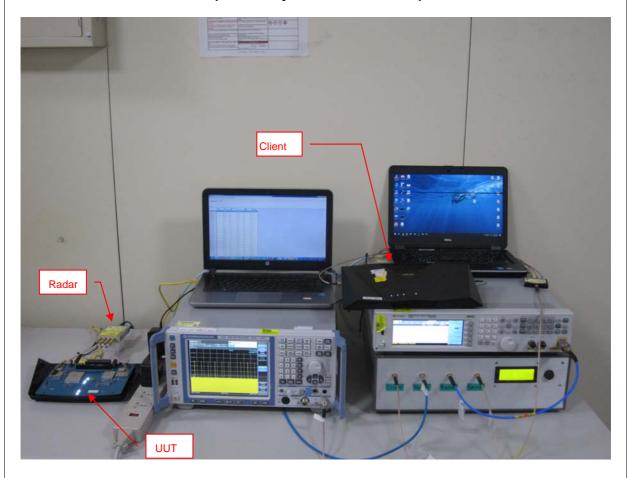

Reference No.: 191128E08-1 Page No. 1 / 2



Set UUT as Client mode (Radar injected into Master)

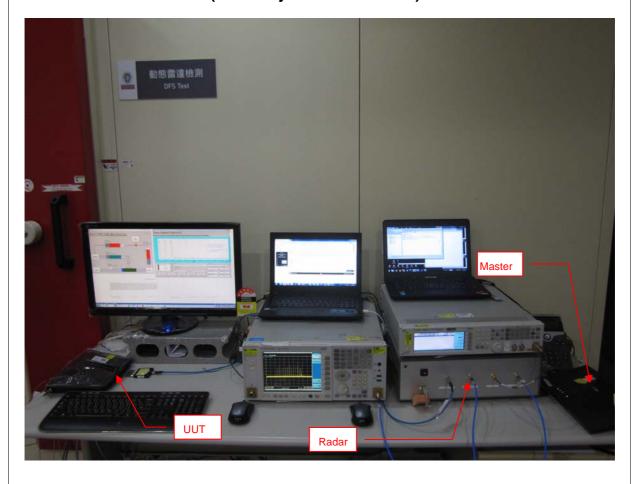

Reference No.: 191128E08-1 Page No. 2 / 2