

Please read this instruction manual carefully

before using the product and keep it properly

Specifications

- Item No.: SX-219
- Wireless:5.3
- Speaker:13*3.0 hollow composite horn
- Frequency Response:20hz-20Khz
- Audio Output:119±3dB Rechargeable Lithium Polymer Battery
- Charging Case:300mAh,earphones:35mAh*2
- Playtime: earphones 6 hours (60% volume), Case 15 hours (Full Batler
- Input: DC-5V/300mA
- Charging time:1.5h(earbuds);1.5h(charging case)
- Range: 30+ft
- Protocols: HSP / HFP / A2DP /AVRCP
- Codecs: AAC/SBC Weight: 41g (8g for earphones + 33g for charging case)
- IP Rating: IPX4(earphones only)
- Accessories: Wireless earphones, Charging Case, Type-C Charging Cable

Pairing Mode: for first time connection, open the charing case, the earphones Play/Pause:single tape left/right. enter into pairing mode automatically. Search for SX-219 and choose to connect, there is a prompt after the earphones are coonected successfuly. Answer call/Hang up:double tape left/right. The next time you turn on, the earphones will connect automatically with the Reject call:Long press left/right. Voice Assistant:hold left.

Manual Pairing: if the automatic is not successful (single earphone with no sound or earphones are disconnected), you can do the manual connection. Turn off the phone's wireless. 2) Take the earphones out after putting them into the charging case or

Oseconds, and wait for 5seconds.

3) Turn on the phone's wireless, and search for SX-219 to connect.

- 1 Left Earphone 2 Touch Button
- Audio Receiving Hole ④ Right Earphone







Game/music mode switch: hold right.

 
Previous song:triple tape left/right.

Next song:double tape left/right.

 Charging: Red light flashing. Fully charged: Red light on.

Charging Indicator Light


 Low battery: Blue light flashing. Charging indicator



Note: Earphone can be full charged for 3 times by full battery case.


Easy operation

 Before using the translation function, need to make sure translator earbuds wireless connect with mobilephone, and at same time download APP "Wooask" firstly. Operation steps as below:






APP download

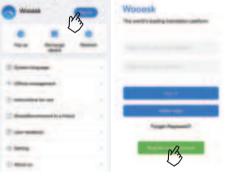

(2)Sign up to get an ID(only the 1st time) then you can start to use the

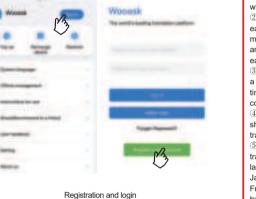

(3)Five Translation Mode ①Touch control mode: two people

translation.

wear a earphone. Click or double click the earphone to translate in real-time, suitable for acquaintances who are willing to wear your earphone. ②Speaker Mode: one person wears earphones and the other holds the mobile phone, suitable for strangers who are not convenient to wear your earphones.

3)Free Talk Mode: both of them wear a earphone, Real-time,translate in real time,release their hands and communicate freely. **Photo Translation:** Translate as you

shoot, suport both real-time photo translation and import photo translation. 5 Offline Mode (paid to use): can translate without internet, support 8 lanuages translation: Chinese, English.

Japanese, Korean, Russian, German, French,Spanish real time offline for translation

Million to an handatar backdown

Precautions

(3) When there is no internet or the

mode(offline translation with limited

else to use while is bound, please be

sure to "Unbind" first from the APP,in

use the translator earphones again.

order not to affect other people's normal

than online translation mode).

(4)If earphones need to give someone

network is poor, you can pay to use offline

languages,with slightly lower accuracy

(1)The translation accuracy mainly depends on the recognition accuracy. Each sentence's pronunciation should correct clarity, with appropriate pauses. (2) If earphones cannot accurately understand the translation, try using a different expression.

wait for 30 seconds.

equipment failure.

unbinding page

Unbind steps as below: ①Enter into APP, click "Translation

2 Click Upper right corner "Menu" button. 3)Click "Unbind" to unbind the device, then the next user can download the APP then to Click to enter the

If there is no sound on one side of the earphone or the earphone is disconnected, etc., the earphone will be in automatic pairing state. No manual pairing is required, and the device will automatically connect. Inconnected/Reconnected Wireless device:

1. Enter the wireless settings of your device and delete or ignore "SX-219 2. Turn off the Wireless function (see Picture B), then put the earphones into

the charging case and close the lid. Wait for one minute. Take out the nát may cause undesired operation. earphones (keep the distance between the two earphones within 20CM) and

Reopen the mobile phone wireless and search and connect to "SX-219".





Do not charge by unofficial means to avoid fire, explosion or other dangers 2. Do not deliberately drop, burn, pierce, squeeze or immerse the product in liquid to avoid equipment damage.

3. Do not expose the product to high temperatures or around heating equipment (such as inside or outside a microwave oven or oven). Please use this device within the temperature range of 0 to 35 degrees

Celsius. If the ambient temperature is too high or too low, it will cause

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference

Our company is not responsible for any quality problems, equipment

failures and safety accidents caused by privately disassembling the

earnhones and using accessories not recognized by the official

Caution: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits fora Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmfulinterference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turningthe equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that

to which the receiver is connected. --Consult the dealer or an experienced he device has been evaluated to meet general RF exposure requirement. The devicecan be used in portable exposure condition without restriction.



radio/TV technician for help.





