

## Home position

The display is home position.



In the desktop window,  
slide down or up on  
the touch panel.

## STEP1

Tap the “設定(=Settings)” icon  
(red frame part)



The display after the STEP1  
and scroll down.



## STEP2

Tap the “すべてを見る(=All settings menu)” icon  
(red frame part)



The display after the STEP2  
and scroll down.



## STEP3

Tap “端末情報 (=About phone)” icon  
(red frame part) and scroll down.

