

Operation Number	Operating (Step 1)	Operating (Step 2)	Result
①	Click "Set key"	Press and release the button immediately	LCD Version: Enter the settings screen Other Version: No change
②	Click "Up key"	Press and release the button immediately	Open the roller blind
③	Click "Stop key"	Press and release the button immediately	Stop the roller blind if it is running
④	Click "Down key"	Press and release the button immediately	Close the roller blind
⑤	Press and hold "Set key"	After the indicator light flashes once, release the "Set key"	Shut down (After shutting down, press the "Set key" to turn on)
⑥	Press and hold "Set key"	After the indicator light flashes twice, release the "Set key"	Code matching for remote control (Matching program will be canceled in 60 seconds if no operation or by pressing any key )
⑦	Press and hold "Set key"	After the indicator light flashes 3 times, release the "Set key"	Code clearing for remote control

⑧	Press and hold "Set key"	After the indicator light flashes 4 times, release the "Set key"	Press the "Stop key" again to restore factory settings (Do not operate for 60 seconds or press the "Up/Down key" to cancel the reset task)
⑨	Press and hold "Set key"	Press the "Stop key" within 3 seconds	Change the direction of rolling shutter operation
⑩	Press and hold "Set key"	Press the "Down key" within 3 seconds	Set the lower limit of roller shutter operation
⑪	Press and hold "Set key"	Press the "Up key" within 3 seconds	Set the upper limit of roller shutter operation
⑫	Press and hold "Stop key" (Only for Smart Version)	After waiting for 6 seconds, the indicator light flashes, Release the "Stop key"	Network re pairing, devices can be added using the app

Method for setting the direction of motor rotation: After installing the pull bead on the motor gear, press the "up" or "down" button. If the direction of motor rotation is correct, do not operate it; If the motor runs in the opposite direction, set the reverse direction according to operation number ⑨ ("Set key"+"Stop key").

Method for setting the upper/lower limit of the rolling shutter: After setting the direction of the motor, manually pull the curtain to the lowest position (completely close the curtain), and refer to ⑩ to set the lower limit; Press the "Up key" once, and the curtains will start to open. When it reaches the maximum position, press the "Stop key", and then set the upper limit of the roller shutter according to ③. This completes the setting of the upper/lower limit. After setting the lower limit, the upper limit must be reseted. Smart version can also be set up on the app interface.

**FCC Statement:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device

must accept any interference received, including interference that may cause undesired operation. This equipment has been tested

and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:—Reorient or relocate the receiving

antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications not expressly approved by the party