

Quick Start Guide for TWS-731

Multi-Language

Nokia Clarity Earbuds+
TWS-731
Quick Start Guide / دليل التشغيل السريع / Schnellstartanleitung / Guia de inicio rápido / Guide de démarrage rapide / Guida Rapida / Краткое руководство / Руководство по быстрому запуску / سریع اند / سnelstartgids / Skrčokna instrukcija obsluge / Ghid de inițiere rapidă / Коротка інструкція користувача

EN
AR
DE
ES
FR
IT
RU
TC
SC
NL
PO
RO
UA

NOKIA

Product and safety information
Remote control functions may vary depending on the model of your device and application.
Sound track instructions do not respond to iOS devices. Since devices with Bluetooth wireless technology can interfere with other electronic devices, it is recommended that you do not use the earbuds near such devices. However, within 10 meters (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or other electronic devices.

Frequency Band: 2400 MHz + 2483 MHz

Maximum Radio Frequency Power: <4 dBm

For your safety

Important: Read these simple guidelines. Not following them may be dangerous or against local laws and regulations. If further info, read the complete user guide.

• Remove the earbuds before swimming.

• Do not use the device in high temperatures. High temperatures may damage the device or battery.

• Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.

• Do not open the device other than as instructed in the user guide.

• Do not drop, knock, or shake the device or the battery. Rough handling can break it.

• Only use a soft, clean, dry cloth to clean the surface of the device.

• Do not paint the device. Paint can prevent proper operation.

Implanted medical devices

Always remove your used electronic products, batteries and packaging materials to prevent the recycling of materials. Electronic and electrical products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and plastic. These materials can be recycled and reused. The materials of the device can be recovered as materials and energy.


• Use only original, chargers, and other accessories approved by HMD Global Oy for use with this device. Never use incompatible products.

To prevent possible hearing damage, do not listen at high volume levels for long periods.


Hearing
• When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Small children
• Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

6

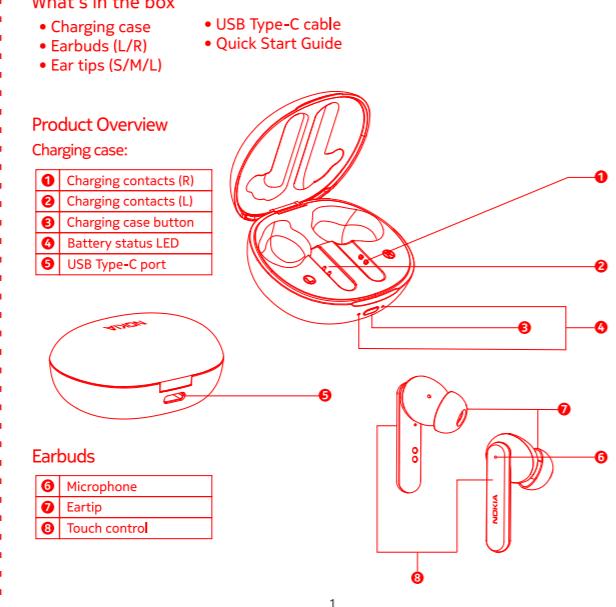

1. Get started
1.1 Before using Nokia Clarity Earbuds+, take off the film on the earbuds and place the earbuds back in the charging case. Then connect the USB Type-C cable to a power source to begin charging. Fully charge the earbuds and the charging case before the first use.

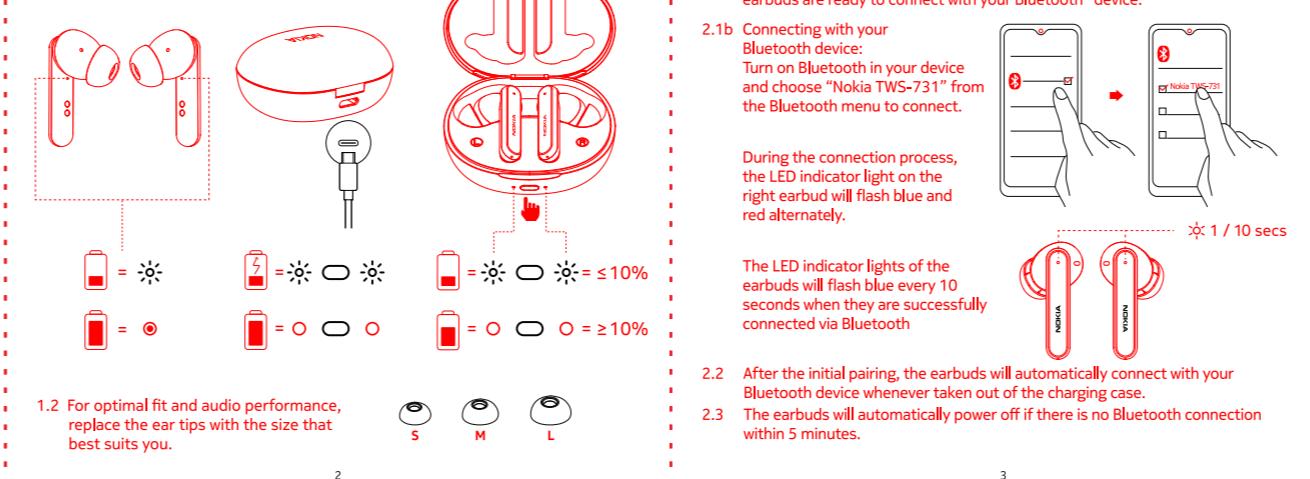

2. Pair and connect with Bluetooth
2.1 Pairing with the device:
When you take the earbuds out from the charging case, the earbuds will turn on and pair with each other automatically. When they have successfully paired, the LED indicator light on the right earbud will flash blue and red alternately and the earbuds are ready to connect with your Bluetooth device.

2.2 Connecting with your Bluetooth device:
Turn on Bluetooth in your device and select "HMD Global TWS-731" from the Bluetooth menu to connect.


During the connection process, the LED indicator light on the right earbud will flash blue and red alternately.

The LED indicator lights of the earbuds will flash blue every 10 seconds until the earbuds are successfully connected via Bluetooth.

2.3 After the initial pairing, the earbuds will automatically connect with your Bluetooth device whenever taken out of the charging case.


2.4 For optimal fit and audio performance, replace the ear tips with the size that best suits you.

3. Using your earbuds
3.1 Touch control

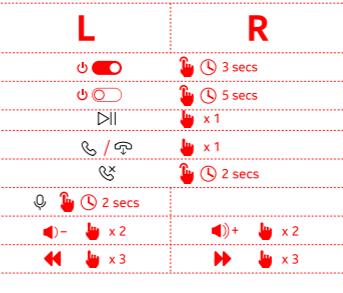

5. Low latency mode (gaming & video mode)
5.1 Press control button (L/R) 4 times to toggle between low latency mode > OFF.

6. Sound management
6.1 Press control button (R) for 2 seconds to toggle between ANC mode > Ambient mode > OFF.

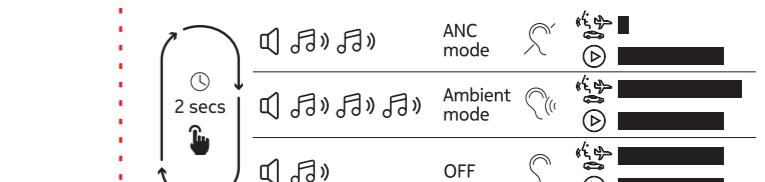

7. Voice pickup microphone:
Voice will be picked up by the primary earbud. The earbud first taken out of the charging case will be the primary earbud.

7

Battery info
Your device has an internal, non-rechargeable, rechargeable battery. Do not attempt to remove the battery, as you may damage the device. The device can be charged and discharged hundreds of times, but the battery's performance will gradually decline over time.

• Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits.

• Do not store the device in dirty or dusty areas.

• Do not store the device in high temperatures. High temperatures may damage the device or battery.

• Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.

• Do not use the device other than as instructed in the user guide.

• Do not drop, knock, or shake the device or the battery. Rough handling can break it.

• Only use a soft, clean, dry cloth to clean the surface of the device.

• Do not paint the device. Paint can prevent proper operation.

Recycle

Always recycle your used electronic products, batteries and packaging materials to prevent the recycling of materials. Electronic and electrical products contain a lot of valuable materials, including metals (such as copper, aluminum, steel, and magnesium) and plastic. These materials can be recycled and reused. The materials of the device can be recovered as materials and energy.

Persons who have such devices should:

• Not carry the device in a breast pocket.

• Switch the wireless device if there is any reason to suspect that interference is taking place.

• Follow the manufacturer's directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Crossed-out wheel bin symbol

The crossed-out wheel bin symbol on your product, battery, literature, or packaging indicates that the device or its battery must not be disposed of in regular household waste.

• The device or its battery must be disposed of in accordance with local regulations.

• Please contact your local authority or electronic waste collection point for disposal.

• Do not dispose of the device or its battery as unsorted municipal waste. For info on your nearest recycling point, check with your local waste authority.

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

1. إلء الاعتبار الأول للإلكترونيات والأجهزة الطبية

(ج) معدات طبية أو جهاز طبي معتمد

(ج) معدات طبية أو جهاز طبي معتمد