



Assembly

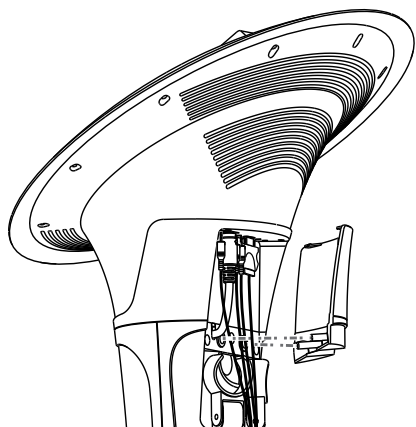

5


Connect to AC power, HDMI (if desired) and speakers as shown on page 7. Put the pedestal jack cover onto the rear of the main unit. You will hear a "click" sound when locked.

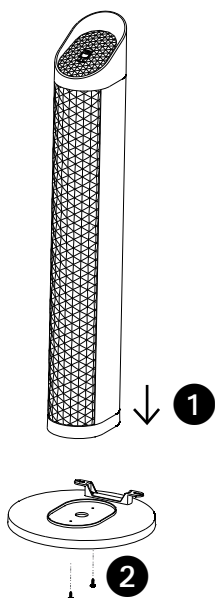

6


Place the tower speaker on the speaker stand while aligning the screw holes ①. Then insert and tighten the speaker screws ② from the bottom of the stand. Repeat the same process on the second tower speaker.

Location of Controls (Top)

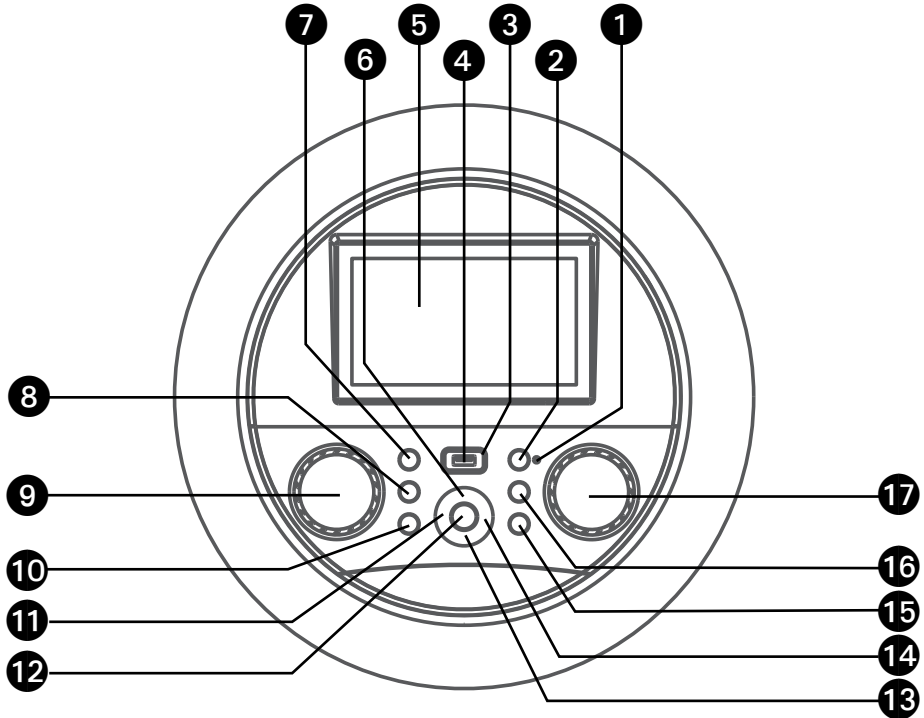

- | | | |
|-----------------------------|--|-----------------------------|
| 1. Bluetooth Indicator | 9. MUSIC VOLUME Control | 16. ● (RECORD) Button |
| 2. Bluetooth Button | 10. 🏠 HOME Button | 17. MIC VOLUME/ECHO Control |
| 3. FUNCTION Indicator | 11. ◀ (Back / Navigation Left) Button | |
| 4. USB Port | 12. ▶ (PLAY/PAUSE)/ ENTER button | |
| 5. Touch Screen | 13. ▼ (Navigation Down) Button | |
| 6. ▲ (Navigation Up) Button | 14. ▶ (Next / Navigation Right) Button | |
| 7. ⏻ ON/STANDBY Button | 15. ↶ RETURN Button | |
| 8. 💡 LIGHTS Button | | |


Location of Controls

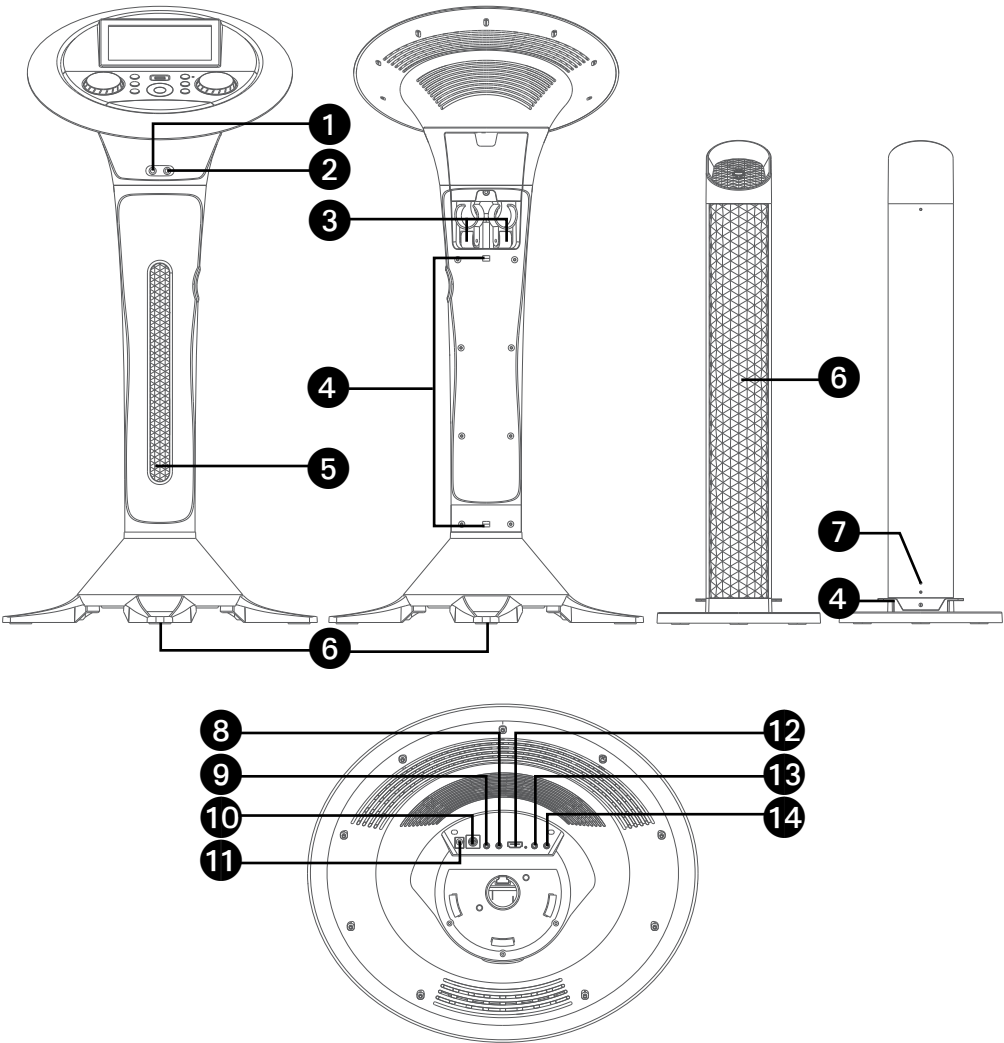

- | | |
|----------------------------|-----------------------------|
| 1. Mic 1 Jack | 8. Left Tower Speaker Jack |
| 2. Mic 2 Jack | 9. Right Tower Speaker Jack |
| 3. Retractable MIC holders | 10. Subwoofer Jack |
| 4. Cord management clamps | 11. DC IN Jack |
| 5. Lights | 12. HDMI Jack (Video only) |
| 6. Speaker | 13. Line Out Jack |
| 7. Speaker cable | 14. Line In Jack |

Connections

Connecting the Microphone(s)

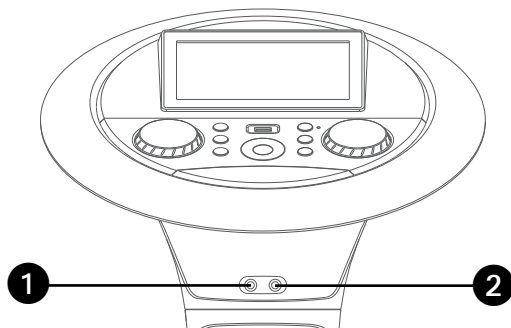


Microphones:

Connect a microphone into Mic jack 1 **1** as well as Mic jack 2 **2** (when desired).


Note: Do not drop or tap the Mic as damage to the Mic or speakers may occur. Do not twirl the microphone cord as it will cause damage to the encased wiring.

Connecting the Tower Speakers

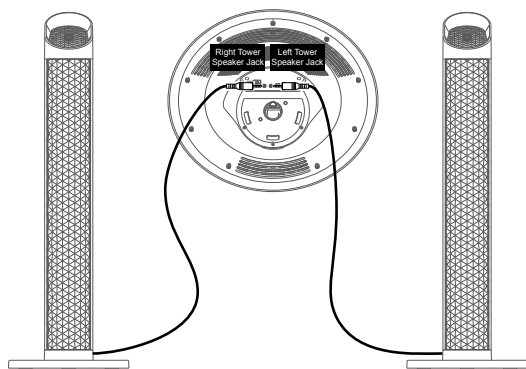

- 1** To protect the speakers, make sure the unit is off and the **MUSIC VOLUME** and **MIC VOLUME** controls are set to minimum.
- 2** Connect the Right and Left Tower Speakers to the jacks on back of the unit as illustrated.
- 3** Turn the power on and slowly raise the **MUSIC VOLUME** and **MIC VOLUME** controls to a comfortable level.

Connecting to AC Power

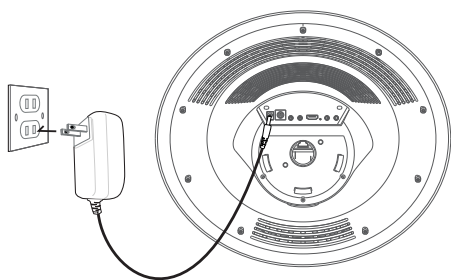


- 1** Insert the DC plug of the adapter into the DC IN Jack located on the main unit.
- 2** Insert the AC adapter into a conveniently located AC outlet having 120V AC, 60Hz.
- 3** Secure the power cord into the pre-installed Power Cord Clamps.

Note:

- Make all connections prior to plugging the AC adaptor into a power outlet.
- The AC adaptor has a polarized plug that fits into the AC outlet only one way. If the plug does not fit properly, turn it over and try again. Do not force and do not file or cut the wide blade.

Connections

Connecting to Line Out Jack

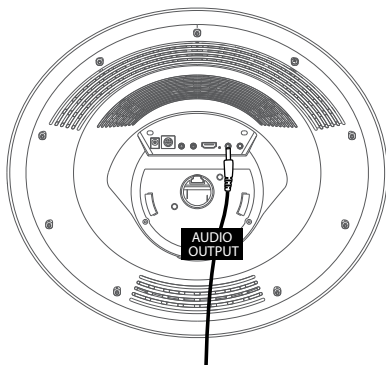


This unit can be connected to another audio system for greater audio output via 3.5mm AUX cord (not included).

Plug one end of AUX cord into the **LINE OUT** jack located on the rear of the machine.

Plug the other end of the AUX cord into the Line In jack on your separate audio device. You may need to refer the instructions of your separate audio device for more details.

Connecting the Unit to a TV

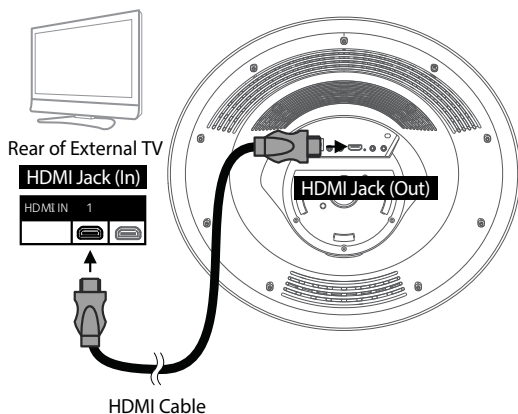

The video and lyrics will be displayed on the built-in screen. You may also want to connect a TV to display a larger image (follow the steps below):

Plug the HDMI cable (not included) into the HDMI Jack on the back of the unit. Plug the other end of the HDMI cable into the HDMI input on your TV.

Notes:

- This unit can be used with or without a TV.
- Also refer to the TV's or external unit's User Guide.