# **S**UBIIK

## goRAN<sup>™</sup> LTE Base Station

User Manual







## Copyright

Copyright © 2023 Ubiik Inc. All Rights Reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of Ubiik Inc.

## Disclaimer

The contents of this document are subject to revision without notice due to ongoing progress in methodology, design and manufacturing. Ubik Inc. shall not be held liable for any error or damage of any kind resulting from the use of this document.



## Table of Contents

1. FCC Statement	4
1.1. Overview	4
1.2. Radiation Exposure Statement	4
1.3. Professional Installation Statement	5
1.4. Safety Statement	5
1.5. General Hazard Statement	6
2. Product Overview	7
2.1. Introduction	7
2.2. Modules & Interfaces	7
3. Deployment	10
3.1. Architecture	. 10
3.2. Deployment Scenarios	.11
3.3. Multiple Deployments	. 12
4. Data security	14
5. Installation	. 16
5.1. Assembly	. 16
5.2. Grounding	.17
5.3. Mechanical Drawings	. 18
5.4. Cable & antenna connection	. 19
6. Starting up	.21
6.1. Network Connectivity	.21
6.2. Options	. 23
6.3. UEs connection troubleshooting	.23
7. Network Management System (Ubiik BSMS)	25
7.1. BSMS overview	. 25
7.2. Base Station	. 26
7.2.1. eNodeB	. 26
7.2.2. EPC	.30
7.2.3. OVPN Upload	35
7.2.4. Task Log	.35
7.3. End Device	. 37
8. Admin Config Tool (ACT) software	38
8.1. Installation	38
8.2. Management	.38
9. Specifications	.42
9.1. System Specification	. 42
9.2. Features	43
Appendix A Terminology abbreviations	46
Revision history	. 50
Contact	.50



## 1. FCC Statement

### 1.1. Overview

The goRAN<sup>™</sup> LTE Base Station complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial or industrial installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one of the following measures.

Method	Action	
1	Reorient or relocate the receiving antenna	
2	Increase the separation between the device and receiver	
3	Connect the equipment into an outlet on a circuit different from that to which the receiver is connected	
4	Consult the dealer or an experienced RF technician for help	

Table 1.1: Approaches to correcting interference

#### **CAUTION!**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

## 1.2. Radiation Exposure Statement

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of



exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 33 inches (84 cm) during normal operation.

Techn ology	Brand	Model	Freq. range	Antenna gain	Antenna Type
SRD 4	Mimomax	ANT-750-800-016-P D0H	ANT-750-800-016-P 757 ~ 788 MHz 7		Panel
SRD 3	Mimomax	ANT-757-788-012-P D0H	757 ~ 788 MHz	12 dBi	Panel
SRD 2	Invax	DS0753-3801NM	757 ~ 788 MHz	7.8 dBi	Dipole
SRD 1	Invax	DS0753-1053WNM	757 ~ 788 MHz	3.83 dBi	Dipole
GNSS	Jinchang	JCA225-N	1561.098 ~ 1602 MHz	5 dBi	RHCP
LTE	Grand-Tek	OA-LTEWB-035-C0- UB	1850 - 1910 MHz 1710 - 1755 MHz	1.8 dBi 0.6 dBi	OMNI

Table 1.2: Antenna information (WiFi/SRD)

### 1.3. Professional Installation Statement

- 1. Installation personnel: This device is designed for specific applications and needs to be installed by qualified personnel who have RF and related regulations knowledge. The general user should not attempt to install or change the settings.
- 2. Installation location: The device should be installed at a location where the radiating antenna can be kept 33 inches (84 cm) from any nearby person in normal operating conditions to meet regulatory RF exposure requirements.
- 3. Installation procedure: Please refer to the procedure for mounting the device to a wall or pole.
- 4. Warning: Please carefully select the installation position and make sure that the final output power does not exceed the limits set in relevant rules. Violation of rules could lead to serious federal penalties.

## 1.4. Safety Statement

All instructions, warning and caution statements that accompany this device must be strictly followed at all times to ensure its safe use. Observe all warning and caution symbols that are fixed to this device. This device has been designed with the utmost care for the safety of installers and users. However, when using this device, basic safety precautions should always be followed to reduce the risk of injury and electric shock. Do not cover the device or block the



airflow to the device with any other objects. This device was qualified under test conditions that included the use of the supplied cables between system components.

To comply with regulations, the user must use the cables supplied with the unit (including power adapter) and follow the installation guide. Place the unit to allow for easy access when disconnecting the power adapter from the main wall outlet. Operate this device only with the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your facility, consult your dealer or local electricity provider.

Do not use this product near water, for example a swimming pool or a bathroom. Keep the device away from excessive heat and humidity and keep the device free from vibration and dust. Wipe the unit with a clean, dry cloth. Never use cleaning fluid or similar chemicals. Do not spray cleaners directly on the unit or use forced air to remove dust.

Avoid installing or using this product during an electrical storm - there may be a remote risk of electric shock from lightning. During electrical storms, for added protection from lightning or power surges we suggest unplugging the unit from the wall outlet and disconnecting all cables. For safety reasons, only authorized service technicians should open the device. If the device is opened the warranty will become void. The device may also affect medical equipment – we recommend checking any potential impact on medical equipment prior to use. This device, like other radio devices, emits radio frequency electromagnetic energy, but operates within the guidelines found in radio frequency safety standards and recommendations. It is recommended that the minimum operating distance from the installed Base Station to person is 33 inches (84cm).

### 1.5. General Hazard Statement

Safety notes are marked with symbols. Ignoring the safety notes may lead to personal injury, damage to the instrument and malfunctions. Signal Words identify the hazard severity level as the following:

Word	Meaning	
DANGER	Indicates an extremely hazardous situation which, if not avoided, will resin death or serious injury, permanent damage to equipment or large fines and penalties	
WARNING	Indicates a hazardous situation which, if not avoided, could result in serious injury or damage to equipment and moderate fines or penalties	
CAUTION	Indicates a hazardous situation which, if not avoided, could result in min injury or minor damage to equipment or minor to moderate penalty fees	
NOTICE	Indicates a hazardous situation not related to personal injury or damage to equipment	

Table 1.5: Safety notes



## 2. Product Overview

### 2.1. Introduction

The goRAN<sup>™</sup> LTE Base Station is an innovative and cost-effective solution for creating a private LTE (pLTE) IoT network. The solution utilizes NB-IoT technology in the 700MHz Upper A Block, which is standardized by 3GPP for NB-IoT and designated as LTE Band 103.

Offering a flexible cellular approach to low-power, long-range networks, the goRAN<sup>™</sup> LTE Base Station provides a solution-in-a-box for building an LTE network either utilizing a user's specified core network or one built into goRAN<sup>™</sup> directly.

Supporting bidirectional wireless communication for both stationary and mobile IoT devices, the goRAN<sup>™</sup> LTE Base Station is the ideal solution for remote data collection, monitoring and management of IoT devices. With a Linux operating system to allow for easy plug-and-play operation and connection to the cloud via either Power over Ethernet (PoE) or LTE backhaul, the goRAN<sup>™</sup> LTE Base Station combines affordability with the scalability, spectral efficiency and security brought by NB-IoT technology.

By leveraging both LTE Band 103 spectrum and the advantages of NB-IoT such as long range, carrier-grade security and improved propagation, the goRAN<sup>™</sup> LTE Base Station allows users to establish cost-effective, resilient and future-proof private LTE networks.

#### Figure 2.1: goRAN™ LTE Base Station

### 2.2. Modules & Interfaces

The items listed in Table 2.2-1 are included as standard options for the goRAN<sup>™</sup> LTE Base Station. An example of the accessories included as part of this standard offering can be seen in Figure 2.2-1. Note that the unit provided is configured to the user's specifications during the ordering process, and the actual accessories may vary from those shown in the diagram.







Ref	Item	Qty
А	goRAN™ LTE Base Station	1
В	GPS antenna	1
С	RF Antenna	1
D	Power-Over-Ethernet (PoE) injector	1
E	Cable grip for Ethernet	1
F	Mounting kit	1
G	Backhaul LTE antenna	1

Table 2.2-1: Items included in a standard goRAN™ LTE Base Station product offering



Figure 2.2-1: Functional Items included in a standard goRAN™ LTE Base Station product offering

Figure 2.2-2 and Table 2.2-2 below depicts the goRAN<sup>™</sup> LTE Base Station, illustrating all the available ports, interfaces, and LEDs. Note that this is the rear view of the unit. Instructions for connecting each element are provided in the goRAN<sup>™</sup> Installation Guide.

The goRAN<sup>TM</sup> LTE Base Station can be shipped with Evaluation kits (EVKs) that serve as User Equipment (UE). These kits are intended for test purposes and evaluating the features and capabilities of the goRAN<sup>TM</sup> LTE Base Station. Typically, users have the option to request the EVKs during the ordering process.

## SUBIIK

Ref	Item	Ref	Item
А	RF Antenna connector	E	SIM card slot
В	goRAN™ LTE Base Station	F	White and green LEDs
С	GPS antenna connector	G	Backhaul LTE antenna connector
D	Ethernet port (PoE)		

### Table 2.2-2: Interfaces & ports



Figure 2.2-2: Interfaces & ports



## 3. Deployment

## 3.1. Architecture

The goRAN<sup>TM</sup> LTE Base Station can be configured to operate with the eNB (evolved NodeB) and built-in EPC (Evolved Packet Core) or with the eNB and external EPC. The first option allows customers to easily deploy the entire LTE network with just one goRAN<sup>TM</sup> unit. Customers need to establish a connection from the goRAN<sup>TM</sup> LTE Base Station to the Application Server. Figure 3.1-1 illustrates the architecture of the goRAN<sup>TM</sup> LTE Base Station with a built-in EPC.



Figure 3.1-1: goRAN™ LTE Base Station with built-in EPC

Configuration with an external EPC is used to deploy a network with multiple base stations to extend the service area. In this scenario, each  $goRAN^{TM}$  LTE Base Station connects to the EPC using the standard S1 interface, as shown in Figure 3.1-2.



Figure 3.1-2: goRAN™ LTE Base Station and external EPC

v.1.0 b103



## 3.2. Deployment Scenarios

The goRAN<sup>TM</sup> LTE Base Station can be deployed as a private network by a customer, as shown in Figure 3.2-1. In this configuration, the built-in EPC is utilized, and SIMs are provisioned on the goRAN<sup>TM</sup> HSS (Home Subscriber Service). The goRAN<sup>TM</sup> LTE Base Station performs the function of authenticating the UEs in the network.



Figure 3.2-1: goRAN™ LTE Base Station Network deployed as a private network

In scenarios aimed at extending the range of an existing RAN (Radio Access Network), the goRAN<sup>TM</sup> LTE Base Station can be deployed, as shown in Figure 3.2-2. The goRAN<sup>TM</sup> LTE Base Station serves as an eNB and interfaces with the EPC within the customer's network. In this configuration, the goRAN<sup>TM</sup> LTE Base Station does not handle UEs authentication; instead, the SIMs are provisioned on the HSS of the external EPC.



Figure 3.2-2: goRAN™ LTE Base Station deployed as an eNB to extend a customer's network





Additionally, the goRAN<sup>™</sup> LTE Base Station can be deployed as a private network with a built-in EPC and connected to an external HSS using the S6a interface, as shown in Figure 3.2-3. This setup is suitable for extending the range of an MNO (Mobile Network Operator) network and can also be employed when utilizing the HSS of a SIM provider, which might be deployed in the cloud. In this case, the goRAN<sup>™</sup> LTE Base Station doesn't handle UEs authentication, and SIMs are provisioned on the operator's HSS or the HSS of the SIM provider.



Figure 3.2-3: goRAN<sup>™</sup> LTE Base Station deployed as a private network with a connection to the HSS of the MNO or SIM provider

## 3.3. Multiple Deployments

Depending on the coverage area size and the business requirements, deploying a network of multiple base stations, similar to how mobile operators establish public networks with numerous base stations and a centralized EPC, might be essential. Leveraging the scalability offered by the 3GPP standards, the goRAN<sup>™</sup> LTE Base Station can create networks of varying scales. In multiple deployments, each goRAN<sup>™</sup> connects to a central EPC through a standard S1 interface, and the internal EPC of the goRAN<sup>™</sup> units is inactive. For this network configuration, deploying a dedicated EPC, either on-premises or in the cloud, is crucial. This setup accommodates networks ranging from two to several hundred goRAN<sup>™</sup> units, providing customers with adaptability and scalability. Additional base stations can be seamlessly integrated into the existing network after the initial deployment of the goRAN<sup>™</sup> network with a single external EPC.



There are two network configuration options available for  $goRAN^{\text{TM}}$  backhaul interfaces. The first configuration employs Ethernet connectivity, allowing all  $goRAN^{\text{TM}}$  units to establish connections and communicate with the EPC via the local network infrastructure. The second configuration utilizes LTE Cat 1 backhaul interfaces for seamless connectivity between  $goRAN^{\text{TM}}$  units and the EPC. When  $goRAN^{\text{TM}}$  is configured to use the LTE Cat 1 backhaul interface, data from  $goRAN^{\text{TM}}$  is transmitted to the mobile operator's network. The network then forwards the data to the customer's endpoint, typically employing a dedicated APN (Access Point Name) and secure communication channels. In Figure 3.3, both backhaul interface options are displayed.



Figure 3.3: Backhaul options for multiple deployments of goRAN™ LTE Base Stations



## 4. Data security

The goRAN<sup>™</sup> LTE Base Station provides a high data security standard that is defined by LTE design. LTE is the only mature wireless technology to enable protection of session set-up and administration signals (control plane) separately from the data payload itself (user plane). Through its Authentication and Key Agreement protocol, LTE secures control plane communications independently from user plane data. LTE includes cryptographic protections for control plane communications between the device and three different network elements to prevent attackers from spoofing devices and/or network elements to compromise the system.

To protect control plane communications between the device and the HSS (Home Subscriber Server), LTE uses an application called USIM that typically runs on the UICC (Universal Integrated Circuit Card). Through USIM, LTE supports the authentication of the user to the device as well as authentication of the device to the HSS, which manages customer information and authorizes the device's access to the network. The MME (Mobile Management Entity) is also a core network element; it manages device mobility on the network. Using a feature called NAS (Non-Access Stratum) security, LTE verifies, encrypts, and protects the integrity of control plane signaling between the device and the MME separately from other interfaces. For protection of the device's control plane communications with the radio network, LTE employs AS (Access Stratum) security, which provides verification and integrity protection as well as encryption for control plane signaling between the device and the base station.

LTE provides enhanced security measures to protect the user data contained in the payload of the communication. For the user plane, LTE utilizes integrity verification and encryption of data sent between the device and the core network. The Figure 4 shows described security levels.



Figure 4: Data security levels



NB-IoT devices provide an additional layer of security, due to their strict adherence to 3GPP specifications, the high security level industry standard, and the highly competitive market they are produced in. Such devices are typically designed with built-in security features, such as secure access, secure boot and firmware updates, to help prevent unauthorized access and tampering. Supported by major mobile equipment, chipset and module manufacturers, private LTE networks benefit from all the security features of 3GPP standards, such as support for user and device authentication, data encryption, data integrity verification and mobile equipment protection.



## 5. Installation

## 5.1. Assembly

The pole mounting kit is included as part of the standard offering, providing a mounting system suitable for typical installation environments. Using this kit, the goRAN<sup>™</sup> LTE Base Station can be securely mounted directly onto a pole with a diameter ranging from 4 to 12 inches (100 mm to 300 mm). Note that the wall mounting kit can be chosen during the ordering process. Table 5.1 and Figure 5.1 below shows the mounting items.

Qty	Item	Qty	Item
1	goRAN™ LTE Base Station	4	Washers
1	Mounting Plate	4	Spring Washers
4	Screws	2	Hose Clamps

Table 5.1: The items of the pole mounting kit



Figure 5.1: The items of the pole mounting kit

v.1.0 b103



Step 1. Use the four screws, spring washers and washers (3) to attach the mounting plate (2) onto the goRAN<sup>™</sup> LTE Base Station (1).

Step 2. Pass the two Hose Clamps (4) through the matching hole in the mounting plate (2) as shown.

Step 3. Loop the open Hose clamps around the pole chosen for the installation and tighten the screw until the unit is secure.

## 5.2. Grounding

Ensure that the installation of the goRAN<sup>TM</sup> LTE Base Station is conducted in accordance with all relevant national and local building and safety codes. Even if grounding is not mandatory according to applicable regulations and national codes, it is highly recommended to ground the unit. This precaution will provide protection against voltage surges and static charges. The two grounding screws  $\prod_{i=1}^{i} x_{12}$  (marked ) are located on the back of the unit, see Figure 5.2 below). Table 5.2 displays the grounding items included in a standard goRAN<sup>TM</sup> LTE Base Station product offering. Note that the grounding cable is not part of the standard offering.

Qty	Item	Qty	Item
2	Screws	2	Spring Washers
2	Washers		





Figure 5.2: The items of the grounding



Step 1. Connect one end of a grounding cable (2) to the grounding screw (3), then connect the grounding screw to the one of two grounding points on the back of the unit (1) and securely tighten it.

Step 2. Connect the opposite end of the grounding cable to a reliable ground (earth) connection.

#### WARNING!

Always connect the grounding cable before connecting any other cables.

## 5.3. Mechanical Drawings



Figure 5.3-1: Mechanical drawings: mounting plate

Note that all dimensions are in mm unless otherwise stated.









Figure 5.3-2: Mechanical drawings: screw, spring washer, washer, hose clamp, anchor & screw

## 5.4. Cable & antenna connection

The standard goRAN<sup>™</sup> LTE Base Station requires an RF antenna, backhaul LTE antenna and GPS antenna. The process of attaching these antennas is shown in Figure 4.4-1.



Figure 5.4-1: Attaching the antennas to the goRAN™ LTE Base Station



The goRAN<sup>™</sup> LTE Base Station is supplied without an Ethernet cable in the standard package, which means that users should utilize their own Cat 5e or Cat 6 Ethernet cable with shielding to meet the IEEE 802.3bt standard requirements for the backhaul connection. The user should attach the cable grip to the Ethernet wire and plug one end into the goRAN<sup>™</sup> LTE Base Station, and the other end into the local network router, as shown in Figure 5.4-2. If using an outdoor version of the goRAN<sup>™</sup> LTE Base Station, screw in the cable grip to ensure a water-tight seal suitable for outdoor use. For an actual outdoor installation, cable grips must be applied to guarantee IP67 ingress protection.

#### WARNING!

Choose the Cat 5e or Cat 6 Ethernet cable with shielding to meet the IEEE 802.3bt standard requirements to supply POE injector.



Figure 5.4-2: Connecting the shielded Cat 5e ethernet cable and inserting the SIM card

The goRAN<sup>TM</sup> LTE Base Station comes with a Power-Over-Ethernet (PoE) injector customized to the user specification during the ordering process. Once connected to power, the goRAN<sup>TM</sup> LTE Base Station will attempt to connect to a network automatically. The unit can be reset by disconnecting and reconnecting the injector. This may be required should a connection error occur (as indicated by the green and white LEDs.)

To enable LTE backhaul, the user should insert a SIM card into the unit. Figure 5.4-2 shows the SIM card slot, along with the correct insertion direction.



## 6. Starting up

### 6.1. Network Connectivity

After completing the installation process of the goRAN<sup>™</sup> LTE Base Station, it's crucial to conduct basic checks to confirm its connectivity to the local network and the internet. The following sections offer guidance on performing these checks.

Before shipment, users can request Ubiik engineers to configure the goRAN<sup>™</sup> LTE Base Station with a static IP address. By default, however, the goRAN<sup>™</sup> LTE Base Station is set up for DHCP. For the DHCP-configured version, the user's local network router should be configured to assign an IP to the goRAN<sup>™</sup> LTE Base Station via DHCP. To verify the IP address assigned to the goRAN<sup>™</sup> LTE Base Station via your router and DHCP, log into your router and check the IP assignment for the MAC address associated with your goRAN<sup>™</sup> LTE Base Station. The goRAN<sup>™</sup> LTE Base Station's MAC address label can be found on a label attached to the unit. If, for any reason, this MAC address is not available, please contact Ubiik Support.

To perform a basic connectivity check, observe the green and white status LEDs. These LEDs are positioned on the goRAN<sup>™</sup> LTE Base Station, as indicated in Figure 6.1-1.



Figure 6.1-1: The location of the green and white status LED

Table 6.1 provides various states for the Status LED. There are two LEDs present, a white and a green. These LEDs, together, will be in one of four states. If the goRAN<sup>™</sup> LTE Base Station is operating correctly and the S1 interface is successfully established, the LEDs should be in a solid state. The LEDs should cycle through all other states to achieve this solid state. If for some reason, the last state is not reached, a problem exists.

Green LED	White LED	System Status
Off	Off	Power Off, Disconnected



Green LED	White LED	System Status	
Off	On	Power On, OS Running	
Flashing	On	Power On, System Running	
On (Solid)	On	Power On, System Running and Connected to Core Network	

#### Table 6.1: LEDs and system status

After confirming that the goRAN<sup>™</sup> LTE Base Station is connected to the local network, the next step is to ensure it has Internet access. To do this, the user should establish an SSH connection to the unit from the computer using the following command, as demonstrated in Figure 6.1-2:

ssh -p 45296 guest@XXX.XXX.XXX.XXX

Make sure to replace XXX.XXX.XXX.XXX with the goRAN's IP address. When prompted, enter the username guest and the password guest. Once the SSH connection is established, the user can verify Internet connectivity by performing a ping operation to Google's primary domain using the following command:

ping -c 4 8.8.8.8



Figure 6.1-2: Pinging the Internet from the goRAN™ LTE Base Station





### 6.2. Options

Table 5.2 showcases the available customizable options that come with the goRAN<sup>™</sup> LTE Base Station. The goRAN<sup>™</sup> LTE Base Station is pre-configured by Ubiik based on user-provided specifications and spectrum licensing requirements prior to delivery.

Options		Description	Sub-options
A	Backhaul	Configured for Ethernet or LTE backhaul	- Ethernet - LTE
В	Installation	Configured for various installation location types	- Mounting Types - Cable Types - Power Supply Types

Table 6.2: Options available for the goRAN<sup>™</sup> LTE Base Station, configured at time of ordering

#### WARNING!

The user is responsible for setting up the goRAN<sup>™</sup> LTE Base Station in a confined environment to validate spectrum configurations. It is the user's responsibility to ensure that regional spectrum licensing requirements are met during testing and installation.

### 6.3. UEs connection troubleshooting

This section addresses common issues related to the connection of UEs to the goRAN<sup>™</sup> LTE Base Station. It is important to note that the UE needs to be properly set up to establish a connection with the goRAN<sup>™</sup> LTE Base Station. Users can refer to the following key settings that should be configured on the UE side to ensure a successful connection.

- 1. APN (Access Point Name). By default, the goRAN<sup>™</sup> LTE Base Station supports three APNs:
  - ""(set empty string in UE for this APN) APN for data service
  - "internet" APN for data service
  - "ims" APN for VoLTE service
- 2. Band. Users can refer to the AT command manual of the module used in their UE to learn how to set the band.
- 3. PLMN and network name. In some cases, UEs are configured to operate only with specific networks. To ensure compatibility with the goRAN<sup>™</sup> LTE Base Station, users can verify the PLMN and network name settings on their UE. They can do this by checking if the PLMN selection mode is set to automatic. Here is an example of such an AT command:

AT+COPS? - this command checks the PLMN and network name settings.



+COPS: 0,0,"UBIIK" - in the module's reply, the first index "0" indicates that the network is set to automatic mode.

- 4. There are specific commands for the Cavli DDK (Device Development Kit) that the user needs to input in the Cavli DM terminal after upgrading the image:
  - ps nvm set ciotopt support\_ue\_opt 3 This command sets CIoT EPS optimization function to "3: Both CP and UP CIoT opt."

ps nvm set ciotopt pref\_ue\_opt 0 - This command sets CloT EPS optimization preference to "0: No Preference."



## 7. Network Management System (Ubiik BSMS)

## 7.1. BSMS overview

The BSMS (Base Station Management System) is a cloud-based management platform accessible to users from anywhere via a web browser. Alternatively, it can be deployed on the customer's infrastructure (on-premises). This system encompasses functions for fault management, configuration management, and accounting management. It empowers users to oversee and configure both individual goRAN<sup>™</sup> LTE Base Stations and entire networks comprising multiple units. The BSMS supports diverse aspects of goRAN<sup>™</sup> LTE Base Station management, including eNodeB monitoring and configuration, EPC management, alarm monitoring, SIM card provisioning, end-device monitoring, unit firmware upgrades, and more.

#### CAUTION!

The goRAN<sup>TM</sup> LTE Base Station is configured during manufacturing, including parameters such as radio frequency and output power, in compliance with regulations specific to the territory where the base station is deployed. This pre-configured setup eliminates the need for additional configuration. However, this User Manual outlines the possibility of adjusting a wide range of technical parameters based on the hardware and software capabilities. It's important to note that not all parameters may be adjustable by the user, depending on the specific configuration limitations. An exception to this might be the goRAN<sup>TM</sup> LTE Base Station provided for testing purposes. In any case, users must adhere to regional regulatory requirements during the configuration process. For further information, please contact Ubilk Support.

A user will have received login details for the BSMS with their  $goRAN^{TM}$  LTE Base Station package or via email after their purchase. After navigating to <u>https://bsms.ubiik.com/</u>, the user should be presented with a login screen as shown in Figure 7.1.

-

Figure 7.1: BSMS login portal



## 7.2. Base Station

### 7.2.1. eNodeB

One of the primary features of the goRAN<sup>™</sup> LTE Base Station is its eNodeB functionality, which essentially comprises RAN (Radio Access Network) operations. BSMS enables the configuration of each specific base station in the network, provides information about all base stations within the customer's network, and includes a firmware upgrade tool, as detailed in the following section.



Figure 7.2.1-1: eNodeB Configuration page

v.1.0 b103



The Configuration page allows for the simple configuration of parameters related to three main types: RF parameters, network parameters, and basic EPC settings. These parameters can be set by selecting the serial numbers of the goRAN<sup>TM</sup> LTE Base Station, retrieving the configuration from the BSMS database, applying the changes to the database, and subsequently to the goRAN<sup>TM</sup> LTE Base Station itself. To change the parameters, the user selects the SN (Serial Number) of the goRAN<sup>TM</sup> LTE Base Station and retrieves the parameters to populate the GUI. Then the user can proceed to alter the RF and network parameters, and also choose the EPC mode, setting it to built-in EPC or external EPC. Figure 7.2.1-1 illustrates an example of the Configuration page settings.

The figures below illustrate the BSMS interface with a brief explanation of the meaning of all the parameters. Note that depending on the specific goRAN<sup>™</sup> LTE Base Station factory hardware configuration, some sub-options within a given parameter may or may not be accessible. The eNB name can be changed to a specific name for user convenience, particularly in scenarios of multiple deployments when numerous goRAN<sup>™</sup> LTE Base Stations are managed under a single BSMS account.

Figure 7.2.1-2 shows the RF parameters. Band can be changed by users only for specific factory hardware configurations.

Band		Туре		eNodeB PPS sync sour	ce
8	194	NB-IoT	1×	Internal	.19
Coverage level		Duplex type			
3	19	Standard duplex	O Non-standard du	płex	

Figure 7.2.1-2: RF parameters

Coverage Level can be further used to provide coverage enhancement. To enable three coverage levels (1, 2 and 3) users should choose option 3.

As shown on Figure 7.2.1-4, users can choose eNodeB PPS Sync Source. There are two sources of synchronization available: Internal and GPS. Note that GPS synchronization source should be chosen only in cases where antenna placement has been properly considered to allow for GPS signal access. Overwise, proper Base Station operation may not be guaranteed.

Internal	Ŷ
Internal	
GPS	

Figure 7.2.1-4: Synchronization source options



The user can also manually set up EARFCN values, for their chosen band, as shown in Figure 7.2.1-5. Depending on the goRAN<sup>™</sup> LTE Base Station's factory hardware capabilities, the user may choose to operate in either Standard Duplex or Non-Standard Duplex mode. Setting up Standard Duplex only requires setup of the DL EARFCN parameter. The second parameter, UL EARFCN, is set automatically to match standard LTE band settings. In the case of Non-Standard Duplex, users must set up both, DL EARFCN and UL EARFCN, parameters. The frequency values for the user's chosen EARFCN are shown below the text fields to help double check user selections.

Coverage level		Duplex type	
З	14	Standard duplex  Non-standa	ird duplex
DL EARFCN (3451 - 3798)		UL EARFCN (21451 ~ 21798)	Duplex spacing
3463		21463	45 MHz
Freq: 926.3 MHz		Freq: 881.3 MHz	

#### Figure 7.2.1-5: EARFCN configuration for Standard Duplex

The user can set the UE Max. power (dBm), which allows for limiting the maximum power of the devices if needed for specific IoT use cases. By default, the value is set in accordance with UE's power class 3 as specified by 3GPP, which is 23 dBm.

The user can adjust the output power of the base station's transmitter, which is configured in the Tx power (dBm) field. As shown in Figure 7.2.1-6, the value can range from -30 to 30 dBm. It's important to note that the Tx power may be subject to regulatory limits. For detailed information about a specific user base station, please contact <u>Ubik Support</u>.

UE Max, power (dBm) (0 - 23)	Tx power (dBm) (-30 - 10)
23	30

Figure 7.2.1-6: UE Max. power and Tx power

In Figure 7.2.1-7 below, eNodeB parameters are shown. TAC (Tracking Area Code) provides a location code within a given network. eNodeB ID, Cell ID and PCI are identifiers for each eNodeB within the network.



TAC (0 - 65535) 9			
eNodeB ID (00000 - FFFFF)	Cell ID (00 - FF)	PCI (0 - 503)	
C5021	01	1	

#### Figure 7.2.1-7: eNodeB parameters

The user can change the PLMN number (Public Land Mobile Network), which consists of the MCC (Mobile Country Code) and MNC (Mobile Network Code). The option to modify this code is shown in Figure 7.2.1-8. Note that the PLMN forms the first digits of the IMSI number.

PLMN	i number (Sor6dig	gits in total, up to 6 numbers)	*Requirest
1.	99970	•	
	+		

#### Figure 7.2.1-8: PLMN number

The goRAN<sup>™</sup> LTE Base Station is configured by default to operate with a built-in core. However, there are use cases where the user may prefer to connect the goRAN<sup>™</sup> LTE Base Station to an external EPC instead of using the default internal one. In such cases, the user needs to choose the External option, as shown in Figure 7.2.1-9, and set the EPC option, which includes the MME IP address and GTP IP address. Note that the MME IP address refers to the IP address of the S1 interface on the EPC, while the GTP IP address is the IP address obtained by the goRAN<sup>™</sup> LTE Base Station.

EPC	MME IP add	ress					
External O Built-in	127		0	1.4	1	100	
	GTP IP addr	ess					
	127		Ð	- la	1	1	

#### Figure 7.2.1-9: Basic EPC settings

Once the parameters have been modified, the user can apply them by clicking the Update button as shown in Figure 7.2.1-10. Note that it may take up to 60 seconds for the updated configuration to be received by the goRAN<sup>™</sup> LTE Base Station.



Update devi	ce	
SN N	SC6223800014	Update

Figure 7.2.1-10: Applying parameters to goRAN™ LTE Base Station

### 7.2.2. EPC

One more primary feature of the goRAN<sup>™</sup> LTE Base Station is EPC (Evolved Packet Core) functionality. BSMS allows the user to:

- Set the network name and PLMN.
- Configure power-saving features such as PSM and eDRX for UEs.
- Set up an external HSS (Home Subscriber Server).
- Configure the PDN (Packet Data Network) settings.
- Provision the SIM cards.

The example of the Configuration page is shown in Figure 7.2.2-1 below. The following figures illustrate the BSMS interface with a brief explanation of the meaning of all the parameters.

After entering the SN (Serial Number) of the goRAN<sup>™</sup> LTE Base Station and retrieving the EPC configuration, it is possible to modify the EPC parameters using the options displayed in the figures below. Note that depending on the specific hardware configuration of the goRAN<sup>™</sup> LTE Base Station, certain sub-options within a given parameter may or may not be accessible.

Figure 7.2.2-2 shows the network name settings. The Network name serves as a descriptive name for the network and can include a combination of alphanumeric characters, as well as the network operator's brand name or any other identifier chosen by the user. The Network short name, on the other hand, is a shorter version of the network name. The network names, including the Network name and Network short name, serve as additional identifiers to the PLMN identifier and can be displayed on user equipment.



### goRAN™ LTE Base Station User Manual

S Beter Baston				antibilities .	
T Bastdament	Therefore Arec 4	Lottpanie 📻	etrieve the exist	tipo parame	tern of the unit
T total and			ith the indicate	d SN from th	BSMS database
10000000000000000000000000000000000000	Get parameters hors day	1 <b>1</b>	Manager and the second seco		Adate .
A month	an article			Tan.	
* 100 *					
Configuration	Bultim			1	2
1 Derry Ageneti	Network rooms to the second		Interest during	and the second second	Hodify the
I ten teg	ANTIK Sett returns		18439-		network
B fathers -	1 POWER Comments	and a factor of the second	GPP P address	the second is	names, PLMN
	T3412 association in an and a T3412 association Torceof (a) Insulated (1) Insulated 21953 cycle forward	12204 Recent - Endend - Roaked EDRC#TW AR 12	ADMX PTW WE ST	unna	and set up the built in or external eNB
ASS AND A	- buint - buint			i	
Set up the	L			!	
Built-In or external HSS	HES		Co	nfigure the p ving feature	power-
	FONS				
	749	And P	attenti		
	100	- 142	390		Conseller.
	691	Last IP	attent		Douny De DOMe
	defects	174		214	CHEP LINS
	Patters will a	UNL P	and the second s		
	04 Dw. #%			1	
	-90	Providy	head		
	(*))	10,			
	SM card info				
	-				
	INTE			1	ET.
	1 Mill Algo.	Mininger		(+)	Fill in the SIM
	8494			(10090)	edd the SIMs to
	-049	Providence and any providence		00000	the HSS
				inee.	
	IMPE	anaparaman plant, by a con			
	IMPO -	alg. (ditarananadadat)		•	
		Chan	he parameters		
		to th	ie unit		

Figure 7.2.2-1: EPC Configuration page

v.1.0 b103

#### goRAN™ LTE Base Station User Manual



Network name (s 50 characters)	Network short name (\$ 20 characters)
Ubiik test network	Ubiik

Figure 7.2.2-2: Network Name

The user can configure the PLMN number, as depicted in Figure 7.2.2-3. As per the standard, this number should also be set on the EPC and match the number on the eNodeB side. By default, the goRAN<sup>TM</sup> LTE Base Station employs the internal eNodeB. However, it's possible to connect an external eNodeB to the built-in goRAN<sup>TM</sup> EPC. To do this, the user needs to switch the eNB to External mode and configure the GDP IP address, which corresponds to the IP address of the external eNodeB.

PLMN (5 - 6 numbers)	eNB	GTP IP address
99970	Built-in 🔘 External	127 0 1 100

#### Figure 7.2.2-3: PLMN and Built-in/External eNB settings

The user can configure specific power-saving features: PSM (Power Saving Mode) and eDRX (Extended Discontinuous Reception), as shown in Figure 7.2.2-4. By default, the features T3412 extended forced, T3324 forced, and EDRX cycle forced are Disabled. This signifies that UEs can determine the timers on their own, and these timers will be accepted by the goRAN<sup>TM</sup> LTE Base Station. If the user switches these timers to Enabled, the values of the timers will be defined by the goRAN<sup>TM</sup> LTE Base Station, and UEs won't be able to change them. To set the PSM feature, two timers need to be configured. The first one is the T3412 extended forced timer, which determines the duration of the device's sleep mode. The second one is the T3324 forced timer, also known as the active timer, which specifies the duration during which the device remains active and can receive paging and user data from the network. Note that the units to be input in these fields should be in seconds.

EDRX PTW WB S1 (0 - 15)
3

#### Figure 7.2.2-4: PSM and eDRX settings

To set the eDRX feature, the user needs to configure the EDRX cycle forced timer, which determines the time period after which the device becomes active. Additionally, the user needs



to set the eDRX PTW (Packet Transmission Window) timer, which indicates the duration when the device's receiver is enabled and the device is available for paging and incoming data. The eDRX PTW timer has two options: EDRX PTW NB S1, specifically used for NB-IoT radio technology, and EDRX PTW WB S1, specifically used for LTE-M radio technology. The values to be entered in these fields are the numbers of the timers, as specified in 3GPP TS 24.008 Table 10.5.5.32. Note that for LTE Cat-1 configuration, the PSM and eDRX features are not applicable.

The user has the option to configure the setup with an external HSS. In this scenario, the internal goRAN<sup>™</sup> EPC handles the UE authentication procedure with the external HSS. An example of this configuration is illustrated in Figure 7.2.2-5. The HSS IPv4 address represents the IP address of the HSS endpoint. The S6 Bind IPv4 address pertains to the goRAN IP address. The Origin realm and Origin host are additional parameters employed in communications through the S6 interface using the Diameter protocol.

HSS							
O Built	-in	🛞 Ext	ernal				
HSS 1P	v4 a	ddress					Origin realm
10		200		1		1	ublik.io
S6 Bin	d IPv	4 add	ress				Origin host
10		50		1	12	1	abc.ubiik.io

#### Figure 7.2.2-5: External HSS settings

The user can modify existing PDNs settings or add a new PDN set, as shown in Figure 7.2.2-6. Each PDN includes a group of parameters such as First IP address, Last IP address, DNS IP address and APN. The UE can choose a specific PDN with a corresponding APN in the network request. For each PDN, there is a specific QoS (Quality of Service) functionality available, which can be enabled by selecting Yes on the right side of the settings bar. QoS includes two parameters: qci (QoS Class Identifier) and Priority level. A detailed description of these parameters is beyond the scope of this document, but they allow for flexible and advanced configuration by experienced users. To add a new PDN, the user needs to click on the + button.



PDNs

	×
First IP address Qo5	
192 168 2 2 Ves No	
Last IP address qcl	
197 168 7 254 9	
DNS IP address Priority level	
8 8 8 8 15	
	First IP address QoS   192 168 2 2   Last IP address qol   192 168 2 254   192 168 2 254   192 168 2 254   192 168 2 254   193 168 8 8

Figure 7.2.2-6: PDNs settings

The goRAN<sup>™</sup> LTE Base Station can be shipped with pre-provisioned SIM cards, in which case all assigned SIM cards are automatically added to the internal HSS. However, if the user needs to add new devices to the network, SIM provisioning actions must be performed.

		×
IMSI	99970000072535	
SIM Algo.	Milenage	II.
SQN	4000000000	(12-997)
OPc	5C4004854F4675C32A2E122364804227	00990
ю	182120113FE499F34608544FEF717881	SHEW
IMPI	999788000872539@test.3gpp.com	
	1. x1p:999700000072539	C
	2. sip:+1113456789539	•
IMPU	3. sip:user529	•
	4, tel:600539	0

#### Figure 7.2.2-7: SIM parameters

As depicted in Figure 7.2.2-7, to add a new SIM, several fields for SIM identifiers and secret keys need to be filled in. Note that SIM parameters and secret keys are essential for identification and encryption purposes, and they should not be made available to third parties.



After making all the necessary updates on the Configuration page, the user should click the Apply button located at the bottom left side of the page to save the new configuration in the BSMS database. Note that it may take up to 60 seconds for the updated configuration to be received by the goRAN<sup>™</sup> LTE Base Station.

### 7.2.3. OVPN Upload

OpenVPN is a virtual private network system that can be employed to establish secure connections through the Internet. BSMS offers users a convenient method for applying OVPN files to the goRAN<sup>™</sup> LTE Base Station. Similar to other pages, the initial step on the OVPN Upload page involves entering the SN in the designated field and clicking on Get. After completing this step, the user can view the existing OVPN file if it was added previously. Subsequently, the user has the option to upload a new OVPN file or replace the existing one, either by clicking or through drag and drop, as depicted in Figure 7.2.3. Note that once the upload is completed, the user should wait for 60 seconds for the settings to be applied.



Figure 7.2.3: OVPN file uploading

### 7.2.4. Task Log

The BSMS provides three types of logs: Configuration update logs, OVPN Upload logs, and FOTA logs. Configuration update logs capture changes made to the eNodeB and EPC configurations. OVPN Upload logs record activities related to OVPN file uploads. FOTA logs document events associated with unit firmware upgrades.

### Configuration

This section contains a log of all configuration updates made by users in the eNodeB Configuration and EPC Configuration sections. An example of these logs is shown in Figure 7.2.4-1 below. The log includes the event ID, SN (Serial Number), Type of configuration change



(eNB or EPC), Start time and Finish time, event State, and User (the user's email address) responsible for the configuration change. The event State can be 'Done' if the configuration is successfully applied or 'Failed' if the update is unsuccessful. In the case of a 'Failed' event, users can contact <u>Ubiik Support</u> for configuration verification. Note that to access events for a specific unit, users should enter the SN, specify a time period for log retrieval, define the event State, and then click the Search button.

\$	Sever Statement Manhagement Kyrk								approhision .	
=	Durthant .		I have been	in carboning i	¢			-		Retrieve the task
1	Real Property	14	In in	antenenta fiart	siste mult	n/weith - M	(11/m)0 h	- 14 -	Taracter	log of the unit with
7	enne:		6							the indicated SN
*	195								Rates	from the BSMS
1	Diffectioned)			100	Tam	Section.	-	. Name	june -	database
-	Taul Log	1	1.944	sogmetere:	IPC .	3812-38-65 38-33-69	3423-39-49 34(29:34	204	nametrickel.com	Constant of the second s
•	-		944		115	10222-30-40 10-10-00	3011-05-09	lune	squerili del con	
	Doly ( Doly of a		( 449)	BOOTTHMANNA -	DPC .	3823-38-46 86/82-86	10017-02-04 28-02-122	lane.	agentikken	
9	Agen.			********	+110	3823-39-44 14-93-39	3423-39-94	204	100000404000	
	ted Design -		942	SCALD HARRING A	DE.	3833-349-44 \$2:47:37	(0001-00-86 10-871-89	000	squet8.44cm	

Figure 7.2.4-1: Task Log: Configuration

### **OVPN Upload**

The OVPN Upload page stores records related to updates of the OVPN (OpenVPN) files. The log consists of the same fields as those found in the Configuration section, with the addition of one extra field - Filename, which corresponds to the name of the uploaded OVPN file, as displayed in Figure 7.2.4-2.

\$	Base Bullers Herseprises for									
=	Destinant		Thurbs	in in the second	a contraposi	hannes				Retrieve the task
1	terr bister		1 31 100			- 18-11	LEMONT State	er - 1	in an a start of the start of t	log of the unit with
× *	ehadel DE	3	L						and the second	the indicated SN from the BSMS
	()why commit		1.00		freese .	Silan bires	Anna Anna	diate.	ine .	database
-	families	-	1.040		MADOWER.	10-10-11-11-11-11-11-11-11-11-11-11-11-1	19031-549-55 812-449-55	344	ingentlishik.com	
¢	Delignment						(Interpretation)	*		
*	Over Option									
8	HOSA									
-	Boll Denne :									

Figure 7.2.4-2: Task Log: OVPN Upload



### FOTA

This section comprises logs of events linked to unit firmware upgrades. Similar to the OVPN Upload page, the FOTA (Firmware Over-The-Air) page includes the Filename field, but in this context, the field pertains to the firmware upgrade file name, as depicted in Figure 7.2.4-3.

Co Sate Satter	and a local diversion of							Appertision -	
S Darman		Thereis	ini marij	I tim					Retrieve the task
T the local	- *	1 14 100			NAME - MAYO	united the	- M -	Control of	log of the unit with
A string	1.4								the indicated SN
***	1.00							Referent 1	from the BSMS
1 convigual				filesee.	diam trea	Treast sizes	bare	tear	database
Toking .		34	MALTHORNE	INE SULL	3825-58-85	3823-34-81	bure	supprisidations	
Configuration		.0	MADD MORENT	pacyos.	3423-38-81 37-89-38	3101-10-61 37149-28	bine.	Ingentification over	
1 Outre Lacoust		- 10	1044310-0001	DROVAL.	3828-38-85 37187138	0023-38-85 17147139	Done	napertilisations.	
B POIN		11	MALLINGING	1000_112	3423-49-20	3021-09-20	pres	agentpublican	
B tradeire	-	39	SCOTTONNES	merol.	3825-88-33 34-88-87	3921-49-31 14-86-85	Dura	appert@ubsk.com	

Figure 7.2.4-3: Task Log: FOTA

## 7.3. End Device

The End Device page is designed for monitoring the status of UEs, which are essentially end devices. This page provides two options for searching:

- Search by BS SN (Base Station Serial Number). The user can select a specific goRAN<sup>™</sup> LTE Base Station by its serial number to access information about the UEs provisioned on that particular unit.
- Search by IMSI. The user can choose an IMSI to retrieve detailed information about a specific UE.

For each UE, the user can access the following parameters: IMSI number, IMEI number, Status, Last Update Time (indicating the time of the last UE activity), IP address assigned to the UE, and the APN used by the UE. The UE's Status can be one of the following: Registered, indicating that the UE is currently attached to the goRAN<sup>™</sup> LTE Base Station's EPC, or Unregistered, signifying that the UE is not currently attached to the EPC. Note that the IP address and APN are displayed only for UEs that have activated the PDN.



## 8. Admin Config Tool (ACT) software

The Admin Config Tool (ACT) is a software deployed on the local network where the goRAN<sup>TM</sup> LTE Base Station is located. It offers configuration and status information, enabling users to adjust the eNodeB output power, check the status of devices registered with the goRAN<sup>TM</sup> LTE Base Station, and download logs. To access the ACT tool, users can visit <u>www.ubiik.com/downloads</u>.

### 8.1. Installation

The ACT operates using Java with JDK version 17 or higher. Before launching ACT, users should ensure that JDK is present on the operating system. Installation instructions for both Windows and Linux operating systems are provided below. Windows:

- 1. Download and extract the ZIP file provided at <u>https://www.ubiik.com/downloads</u> for the Admin Config Tool.
- 2. Open the folder and execute the run.bat file by double clicking.

Linux:

- 1. Download and extract the ZIP file provided at <u>https://www.ubiik.com/downloads</u> for the goRAN™ Admin Config Tool.
- 2. Open a bash terminal and navigate to the root folder of the extracted ZIP file.
- 3. Change file permissions for the run.sh shell script for execution: chmod +x run.sh
- 4. Run the shell script as super user: sudo ./run.sh

### 8.2. Management

Once installed, the ACT provides a way to connect to the IP of a specific goRAN<sup>™</sup> LTE Base Station unit on a user's local network, as shown in Figure 8.2-1. Once connected, three sections are accessible: EPC UEs, Configuration, and Settings.

The Configuration page is the first one displayed. Here, the  $goRAN^{TM}$  LTE Base Station can be remotely restarted using the Restart button, as seen in Figure 8.2-2. The Base Station field provides the ID number of the  $goRAN^{TM}$  LTE Base Station, and the ENB Controller Version shows the version of the  $goRAN^{TM}$  LTE Base Station's software. Another information field is ENB MODE, which indicates the current mode (NB-IoT) of the  $goRAN^{TM}$  LTE Base Station. The unit's power level can be adjusted via the ENB TX PWR field. Users can input an integer in dBm, ranging from -68 to 10 or from -68 to 30, depending on the unit's configuration.



MAR Column	nyalolites whe	(search) (se	
		i	
-			
			Enter the IP
			address and port of the unit on the local network.
			then click Connect to establish a
			connection

Figure 8.2-1: ACT connection to the goRAN™ LTE Base Station

Users can access various parameters related to the operating frequency of the goRAN<sup>™</sup> LTE Base Station. These parameters include LTE BAND, which corresponds to the frequency number according to the 3GPP standard, Bandwidth, UL EARFCN, and DL EARFCN indicating frequency channel numbers, as well as LTE DL FREQ and LTE UL FREQ, denoting frequencies in Hz. Additionally, users can verify the status of S1 and S6 connections using the S1 STATUS and S6 STATUS fields, respectively. This verification is crucial when using configurations with external EPC or external HSS.



Figure 8.2-2: Configuration page



The status of the UEs registered to the goRAN<sup>™</sup> LTE Base Station's EPC can be monitored via the EPC UEs page, as shown in Figure 8.2-3. The EPC UEs page displays the UE IMSI and Status for each UE attached to the EPC. The Status shows Registered if the UE is currently attached to the EPC. The status changes to Unregistered if the UE performs the detach procedure. Note that after powering off the UE without performing the detach procedure, the status will remain as Registered until the next TAU procedure is missed by the UE. The TAU period is defined by the goRAN<sup>™</sup> LTE Base Station's settings, typically 30 minutes. Note that other fields are currently under development.

100.000	1	14	-	- 14			-	-		
CONTRACTOR OF TAXABLE		(Baston Type)	Let these			Last Hydroid		10.586	10.84	10. Ref
_	6	Provignatio	001010000000000000000000000000000000000	1	Required	11-10-22 2015-03-1	0.1		+	
_	11	foreignED.	00101000000014	1	Improved	12050-00.00223-02-0	n 1			
	11	ForeignED	0010100000001#4	!	Engineered	1108-27-0171-01-0	15 1			
	1.1	luwgrit)	10011100000000000	1	Lingmand .	1208122003-024	10.0			
	4	Foreignio -	100101000000084	1	I damagness and	1508-01200-01-0	16	1	_	_
	1	YoungstD .	001010000000258	1	despected .	1508.0220025-001-0	16. 1	1	Statuso	EUER -
	4	ForeigntD.	00111108000000255	1	Frequencies	10.000.02.2003-00-0	n 1	1	and the second	Concess Citize
	100	foreignetti	10010100000000000000000	!	Patronent	1508.0222023-01-		-	registeret	loa on ere
	1	famignito	001010000000048		I forgeneral	19-08-02 2023-04-0	-			
	10	friender (	001111000000000	i	1 married	1008022000-014	10.			
	10	ForeignED	001010000000251	1	Requirement .	120802-0003-02-0	10 1			
	11	ForeignED	001010600000086	1	Required 1	1000233003-01-0	15 1			
	12	FamignED	001010000000253	!	( Ingineed	1008022003-044	a 1			
	0.	formprilli	100101000000019		Pargunant .	1208.22 2022 44	16			
	100		lasses.	4						
			-					_	IMSE	

Figure 8.2-3: EPC UEs page

The user can download the logs from eNodeB and EPC. Figure 8.2-4 demonstrates an example of the Settings page. As a first step, it is needed to click the Select Folder button and select the folder on the local PC for logs downloading. In the second step, the user clicks the Download Logs button which initiates the download process from the goRAN<sup>™</sup> LTE Base Station to the local folder. When accessing the folder, the user will encounter two text files. One of these is the ENB log file, which includes service messages generated by the eNodeB and is related to the RAN (Radio Access Network). This log is particularly useful for troubleshooting at the radio access level, addressing issues like RRC connection-related matters. The second file is the MME log file, containing service messages from the EPC. This log is essential for troubleshooting at a higher level, addressing matters such as attach procedure-related issues. Note that users can contact <u>Ubiik Support</u> for log descriptions.



with Advisor					- 0 ×
Ublik Contgouit	turn Turni Kana Stature 1801/27958/200	Bes/1009C06015374FBE	102.168.75.8	7678	Constant Discovered
- INCILL	Settings				
Configuration .	Scierre Pathiath Pergamity (mil) 200		( Sec.)		
Sinces	Reflect Sovers: Panatoc sci Download (Pdf) and MME Log Discret Code: The file attented	ang wit néhisé gérisétaég an	unding to the Screen Belan	i Fiaguerzy, Prot sta	
		Select the loca the logs downlo	I folder for bading	Clic	k to download the a to the local folder
View the	e logs of the unit				
1				Commenting	entrel successfully. GET SE CERETUR:

Figure 8.2-4: Settings page



## 9. Specifications

## 9.1. System Specification

Performance	OFDMA QPSK (downlink), SC-FDMA BPSK and QPSK (uplink) SDR-based (Linux/ARMv8-A)
Bandwidth	180 kHz per carrier
Memory	8GB eMMC flash and 2GB DDR4 RAM
Frequency Bands	Upper 700 MHz A Block (band 103), UL: 787-788 MHz, DL: 757-758 MHz
TxPower	30dBm maximum
Timing/ frequency acquisition	GPS, 1588v2 PTP
GPS antenna peak gain	5 dBi
RF antenna peak gain	Antenna in box DS0753-1053WNM: 3.83 dBi Antenna optional DS0753-3801NM: 7.8 dBi Antenna optional ANT-757-788-012-PD0H: 12 dBi Antenna optional ANT-750-800-016-PD0H: 16 dBi
Backhaul antenna peak gain	1.8 dBi (band 2), 0.6 dBi (band 4)
Backhaul	Ethernet (10/100/1000 Mbps) LTE Cat-4, LTE Cat-1
LED Indication	1 x System Power 1 x Network Connection Status (Ethernet or LTE)
I/O Interfaces	3 x external antennas for GPS, RF and LTE Cat-1 backhaul 1 x Gigabit Ethernet port, LAN/WAN and Power-Over-Ethernet (PoE) (Shared the same I/O port) 1 x Reset button 1 x USIM slot 1 x Micro SD slot
Physical and environmental	Dimensions: 10" × 10" x 3.28" Operating temperature: -40° to 131°F Storage temperature: -40° to 158°F Operating humidity: 5% to 90% non-condensing Ingress protection rating: IP67



## 9.2. Features

As a release 14/15 3GPP compliant system, the goRAN<sup>™</sup> LTE Base Station's supported feature list is extensive. However, some key features may be of interest for users. Some of these are presented below. The next sections discuss some key features as shown in Table 9.2 below.

Ref	Feature
1	Power Saving Mode (PSM)
2	Extended Discontinuous Reception (eDRX)
3	Coverage Enhancement (CE)
4	Non-Anchor Carrier
5	RLC Unacknowledged Mode
6	Early Data Transmission (EDT)
7	Release Assistance Indication (RAI)
8	NB-IoT / Cat-NB2 Features
9	Data Over NAS (DoNAS)
10	Non-IP Data Delivery (NIDD)

Table 9.2: goRAN<sup>™</sup> LTE Base Station Features

- PSM is designed to help UE conserve battery power. If the device's application turns its radio module off to conserve battery power, the device would subsequently have to reattach to the network when the radio module was turned back on. The cumulative energy consumption of reattaches can become significant over the lifetime of a device. PSM allows the devices to go into sleep mode. As a result, the device can save battery current drain and drop power consumption into the micro-Ampere range by disabling parts of the chipset protocol stack and decreasing device-to-network signaling while remaining registered with the network.
- 2. eDRX is an extension of an existing LTE feature, which can be used by UE to reduce power consumption. eDRX has been designed for downlink-centric applications that usually receive rather than send data. For such applications, the device wakes up from it's momentary slumber and listens to the network at regular intervals for any incoming data. eDRX allows the time interval during which a device is not listening to the network to be greatly extended, thus strongly reducing the power consumption of the device while remaining reachable from the network. Although it does not provide the same level



of power reduction as PSM, eDRX provides a good compromise between device reachability and power consumption.

- 3. Coverage Enhancement (CE). Some IoT applications require devices to be positioned in areas not readily accessible by radio coverage, such as underground parking garages and in ground pits. Coverage Enhancement feature increases the depth and breadth of radio coverage to enable IoT devices to operate in locations that would otherwise not be possible. This feature increases the power levels of signaling channels together with the ability to repeat transmissions. Repeated transmission improves the ability of receivers to correctly resolve the message sent. LTE-M CE Mode A standard supports CE Levels 0 & 1. This CE feature essentially increases maximum coupling loss by approximately up to +5dB. NB-IoT standard supports 3 CE Levels, and increases the maximum coupling loss (MCL) from 144dB to 164dB: 1. +0dB vs. GSM signal with CE Level 0; 2. up to +10dB with CE Level 1; 3. up to +20dB with CE Level 2.
- 4. Non-Anchor Carrier. This feature supports multi-carrier mode, in addition to the anchor carrier, specifically for NB-IoT usage. The carrier for the initial connection setup is called the Anchor carrier and the other carriers are called Non-Anchor carrier. These additional carriers add physical resources to the network enabling a higher density of devices.
- 5. RLC Unacknowledged Mode (UM). Release 15 introduces support for RLC unacknowledged mode (UM) in addition to the acknowledged mode (AM) and transparent mode (TM), specifically for NB-IoT usage. This reduces the need to send RLC signaling over the air for IoT traffic which may be latency and/or loss tolerant.
- Early Data Transmission (EDT). This 3GPP Release 15 feature allows an idle mode UE/devices to transmit data in Msg3 of the random-access procedure, carrying between 328 and 1000 bits. After successful reception by base station, the random-access procedure terminates, and the UE does not transition to connected mode.
- 7. Release Assistance Indication (RAI). When UE has no more data to transmit, they wait for the network to release the connection to enter Idle mode. RAI was introduced in order for the network to release the UE to idle mode quickly to save power. The UE may include RAI in non-access stratum (NAS) signaling to indicate that after that uplink data transmission, no further uplink or downlink data transmission is expected or that only a single downlink data transmission is expected, thus helping the network to decide if the connection can be released.
- 8. NB-IoT Cat-NB2 Features. Extended transport block sizes (TBS) size: to reduce the time and UE power required to transfer larger messages in more favorable coverage, the range of TBS the NB-IoT UE can support is increased from a maximum of 680 bits DL and 1000 bits UL to 2536 bits on both links. Dual HARQ: UE may optionally have 2 HARQ processes for UL and DL, allowing further peak rate increases, in which case the time spacing between transmissions is reduced.



- 9. Data Over NAS (DoNAS). This feature allows the user to transport data via control plane signaling to the MME. That reduces the signaling overhead by approximately half when moving from idle to connected mode which improves network efficiency and UE battery life. This procedure is suited for Non-IP and UDP/IP where only a few packets are sent per connection.
- 10. Non-IP Data Delivery (NIDD). This feature allows NB-IoT devices to transfer data without adding an IP header or transport header and without the need to operate an IP stack and obtain an IP address. Accordingly, it's not required to configure the IP address/port on the UE. From an application perspective, NIDD has the potential to simplify application design by not requiring an IP protocol stack. This simplification may also extend to the application server as it is no longer required to maintain bindings from device identity to IP address/port. Note that it is possible for a device to support connection to the network using both NIDD and IP at the same time.



## Appendix A Terminology abbreviations

Abbreviation	Description
3GPP	The 3rd Generation Partnership Project
ACT	Admin Config. Tool
APN	Access Point Name
BPSK	Binary Phase-Shift Keying
BSMS	Base Station Management System
Cat-M1	Category M1 LTE-M
Cat-NB1/NB2	Category Narrowband1/Narrowband2
CE	Coverage Enhancement
dBi	Decibel Isotropic
dBm	Decibel Milliwatts
DDR4 RAM	Double Data Rate 4 Random-Access Memory
DHCP	Dynamic Host Configuration Protocol
DL	Downlink
DNS	Domain Name System
DoNAS	Data Over NAS (Non-Access Stratum)
EARFCN	E-UTRA Absolute Radio Frequency Channel Number
eDRX	Extended Discontinuous Reception
EDT	Early Data Transmission
eMMC	Embedded MultiMediaCard
eNB	eNodeB (Evolved Node B)
EPC	Evolved Packet Core
E-UTRA	Evolved UMTS Terrestrial Radio Access
EVK	Evaluation Kit
FCC	Federal Communications Commission
FOTA	Firmware Over-The-Air



Abbreviation	Description	
GPS	Global Positioning System	
GPRS	General Packet Radio Services	
GTP	GPRS Tunnelling Protocol	
GUI	Graphical User Interface	
HARQ	Hybrid Automatic Repeat Request	
HSS	Home Subscriber Server	
IMEI	International Mobile Equipment Identity	
IMS	IP Multimedia Subsystem	
IMSI	International Mobile Subscriber Identity	
юТ	Internet of Things	
IP	Internet Protocol	
IP67	International Protection 67	
LAN	Local Area Network	
JDK	Java Development Kit	
LED	Light Emitting Diode	
LPWAN	Low-Power, Wide-Area Network	
LTE	Long-Term Evolution	
LTE Cat 1	LTE Category 1	
LTE-M	Long-Term Evolution Machine Type Communication	
M2M	Machine-to-Machine	
MAC	Media Access Control address	
MCC	Mobile Country Code	
MME	Mobility Management Entity	
MNC	Mobile Network Code	
MNO	Mobile Network Operator	
mPOS	Mobile Point-Of-Sale	
MVNO	Mobile Virtual Network Operator	



Abbreviation	Description	
NB-IoT	Narrowband Internet of Things	
NIDD	Non-IP Data Delivery	
OFDMA	Orthogonal Frequency-Division Multiple Access	
OS	Operating system	
PBX	Private Branch Exchange	
PCI	Physical Cell Identity	
PDN	Packet Data Network	
PHS	Personal Handy Phone	
PLMN	Public Land Mobile Network	
pLTE	Private Long-Term Evolution network	
PSM	Power Saving Mode	
PoE	Power over Ethernet	
PPS	Pulse Per Second	
PTW	Packet Transmission Window	
QoS	Quality of Service	
QPSK	Quadrature Phase Shift Keying	
RAI	Release Assistance Indication	
RF	Radio Frequency	
RLC	Radio Link Control	
SC-FDMA	Single-Carrier Frequency-Division Multiple Access	
SDR	Software-Defined Radio	
SIM	Subscriber Identity Module	
SSH	Secure Socket Shell protocol	
sXGP	Shared Extended Global Platform	
S/N	Serial Number	
T3324	Active Timer	
T3412	Periodic Tracking Area Update timer	



Abbreviation	Description	
TAC	Tracking Area Code	
TAU	Tracking Area Update	
TBS	Transport Block Size	
UDP	User Datagram Protocol	
UE	User Equipment	
UL	Uplink	
UMTS	Universal Mobile Telecommunications Service	
VoLTE	Voice over LTE	
WAN	Wide Area Network	



## Revision history

Revision	Date	Description
1.0	November 2023	Initial release

## Contact

For further support and contact information, visit us at <u>www.ubiik.com</u> 19F, No. 17, Sec. 1, Chengde Rd., Datong Dist., Taipei City 103, Taiwan +886-2-7751-5855

support@ubiik.com