

## Technical Description ---0102

49 TX10

(Include: 27.145MHZ Transmitter; 49.860MHZ Transmitter and 49.860MHZ Receiver)

1. Open the battery compartment door of the transmitter. Insert a 9V battery with correct polarity. Then close the battery compartment door.
2. Open the battery compartment door of the receiver (Motorcycle). Insert 4 PCs AA battery with correct polarity. Then close the battery door.
3. Switch on the power of receiver (Motorcycle) by push the power switch once. The LED will be light on if the power switch is at "on" position.
4. Hold the transmitter with two hand. Push the control key (go or back; left or right) on the transmitter. The receiver (Motorcycle) will go ahead or back, left or right.