
A2000(Bluetooth) User Manual

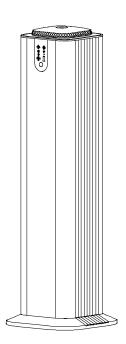



Download app

Please read the user manual carefully before using the product and keep it in a safe place.

Safety Precautions:

1:Do not use overloaded power supplies, sockets, and damaged power cords and plugs. If used, it may endanger your safety and may cause fire. If this happens, please promptly report to the sales or after-sales department and request replacement.

2:Please do not open the inside of the device to avoid the device damage. If the device works in error, please read the user manual carefully, follow the normal procedure or consult sales and after-sales.

3:When the device is working, do not disassemble the device or shake the device vigorously, to avoid the device to work abnormally.

4:Do not put the device or power adapter in water or watering, do not use a watering power adapter.

5:When the device is already filled with liquid (essential oil), do not invert, tilt or rotate the device to device liquid spillage and damage the device.

6:When encountering natural weather thunder, do not operate the device or touch the power cord to avoid the risk of electric shock.

Product Instruction:

A2000 adopts the second-generation silent patent cold atomization technology to protect the essential oil molecules, its features are: low atomization noise, atomized particles uniform, the turbocharged fan and the atomization channel operate independently, the scent diffusion speed is fast and scent diffusion space is large.


A2000 uses professional diaphragm pump which can work 10000 hours, it works stable and has a long using lifespan. The device adopts microcomputer intelligent control, with five control mode. Each mode can independently set the time and oil concentration. The 750ml essential oil container can work longer time. It is widely used by hotel, 4S shop, shopping mall, show room, branded retail store, cinema and other public places.

Product Specification:

Model No	A2000	Machine Size	185x185x598mm
Oil Capacity	800ML	N.W	4.2 kg
Coverage Area	2000m ² /5000 ³	Voltage	DC12V1A
Power	12W	Noise	35db
Oil Consumption	6g±0.6g	Install Method	Stand alone

Oil consumption means : the device in the maximum setting, the test oil is Shangri-La,the test oil consistency is 9. 5MPA.S, the room temperature is 30 $^{\circ}$ C, the air humidity is 45%. Above is for reference.

Install Instruction:

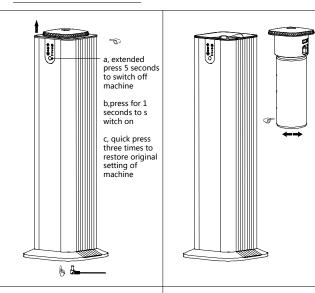

1,connect to power supply 2,put the magnet key against unlock area 3,pull out atomizer head with bottle from top of machine 4, remove bottle by rotating counterclockwise, and fill in fragrance oil .then tighten it by clockwise rotation ,put atomizing head back to machine, it locks up automatically.

User Manual

- 1. Scan the QR code of the cover or search the "Scent Master" app in the app store to download and install.
- 2. Open the app homepage interface, click [Stand Alone Mode] (as shown in Figure 1)
- 3. Click the search device to pop up the password input dialog box and enter the initial password 9999 (as shown in Figure 2)


 


Figure 1



Figure 2

4. Working settings

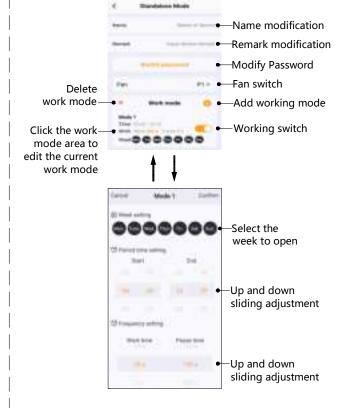

Device Maintains:

Maintain the device every 6 months, or replace the essential oil if the scent

1. Open the device cover, take off the oil bottle.

2.Each time replace the essential oil, should clean the oil pipe filter.
3.Pour an appropriate amount of alcohol into the essential oil bottle and clean it;
4.Check whether the nozzle of atomizing core is clean. If there is
blackening and powder accumulation, it can be removed with toothpick or
paper towel;

Fault Resolution:

Device Fault	Solution		
Device not work	-Check if use wrong power supplyCheck if the power is onCheck the setting of device work time.		
No atomization	-Check if the pump work normal, if the nuzzle blocke -Check if the fog outlet seal ring broken or fall off. -Check if the oil pipe blocked or fall off.		
Weak atomization	-Check if the seal ring of fog outlet pipe damage. -Check if the nozzle blocked. -Check if the connection of atomizer and nuzzle loose.		
Oil leak	-Check if the atomizer brokenCheck if the gasket broken and need changeCheck if the connection of oil bottle and atomizer close tighten.		
Abnormal noise	-Pump loose, fix the pumpPump broken, change new pumpCheck if the fan fixed well.		

Packing Accessories:



After Sale Service:

The warranty period of the equipment is 1 year from the date of sale. Easily damaged accessories such as housing, wire and outer pipe are not covered by the warranty, and man-made damage and accident damage are not covered by the warranty. If the warranty period is exceeded, we will charge maintenance fees.

Warranty Card:

	Maintain Date	Maintain Item	Maintain Company	Maintain Staff

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.