

5

6

FUNCTION CHARACTERISTICS

10

•

2

1

А

B

C

D

E

F

G

H

PDF

1

2

Sesential OID/flues and Cool Mat Humidifer.
Add essential oil directly is the water and enjoy therapeutic benefits.
Year Capacity 2.3 Line. high bullon, miss button and timer buttor:
Scatterman ann time
High Mat Internativ (Jos b Alons):
Team Internative (Jos b Alons):
Lagrand (Jos Balance):
Alons):
Lagrand (Jos Balance):
Lagranc

3

 \checkmark

 $\mathbf{\mathbf{\nabla}}$

4

V

3

4

When plugging the power cord into an electrical wall outlet, all indicator lights keep on for 1 second, and then off; the unit enters into standby state.

Power Button: 1st Touch: turn on humidiller in low mist, ⁴⁷ and power indicator lights keep on; 2nd Touch: turn of humidiller; Note: It water at very low level, the unit will not work, and power indicator light keeps bilining for 10 seconds.

Nist Batton: 1 at Tools continuous diffusion on medium misi Intensity with "IP todicator tight. 2 at Tools continuous diffusion on togh mail Intensity with "IP indicator right. 2 at Tools continuous diffusion in two misi Intensity with "IP indicator right. Cyclic control. Nist. Long touch Misi Button to enter intel see mode with all lights tum off except the power indicator right. Short tough again to exit sleep mode, the unit will start diffusion in ohm mill tensity.



CARE & MAINTENANCE

CHECK & MARINE DEPARTURE And Marine Place unit on a flat, water-resistant surface as moisture may cause damage to carpet, finished floors, furniture, or walls. 1. Remove the Top Coveriftom the Water Tank. 2. Fill the Vater Tank with tag water up to the Max Water Level Line. Do not overfill. Add approximately 10 drops of sensitival of per 1 liter of water into the Water Tank.

5

6



This device complies with Part 15 of the FCC Rule device may not cause harmful interference, and (2 interference that may cause undesired operation.

7

8

9

 
10

ΙA

B

To maintain compliance with FCC's RF exposure guidelines, the distance must be a radiator and your body, and fully supported by the operating and installation conflou and its antennais).

7



AFTER-SALES SUPPORT If your device fails to work or your experience with this product is less than satisfactory in any way, please do not hesitate to contact us.

🔀 service@esemoil.net www.esemoil.net WARRANTY SERIVCE

Please scan the following QR code to activate your warranty service and more support information

8



10

9

١G

н