 
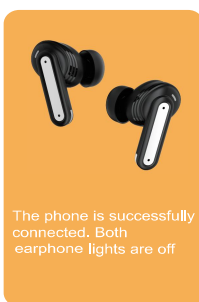 
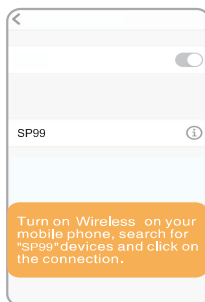 


Read the manual before use

 
If you have any questions, please contact the customer service to deal with them immediately. Please do not make negative comments at will. Our service is up to your satisfaction.

Important: Plug in the charging wire for charging at the first time after receiving the goods, and use it after fully charging, which can make the Wireless earphone last longer.

Important: Do not use super fast charging with current above 2A to avoid damaging the circuit chip due to excessive current.

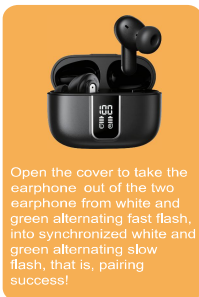

the earphone touch control is marked in red circle

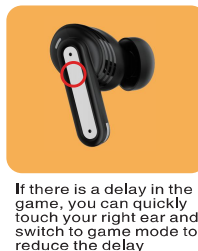

If you find that you do not like or will not use the goods, remember to contact the store customer service to teach you how to use them. If you do not like to return the goods and remember to choose another reason for returning, this is very important to us. Thank you very much!

If only one side has sound, please first delete the SP99 that has been connected, turn off the Wireless of your phone, the earphones need to be paired once, enter the tws mode, and return to the first step.

Important: Plug in the charging wire for charging at the first time after receiving the goods, and use it after fully charging, which can make the Wireless earphone last longer.

Important: Do not use super fast charging with current above 2A to avoid damaging the circuit chip due to excessive current.

The connection steps are as follows:

Open the cover to take the earphone out of the two earphone from white and green alternating fast flash, into synchronized white and green alternating slow flash, that is, pairing success!

Turn on Wireless on your mobile phone, search for "SP99" devices and click on the connection.

Touch function

1. Click on the earphone touch area: play/pause
2. Double-click the earphone touch area: pull-back
3. Triple-tap earphone touch area: volume down/ volume up
4. Quadruple tap left earphone touch area: summon Siri function
5. Four click right earphone touch area Game/ music mode switching
6. Long press 2 seconds earphone touch area: previous/next song

the earphone touch control is marked in red circle



Charging method:

Plug in the cable we sent, and be careful to plug it in to the end. The number of the display flashes to recharge the earphone charging compartment. When you charge the display "100", it is full. (with power display)

If you find that you do not like or will not use the goods, remember to contact the store customer service to teach you how to use them. If you do not like to return the goods and remember to choose another reason for returning, this is very important to us. Thank you very much!

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.