 
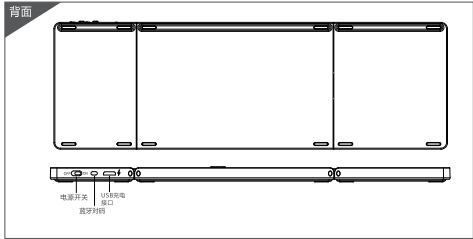 


蓝牙键盘

说明书

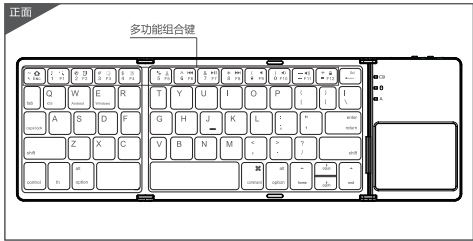

注意：正确操作本产品，请仔细阅读用户手册。

支持系统

Win/iOS/Android

技术规格


键盘尺寸：304.5X97.95X8mm(打开)	使用触摸板工作电流：<8.63mA
触摸板尺寸：54.8X44.8mm	使用按键工作电流：<3mA
键盘重量：197.3g	待机电流：0.25mA
键盘布局：63键	休眠电流：60μA
工作距离：<15m	休眠时间：10分钟
锂电池容量：140mAh	唤醒方式：按任意键
工作电压：3.7V	

触控板功能说明



注：该设备在iOS系统下触摸板无功能

 ● 蓝牙对码连接：



1、请打开位于键盘侧边电源开关，蓝色灯亮起，按一下蓝牙对码开关，蓝灯闪烁进入对码模式。



2、打开“蓝牙”进入搜索模式。



3、直到发现“Bluetooth 3.0 Keyboard”，然后点击下一步。



4、根据蓝牙提示，在键盘上输入对应的密码，按Enter键确定。



5、提示连接配对成功，您就可以舒适地使用您的键盘了。

注：配对成功以后下次使用只需要打开蓝牙键盘电源及使用设备的蓝牙，蓝牙键盘将会自动搜索连接上次使用过的设备，不需要再进行配对操作。

常见问题解答

- 1、平板无法连接蓝牙键盘？
1) 请先检查蓝牙键盘是否有进入配对状态。然后再打开平板电脑蓝牙搜索设备进行连接。
2) 检查蓝牙键盘电量是否充足，电量不足也会导致无法连接，请将蓝牙键盘充电后再使用。
- 2、键盘指示灯在使用途中一直闪烁？
键盘指示灯在使用途中一直闪烁，表示电池即将没电，请尽快将键盘充电。
- 3、设备显示蓝牙键盘断开连接？
蓝牙键盘在一段时间内不使用，设备为了省电将自动关闭蓝牙功能，按键盘任意键唤醒，蓝牙连接自动恢复。

状态显示LED

- 对码：打开电源开关，蓝牙指示灯蓝灯亮起，按下对码键，蓝灯闪烁
 - 充电：指示灯红色，充满灯灭；
 - 低电压指示：当电压低于3.3V，红色指示灯闪烁
- 提示：为了延长电池寿命，请您在不使用键盘时，关闭键盘的电源开关。

故障分析

请与售后服务人员联系

知识产权信息

未经本司的许可，禁止复制本用户手册的内容。

安全提醒

请不要打开或修理该设备，请不要在潮湿环境内使用设备，请用干布擦拭该设备。

质保条款

本设备自购买之日起，提供1年保修服务。

键盘保养

- 1、请勿将设备暴露在液体和潮湿的环境中或使其淋雨，请勿在浴缸、水槽、桑拿房、游泳池或蒸汽房附近使用。
- 2、请勿将设备暴露于过高或过低的温度下。
- 3、请勿长时间放置在阳光直射的地方。
- 4、请勿靠近明火，如烹饪用炉、蜡烛或者壁炉。
- 5、避免使用锋利器物刮擦产品，及时给产品进行充电以保证正常使用。

产品功能

IOS/Android		Windows	
Fn+	对应功能	Fn+Shift	对应功能
~ E&C	返回桌面	~ E&C	主页
! Q 1 F1	搜索	! Q 1 F1	搜索
@ 2 F2	全选	@ 2 F2	全选
# 3 F3	复制	# 3 F3	复制
\$ 4 F4	粘贴	\$ 4 F4	粘贴
% 5 F5	剪切	% 5 F5	剪切
^ 6 F6	上一曲	^ 6 F6	上一曲
& 7 F7	暂停/播放	& 7 F7	暂停/播放
* 8 F8	下一曲	* 8 F8	下一曲
(9 F9	静音	(9 F9	静音
) 0 F10	音量减小) 0 F10	音量减小
= F11	音量增大	= F11	音量增大
+ F12	锁屏	+ F12	锁屏

保修卡

用户填写资料

公司或个人全称_____

通讯地址_____

电话_____ 邮编_____

所购产品名称及型号_____

 
 
购买日期_____

本有限质保不涵盖由于以下原因导致的问题或损坏：
(1) 意外事件、误用、操作不当或任何未授权的维修、改装或者拆卸；
(2) 操作或维护不当，使用过程中违反产品说明或连接不适当的电源；
(3) 或者使用并非本公司提供的消耗品（如备用电池），但适用法律禁止此类限制的情况除外。



Bluetooth Keyboard

User’ s Manual

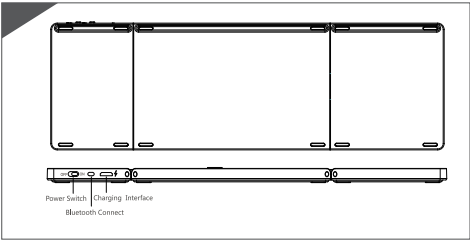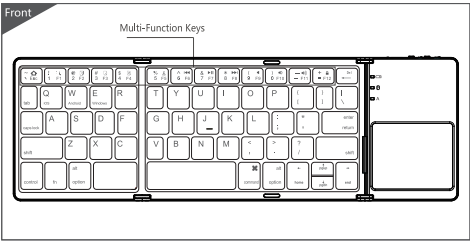

Compatible System

Win /IOS /Android

Technical Specifications





Keyboard size : 304.5X97.95X8mm(Open)	Use touchpad the working current : <8.63mA
Touchpad size : 54.8X44.8mm	Use key the working current : <3mA
Weight : 197.3g	Standby current : 0.25mA
Keyboard layout : 63 Keys	Sleep current : 60μA
Working distance : <15m	Sleep time : Ten minutes
Lithium battery capacity : 140mAh	Awaken way : Arbitrarily key to awaken
Working voltage : 3.7V	

Touchpad Functions

	One finger click –left mouse		Two finger click– right mouse
	Two finger slide – mouse wheel		Two finger stretch – Zoom
	Three finger click– win+s combination key (Open the Cortana)		Three finger slid/right slid the left- Active window switch
	Three finger slid up – win + Tab combination key (Open the browser window)		Three finger slid down –Win+D combination key(return back to Windows start menu)

Note: no touchpad function for the device under the IOS system

    Bluetooth pairing connection

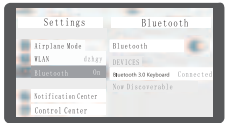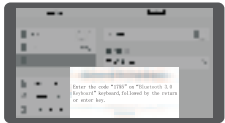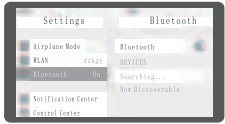

1.Please turn on the power at the side of the keyboard, blue lights up, press the Bluetooth connection button, blue light will twinkle and into the match mode quickly.

2.Open the tablet PC setting “Bluetooth” into searching and pairing state.

3.You will find the “Bluetooth 3.0 Keyboard” and click to next step .

4.According the table PC tips to input the correct password then click “Enter” button.

5.There have a tip for connecting successfully ,you can use your keyboard comfortably .

Remarks : After connecting successfully the next time you don't need match code, just open the Bluetooth keyboard power switch and the tablet PC “Bluetooth”. The BT keyboard will search the device and automatic connects.

FAQ

- 1.The tablet PC can't connect the BT keyboard ?
 - 1) At first check the BT keyboard is into match code state, then open the table PC Bluetooth searching.
 - 2) Checking the BT keyboard Battery is enough, the battery low is also lead to can't connect, you need charge.
- 2.The keyboard indication light always flashing when use?

Keyboard indication always flashing when use, is means the battery will be no power , please charge the power as soon as possible.
- 3.The table PC display BT keyboard is disconnect?

The BT keyboard will into dormant to save the battery after some time later no use; press any key the BT keyboard will be awoken and working.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product features

IOS/Android		Windows	
Fn+	Corresponding function	Fn+Shift	Corresponding function
~ Esc	Return to Desk	~ Esc	Home
! Q F1	Search	! Q F1	Search
@ F2	Select	@ F2	Select
# F3	Copy	# F3	Copy
\$ F4	Stick	\$ F4	Stick
% F5	Cut	% F5	Cut
^ F6	Pre-Track	^ F6	Pre-Track
& F7	Play/Pause	& F7	Play/Pause
* F8	Next	* F8	Next
(F9	Mute	(F9	Mute
) F10	Volume-) F10	Volume-
_ F11	Volume+	_ F11	Volume+
+ F12	Lock	+ F12	Lock

Warranty Card

User information

Company or personage full name

Contact address

TEL Zip

The purchased product name and model NO.

Purchased date

This reason due to the product broken and damage is not include on the warranty.
(1) Accident, misuse, improper operation, or any unauthorized repair, modified or removed
(2) Improper operation or maintenance, when operation violation of the instructions or connection unsuitability power supply.

