

刀模线不印刷

尺寸：100*140mm
材质：105g铜版纸，正反面单色印刷，4 折页

正面印刷



TWISTER
Portable Wireless Speaker
Model: BX311

INSTRUCTION MANUAL

PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

Getting started

- Remove the product from the box.
- Remove any packaging from the product.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Wireless Speaker
- USB charging cable
- 3.5mm auxiliary cable
- Instruction Manual
- Warranty Card

Key Features

- Bluetooth indoor and outdoor speaker
- Stream music wirelessly using Bluetooth enabled devices
- Wireless range -33 feet
- Built-in color changing LED lights
- USB/Micro SD(TF) playback (USB/Micro SD(TF) not included)
- Built-in FM radio
- Microphone input (Microphone not included)
- Built-in Aux input
- Built-in rechargeable battery
- Easy carrying handle

Safety Instructions

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the unit with wet hands.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use.

- Keep the unit out of reach of children.
- This product is not a toy.
- Do not use the handset at excessive volume levels, as damage to hearing may occur.

Description of Parts:



1	Charging LED indicator	9	ON/OFF switch
2	Charging port	10	Mode button
3	Auxiliary port	11	Skip backward/Decrease volume
4	LED display	12	Play/Pause button
5	Microphone input	13	Skip forward/Increase volume
6	USB slot	14	Mic volume button
7	Micro SD(TF) card slot	15	Carrying handle
8	Speaker & light show		

INSTRUCTIONS FOR USE

Charging Instructions

- For best results, fully charge the speaker before use.
- Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar power source.
- The RED LED turns on indicating that the battery is being charged. Once it is fully charged,

the Red LED will turn off. It takes 2 to 3 hours to fully charge the speaker.
Note: In order to have better battery life, please do not charge for over 6 hours.
Overcharging the speaker can adversely impact the battery life.
Turn off the speaker when it's not in use to save battery power.

Turning on/off the speaker

- To turn "ON", press the "ON/OFF" switch to the ON position.
- To turn "OFF", press the "ON/OFF" switch to the OFF position



Pairing the speaker with Bluetooth devices

- Turn ON the speaker, the LED display will show "BLUE", the speaker is now in pairing mode.
- Turn on the Bluetooth on your mobile phone or other Bluetooth enabled devices.
- It will search for various devices.
- The pairing name is "2BOOM-BX311". Search it and pair with this device.
- If required, enter the passwort "0000" to confirm to finalize pairing.
- Once paired successfully, you would hear an indication tone. Select your favorite song at the Bluetooth device and music would now stream through Bluetooth speaker.
- If you fail to pair it within the time frame or you want to pair it with a new device, please follows the steps outlined above.

Note: Speaker will automatically pair with previously paired devices.
If you insert a SD card or USB flash drive while using the Bluetooth function, the speaker will automatically switch to the USB/SD function. To return to the Bluetooth function, press the MOED button.

Listening to Music wirelessly

- Please ensure that your device is paired with the Bluetooth speaker successfully.

Function	Operation	Button
Increase Volume	Playing music	A long press on the V+ button once will increase the volume.
Decrease Volume	Playing music	A long press on the V- button once will decrease the volume.
Pause	Playing music	A short press on the  button will pause the music.
Play	Pausing	A short press on the  button will restart the music.
Previous track	Playing music	A short press on the  button will return you to the previous track.
Next track	Playing music	A short press on the  button will take you to the next track.

Note: An indication tone will alert you when the volume is adjusted to the maximum level.




反面印刷

AUX function of the speaker

- Turn on the speaker.
- Press "mode" button until Aux mode is selected; the LED display will show "Lod" first and then "LINE".
- Plug the 3.5mm auxiliary cable (included) in to the Aux input of the speaker, and the other end of the cable connects to the audio device (such as cell phone / computer / tablet etc.)
- Select your favorite song at the source device and play

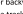


Note: Functions like skip backward, skip forward etc. can be only controlled through source devices, while playing music in Auxiliary mode.

Listening to Music using Micro SD card slot

- Turn on the speaker.
- Insert Micro SD(TF) card or U8B flash drive into the card slot. The LED display will show "Lod" first and then "SD" or "USB". Music will stream automatically.
- Press  or  to move forward or backward on your playlist.
- Press  button to Play or Pause a track.

Note: While using Bluetooth, If you insert Micro SD(TF) card or USB flash drive, speaker would disconnect the Bluetooth connection and switch to Micro SD(TF)/USB function. You can press mode button again to select the Bluetooth mode.



FM RADIO

- Turn on the speaker.
- Insert the auxiliary cord (included) into the auxiliary port. Leave the other end of the cord open, Auxiliary cord serves as FM antenna while in FM radio mode.
- Press "MODE" button until FM mode is selected, the LED display will show "Lod" first and then FM frequency.
- Press the  button once and the device would automatically search and store all the FM radio stations
- Press  or  button to change the FM radio stations.

TIPS!!

- Press the "MODE" button to switch different functions of the speaker, The modes appear in the following sequence-Bluetooth / SD-USB/FM radio/Aux-in.
- When the unit is not in use, turn off the device to save the battery power.
- Do not overcharge the unit, every charge should not exceed 6 hours.

Using the microphone(Microphone not included)

- Turn on the speaker.
- Insert the plug of the microphone (not included) into the microphone input of the speaker.
- Turn on the microphone.
- Long press  or  button and press Mic volume button to adjust the desired output level.
- You are now ready for Karaoke.

Do's and Don'ts

Do not play music at excessive levels as damage to hearing and/or equipment may result. Do not use outdoors in wet or in damp surroundings.

Care and Maintenance

Read the following recommendations before using the Bluetooth speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the device in a fire as it will result in an explosion.
- Don't expose the device to contact with sharp objects as this will cause scratches and damage.
- Don't let the device fall on the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the device as it may get damaged if you are not professional.

Specifications

Bluetooth specification	V5.0
Operating distance	33 feet
FM frequency range	87.5 ~ 108MHz
Playing time	About 1.5-2 hours
Charging time	About 2-3 hours
Speaker output	5W
Built-in Battery	3.7V ,800mAh
Micro SD card	Support up to 32GB

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC ID:2AIDL-BX311

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

2.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reason able protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure requirement.

The device can be used in portable exposure condition without RF restriction.

MI&G International Group LLC
21 West 38th Street, 14th Floor
New York, NY 10018
929-390-4504