




A brand of 

Access Point Setup Guide


1. Setting up your AP:


Place the AP in the center of the desired coverage area

 **NOTE:** If installing this AP with a wireless controller, refer to the Wireless Controller Setup Guide



2. Connect a PoE+ Ethernet cable to the AP's PoE port (for power, use a PoE injector or a compatible PoE+ switch - not included)

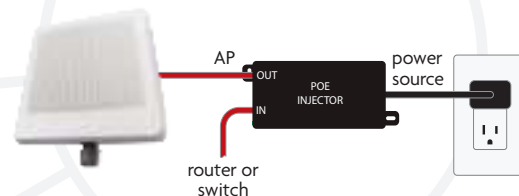


 **NOTE:** Power Supply Cord must be connected to a properly grounded outlet.

3a. Connecting Via an Ethernet Device

Use an Ethernet cable to connect your computer to the LAN port of the AP. Ethernet is the preferred method of connection

3b. Connecting Via a Wireless Device


Connect a wireless client device to the AP's default wireless SSID Luxul_AP-302X* and use the passphrase: **luxulwifi**
*X corresponds to the model number of the AP

 **NOTE:** If your computer or device isn't set to obtain an IP address automatically, you'll need to set a temporary static IP address on that device. Set the IP address of your computer to an address in the 192.168.0.X range and set your subnet mask to 255.255.255.0. You can leave the default gateway/router ip address blank.



4. Open a web browser and go to 192.168.0.10
Login with the default User Name and password

User Name: **admin**
Password: **admin**

 **SECURITY NOTE:** You will be required to change the default administrator password.



What if...

I need to restore factory default settings?

To restore factory default settings to your AP, press and hold the button labeled 'RESET' until the green system LED starts flashing (5 seconds)

I need to restart my AP?

To restart your AP, press and quickly release the button labeled 'RESET'

I want to perform advanced configuration?

1. Open a web browser and go to 192.168.0.10 or the IP address you specified during the setup process
2. Enter the login credentials you created during the setup process

View Luxul's Privacy policy at:

https://www.legrandav.com/legal/privacy_policy

The marking information is located at the bottom of the apparatus

Copyright and Trademark Notices

No part of this document may be modified or adapted in any way, for any purposes without permission in writing from Luxul. The material in this document is subject to change without notice. Luxul reserves the right to make changes to any product to improve reliability, function, or design. No license is granted, either expressly or by implication or otherwise under any Luxul intellectual property rights. An implied license only exists for equipment, circuits and subsystems contained in this or any Luxul product.

© Copyright 2022 Legrand AV Inc. All rights reserved. The name Luxul, the Luxul logo, the Luxul logo mark and Simply Connected are all trademarks and or registered trademarks of Legrand AV Inc.

All other trademarks and registered trademarks are property of their respective holders.

Suggested Operation Temperature: -20° to 50°C

AP-3025-QIG-220919-01



What do the LEDs on my AP indicate?

Indicator	State	Description
Green System LED	On	AP is properly connected to power supply
	Blinking	AP is booting
	Off	Power disconnected or AP is off, or LEDs are turned off in the web interface
Blue LEDs	<i>The blue LEDs indicate the status of the wireless broadcast; one for 2.4GHz and the other for 5GHz</i>	
	On	AP is broadcasting a wireless signal
	Blinking	Indicates wireless activity
	Off	AP is not broadcasting a signal, or the LEDs are turned off in the web interface

Technical Support

P: 801-822-5450

E: support@luxul.com

Support chat: [LegrandAV.com](https://www.legrandav.com) click 'Live Chat' (upper right) and select Luxul under 'Brand'

Sales

P: 801-822-5450

E: sales@luxul.com