

(B099)

# User Manual



# Compatible System iOS / Android / Windows / Mac OS

Note: Please charge the keyboard and read the user manual carefully before you start using this product!

# **Package Contents**

1 x Type-C Charging Cable 1 x Storage Bag

1 v Hose Marroal

# Specifications |

Kashnard sine: 342 30114 7010 9mm/Onan). Chama time: 3-3 hours Tourhoad size: 60 S X 101 Smm Uninterrunted work time: 48 hours Weight: 274g Stand-by time: 560 hours Working distance: 10n Sleep time: 10 minutes Lithium battery capacity: 180mAh Awaken way: Arbitrarily key to awaker

## Overview



## Keys and Functions

Function Keys	ios	Android	Windows 10	Mac OS	Windows Mac OS
Way to use	Press directly	Press directly	Press	Press	Press fn 4
(iii	Home	Home or N/A	Web Browser	Home	680
PT .	Brightness -	Brightness -	Brightness -	Brightness -	F1
F2 - (K	Brightness +	Brightness +	Brightness +	Brightness +	F2
73 g	Search	Search or N/A	Search	Search	F3
FA 188	Previous Track	Previous Track	Previous Track	Previous Track	F4
F5 F8	Play/Pause	Play/Pause	Ptay/Pause	Play/Pause	F5
F0 300	Next Track	Next Track	Next Track	Next Track	F6
17 6	Mute	Mute	Mute	Mute	F7
<sup>71</sup> e	Volume -	Volume -	Volume -	Volume -	FB
F9 41	Volume +	Volume +	Volume +	Volume +	F9
F112 Spt	Task browse window	Task browse window or N/A	Task browse window	Task browse window	F10
'''a	Print Screen	Print Screen or N/A	Print Screen	Print Screen	F11
Fig. 1	Lock Scren	Lock Scren or N/A	Lock Scren	Lock Scren or N/A	F12

If all the shortcut keys do not work, please check whether the fin lock function is turned on.

	Special Keys	Descriptions			
		The finkey is used in combination with other keys to accepted a features.			
	Q e W	Press fn + this key to choose Bluetooth Channel 1.  Press fn + this key to choose Bluetooth Channel 2.  Press fn + this key to choose Bluetooth Channel 3.			
	C	Press fn + C to let the keyboard enter pairing status.			
	sandrad 🐷	Press fn + this key to work as virtual keyboard. Note: this function work for iOS only.			
	□ H omat	Press fn + this key to check the battery reminding.  The Indicator flashes once for 25%, twice for 50%, 3 time for 75%, and 4 times for 100%.			
		Press Fn] + b to work as page up. Press Fn] + to work as page down. Press Fn] + to work as home. Press Fn] + to work as home. The press Fn] + to work as end.			
	Mr. 8	Press fn + this key to lock or unlock the fn key. (Only for Esc - F12 key)			

# Keyboard Language Switching

- iOS 8 or below: command + space
- iOS 9 or above: ctrl + space
   Android: ctrl + space / shift + space / ctrl + shift / others

# + Windows: ctrl/command +Space / alt + shift / ctrl + shift

1.Due to different system versions, the above way may not work in all andmid devices

# Important

As this is a multilingual keyboard, set the language of the device to your desired language before use.

· For iOS devices only: Settings > General > Keyboard > Keyboards > Add new keyboard

# > Select desired language

 For Samsung Android devices only: Settings > Controls > Language and input > Samsung Keyboard

### > Select input languages > Select desired language

· For Android devices only: Settings > Language & input > Physical Keyboard > Set up keyboard

### layouts > Select desired language For Windows devices only:

Control Panel > Clock, Language and Region > Select desired language

# FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a 材质:157G铜版纸

规格: 100\*130 mm

彩色双面印刷, 折页

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communica However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off a nd on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Bluetooth 1&2&3 Pairing Instructions



on the side of the keyboard. The power indicator lights up in blue and then goes out.





3. Press fn + Pairing to make the keyboard enter the pairing state the Bluetooth indicator light starts



4. Turn on the Bluetooth settings on the device to enter search/pairing state.



5. Find "Bluetooth 5.1 Keyboard" and dick it. After the connection is

1. If multiple devices are used at the same time, connect devices to different Bluetooth channel first, then press Fn+ev/ex/e3 to switch between them freely.

- 2. If you want to change the device connected to the Bluetooth 1 / Bluetooth 2 / Bluetooth 3 channel, just follow the above connection method to re-pair and connect to the Bluetooth1 / Bluetooth 2 / Bluetooth 3 channel.
- 3. Auto re-connect function: when you turn on the keyboard, it will connect with the last-used device automatically. (After the connection, don't press
- the connect button again, or it will disconnect and you have to reconnect it.) 4. If the connection fails, please delete all the pairing records from your device; turn off your device Bluetooth function and turn it on again and then follow

## Status Display LED

- 1. Bluetooth indicator (D/2)(3): Displays blue and then goes out when switching
- channels; flashes blue when it enters the pairing state Caps lock indicator: Displays green when caps is locked 2. Num lock indicator: Displays blue when numeric keypad is on.
- (Not compatible with iOS/Mac OS) fn lock indicator: Displays green when the fn key is locked.

  3. Power Indicator: Displays blue when turned on; stay in green when charging. and go off when fully charged; flash red guickly when low power.
- REMARK: In order to prolong the life span of the battery, when you do not use the keyboard for a long time, please switch off the power.

# System Requirements

- Mac OS X v10.6 to Mac OS X v10.12 and above
- Windows XP / Vista / 7 / 8 / 10 . PC computer with a Bluetooth host + Android 3.0 and above with Bluetooth HID profile
- (Smartphones and Tablets)

• This keyboard is not compatible with Samsung Smart TV , Xbox and Nokia phones.

# Keyboard Maintenance

- 1. Please keep the keyboard away from liquid or humid environment, saunas, swimming pool, steam room and don't let the keyboard get wat in the rain
- 2. Please don't expose the keyboard at too high or too low temperature
- 3. Please don't put keyboard under sun for a long time.
- 4. Please don't put keyboard dose to the flame, such as cooking stoves, candles or fireplace.
- 5. Avoid sharp objects scratching products, timely to recharge products to ensure the normal use.

## How to Charge it

- 1. Use the included USB cable for charging. Connect one end to a USB charger, and the other to the keyboard. (USB charger is not included)
- 2. In charging, the power indicator will turn green. Generally, it takes approximately 2-3 hours for a full charge. (Output: DC 5V / 1A or 2A)

## FAQ

### Q: Fail to connect.

## Step 1. Before to connect, please set as below

- \* Charge Samsers Bluetooth keyboard for 30 minutes \* On your device, delete/remove/forget the previous connection record
- with "Bluetooth 5.1 Keyboard". \* On your device, turn Bluetooth off, and turn Bluetooth on again
- \* Make sure that your Samsers device and your device are within close proximity of each other. Step 2. Follow the Pairing Instruction to connect it again.

### Q: My Samsers Bluetooth 5.1 keyboard frequently gets disconnected or laggy.

- Restart your Bluetooth product.
- 2. Charge Samsers Bluetooth keyboard for 30 minutes. Low battery power can adversely affect connectivity and overall functionality.

### 3. Make sure that your Samsers Bluetooth keyboard and computer are within close proximity of each other.

- 4. Do not use on metal surfaces.
- Try moving away from:
- \* Any device that could emit wireless waves: Microwave, cordless phone, baby monitor, wireless speaker, garage door opener, WiFi router
- \* Computer power supplies
- \* Metal or metal wiring in the wall
- 5. Make sure your operating system (OS) is up to date.
- 6. Check if there are any updates running in the background that may
- 7. Try on a different computer/smartphone/tablet

If the problem still persists, you will need to follow specific steps based on vour device OS (Windows/Mac OS). Please email us.

## More questions about using under Android devices.

Android operating system is still not unified, and different manufacturer make different rule. For standard keyboard, because of rule change, the standard function may not work any more. If you are using under Android device and suffering some problems, please contact us.

# Contact Us

contact us! Please rest assured that we will definitely help you solve them!

Please contact us for a 24-month worry-free warranty; Samsers@126.com