


WIRELESS DOORBELL User's Manual

1. Installation

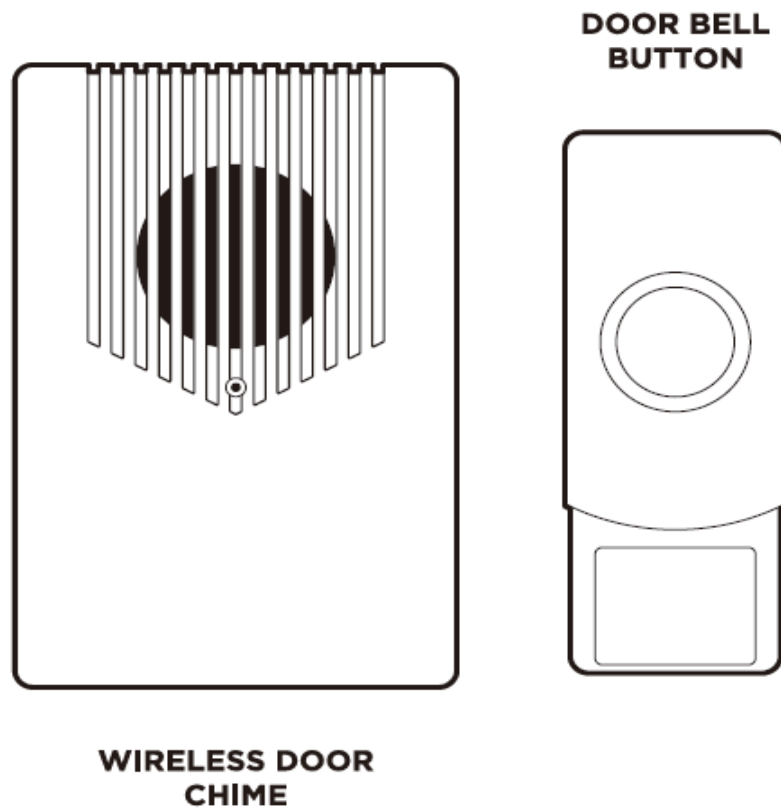

2. How to install

Install the DOOR BELL BUTTON in a convenient position for visitors. WIRELESS DOOR CHIME can be mounted to the wall or remain portable. Press the button on the side of the WIRELESS DOOR CHIME to choose your preferred chime.

3. Instructions

- 1) Always purchase the correct size and grade of battery most suitable for the intended use.
- 2) Replace all batteries of a set at the same time.

- 3) Clean the battery contacts and also those of the device prior to battery installation.
- 4) Ensure the batteries are installed correctly with regard to polarity (+ and -).
- 5) Remove batteries from equipment which is not to be used for an extended period of time.
- 6) Remove used batteries promptly. 3pcs 1.5V AG13 Cell Battery.
- 7) Do not mix old and new batteries.
- 8) Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- 9) Do not dispose of batteries in a fire as they may explode or leak.

FCCWARNING

Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co - located or operating in conjunction with any other antenna or transmitter.