




封面

封底

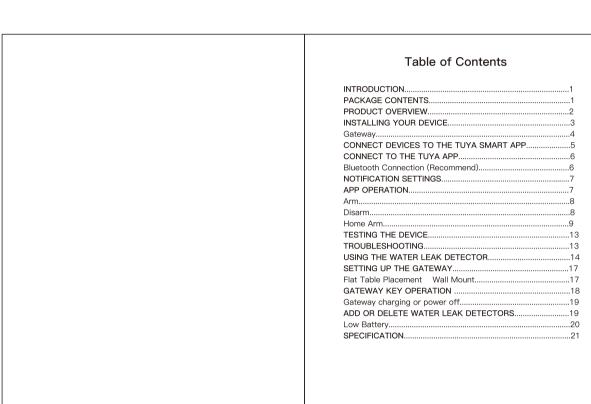

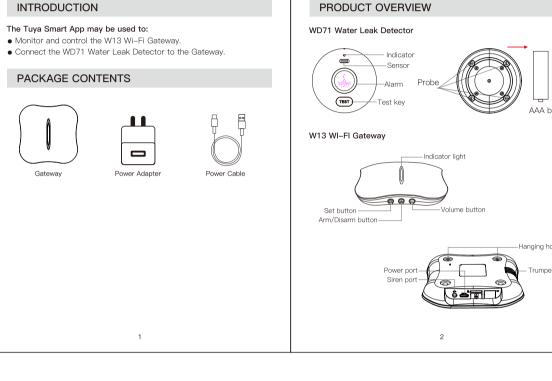

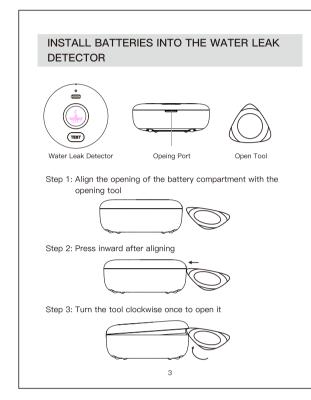

Volume: Adjust the volume of the gateway broadcast track

seconds can be set

the gateway.

• Entry delay: Setting the alarm delay time can be convenient for users

triggering the detector gateway will not immediately alarm,), 0-255

• Factory reset: click to confirm to clear all the paired accessories of

Long press, press the device you want to pair: Add Water Detector

Long press: Reset to factory settings and unpair all connected devices

When the USB is charging or powering off, the gateway will beep once,

app will show the message: "power connection" in the case of charging

ADD OR DELETE WATER LEAK DETECTORS

(Notes: The water detectors are paired with the gateway in

The gateway will beep and the indicator light will turn yellow.

and the indicator light will blink twice if successful.

2. a. Press the Water Detector TEST key, the gateway will beep twice

b. Press the Water Detector TEST key, the gateway will beep once

and the indicator light will blink once if the water leak detector

c. Press the Water Detector TEST key, the gateway will beep three

times and the indicator light will blink 3 times if no more detectors

Long press 10s: Delete all water detectors

ong press: Reset to factory settings

Gateway charging or power off

advance.)

🜣] and [🔒] key, when the gateway is turned off

[*] and [a] key, when the gateway is turned off

the red indicator light will flash once, and the


1. Long press the [╬] and [➪] keys.


has already been added.


can be added.


or "power disconnection" in the case of powering off.

to enter the door in the case of time buffer (delay in the case of

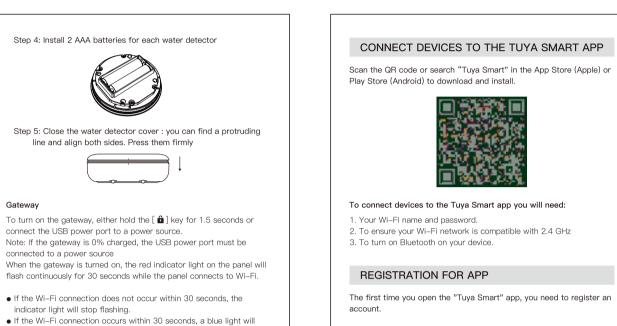


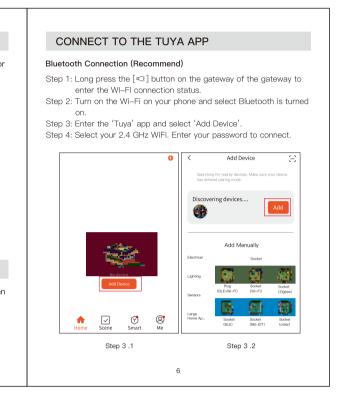

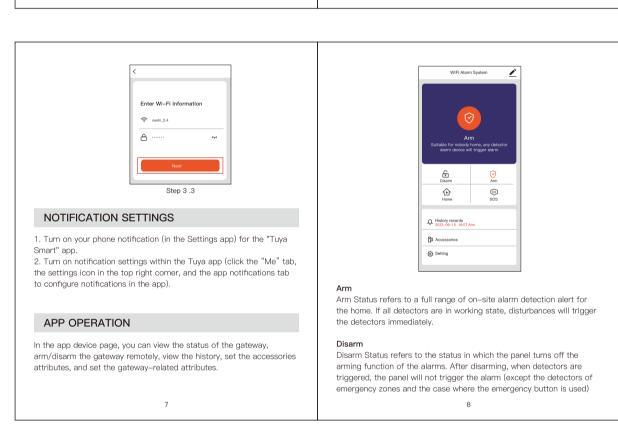


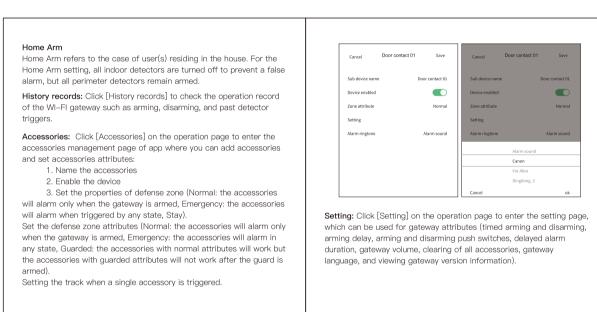





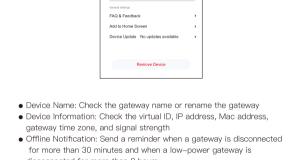

indicate that the panel has been connected to WI-FI.

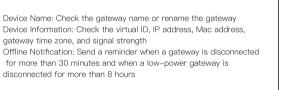

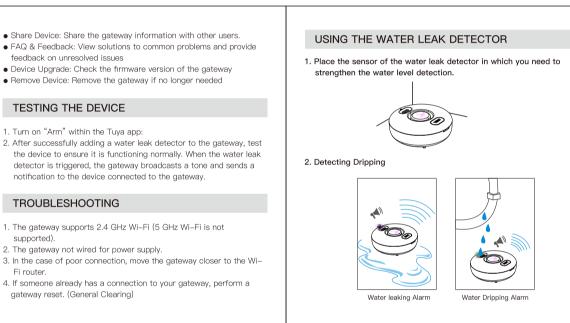

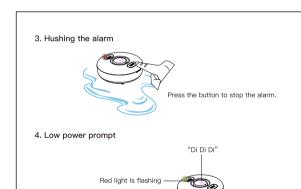

■ The bottom of the water detector has four metal probes which are

detector sensor. Two metal probes of parallel lines will immediately

■ The device is still not dehydrated after the detector alarm is over,

dehydration or press the button to cancel the alarm, it will not make a

then the flood detector will continue to alarm every 15s until the

regular alarm prompt if it's still immersed in water after 24 hours.

not alarm when they detect water.

alarm when they detect water. But 2 metal probes of diagonal lines will

Install 2 AAA batteries, and the LED red light will flash once, indicating that the water detector is turned on; Press and hold the 【TEST 】 button for 10 seconds, and it will make a short beep, indicating that is turned on.

Press and hold the 【TEST】 button for 10 seconds, and the volume will switch once at the 3rd second. At the 10th second, it will make a long "beep" sound, indicating that is turned off; Remove the battery to turn off the water detector.

Setting Volume

When turned on, press and hold the 【TEST】 button for 3 seconds to set the volume level to 4 (Didi Didi - maximum sound). Release it and continue to press and hold for 3 seconds to set the volume level to 3 (Didi Didi), -2 (Didi) -1 (Mute) -4-3-2-1 (only 1 level of volume can be set every 3 seconds) Note: When you reinstall batteries, it will restore the maximum volume

Short press [TEST] key for 1 second, water detector alarm for 2

SETTING UP THE GATEWAY Red light----*Arm、Green light----*Disarm、Blue light----`Home (1) When the panel is not configured with a network, the Arm/Disarm, Home, and indicator light will flash. (2) After the panel has been configured with network, the indicator light will stay on. (3) When the panel alarms, the indicator light will briefly flash.

Indicator light of the panel

Power off Press and hold the [🏦] key for 3 seconds, the panel will beep and the red indicator light will turn on. After releasing the [fall]key, the panel will report the power off event to the spp. The red indicator light will flash 3 times and beep 3 times before powering off.

GATEWAY KEY OPERATION

Short press: Play melody track in loop. Short press: Change the status of *arm/^disarm/`home arm

Long press: power-off Short press: Set the volume level (every time the gateway is powered off, the volume will be at the maximum value) g press: Enter WI-FI setting status (Gateway On Pairing) 🗱 and [🛍] key, when the gateway is turned on Long press: Enter AP gateway connection [╬] and [➪]key

beep four times, and the indicator light will blink 4 times once the water detectors have been deleted. 3. Short press any button to exit the adding process.

1. To exit the water leak detector pairing state, short press any key on the gateway twice or wait 20 seconds without performing any 2. The gateway can pair up to 24 model WD71 water leak detectors. (No support for WD70)

Low Battery Low battery reminder: When the gateway power is less than or equal to 20%, the app will send a low battery notification. $\ensuremath{\text{\textbf{Low power shutdown:}}}$ When the gateway battery is 0%, the app will send a shutdown notification, and the LED indicator light will flash 3 times and beep three times before shutting down

SPECIFICATION

Water Leak Detector Working Voltage: 2XAAA Batteries Wireless Frequency: 433MHz Alarm Volume: 0-120 dB Work with gateway distance: < 100 m/328 ft (No obstructions) Waterproof Rating: Ip66 Alarm Duration: 15s/First time(The second alarm sounds every 15s and lasts for 24 hours.)

 \bullet Working Voltage: Lithium battery 3.7V-4.2V (External Type-C power supply available) Working current: < 20 mA • Wi-Fi connection current: < 170 mA • Shutdown power consumption: < 40 uA

• Charging current: > 180 mA (5 V) • Work with sensor distance: < 100 m / 328 ft (No obstructions) Wireless frequency: 433,92MHz Modulation: ASK

FCC Statement

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

This equipment has been tested and found to comply with the limits for

a Class B digital device, pursuant to part 15 of the FCC rules. These

limits are designed to provide reasonable protection against harmful

-Consult the dealer or an experienced radio/TV technician for help. To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. FCC Radiation Exposure Statement: The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your

000

Volume Button: Adjusts volume

Trumpet: Sound emission source

Hanging hole: Allows wall mounting

Power port: Connection to power supply

and beep twice), and play the prompt tone.

Siren port: Connection to external speake

*Arm/^Disarm Button: Toggles arming and disarming mode

panel will first flash the BLUE light once, beep once (when the volume

is maximum or minimum, the panel will first flash the BLUE light twice

When the panel is not connected to Wi-Fi, short press the [➪] key, the

volume is maximum or minimum, the panel will first flash the RED light

panel will first flash the RED light once and beep once (when the

twice and beep twice), and then play the prompt tone.

Indicator light: Indicates gateway mode by glowing light

单页尺寸: 80x100mm

材质:68G双胶 颜色: 彩色

展开尺寸: 160x100mm