

FIXO 800

3G FIXED PHONE



User manual



CONTENTS

- 1. Important Notices
- 2. Feature
- 3. Technology
- 4. Packing list
- 5. Keypad layout
- 6. Installing your phone
- 7. Phone operation
- 8. Menu settings
- 9. Input ways

1. Important Notices

- To ensure the normal use of various functions of this product, please read this manual carefully before use. And pay attention to the following matters:
- When charging the battery for the first time, please charg e continuously for more than 16 hours.
- For your personal safety, please do not use this product w hile driving.
- If encountering thunderstorm weather, please avoid using this machine.
- Shutdown should be performed on airplanes, hospitals, n
 ear hazardous materials, gas stations, and near hazardou
 s materials such as fuel and chemical agents.
- Please turn off the phone near medical devices that indica te that wireless phones cannot be used. This phone may i nterfere with implanted pacemakers, hearing aids, and ot her medical implanted devices.
- Using this product near electrical equipment such as telev isions, radios, and computers may cause interference, the reby affecting telephone performance.
- Please shut down and clean the phone. When cleaning the
 e phone, please use a slightly damp or anti-static cloth, a
 nd do not use cleaning agents or other chemical products.
- This product generates electromagnetic fields, please do

- not place it near magnetic storage media such as comput er disks.
- Please do not expose this product to strong sunlight to av oid heating.
- Please avoid all kinds of liquids entering the interior of the phone to avoid damage.
- Please do not throw, place, or tap the phone rudely, other wise it may cause damage to the internal circuit board
- Before sending and receiving calls, please pay attention t
 o the local legal system regarding the use of mobile wirele
 ss phones and be mindful of it during use.
- Please use the power adapter and battery specified by th e manufacturer, as using other power supply devices may cause danger.
- Due to the continuous upgrading of the phone's functions, there may be some discrepancies with the manual during actual use. We apologize for any inconvenience caused.

2. Feature

- bands:2G GSM、3G WCDMA 850/1900MHz。
- LCD display with green backlight,
- Speed dialing, redial function
- Phonebook
- Two ways handsfree
- Mute
- Handset and speaker volume adjustable
- Selectable ring tones and alarming tones
- Selectable SMS tones
- Receiving and sending short massage in Spanish and English
- FM radio

3. Technology

- Environmental temperature: -10⁰C ~ 55⁰C
- Relative humidity: ≤ 90%
- Atmospheric pressure: 86-106Kpa
- Working frequency: 2G: GSM Quad
- Band; 3G: WCDMA 850/1900MHz
- Size: 220 * 175 * 65mm (length * width * height)
- Working voltage: AC220V, 50Hz, USB 5V 1000mA
- Backup battery: Rechargeable lithium battery 3.7V 1000m Ah
- Standby time: 48 hours or more
- Continuous call duration: about 4 hours

Note: The standby time and continuous call time depend on the local network situation.

4. Packing list




Phone base phone handset power charger



Battery antenna user manual book

Note: the pictures are for reference only, subject to the actual product

5. KEYPAD LAYOUT

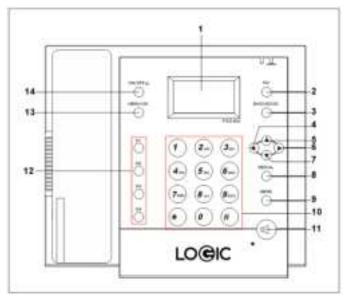

- 1. LCD screen
- 2. FM: In standby mode, press this button to enter the FM me nu;
- 3. Back/BOOK: In standby mode, press this button to enter th e phone book; In menu operation mode, press this key to exec ute the function in the bottom right corner of the screen;

- Direction [◄] key: In standby mode, press this key to enter the SMS writing interface; In menu operations, move the curso r to the left;
- 5. Direction; Keys[▲]: In standby mode, press this key to ent er the phone book; Press this button to enter volume adjustme nt during an incoming call;
- 6. Direction Keys [▶] key: In standby mode, press this key to enter the scene mode interface. In menu operations, move the cursor to the right;
- 7. Direction keys [▼]; Key: In standby mode, press this key to enter call history; Press this button to enter volume adjustment during an incoming call;
- 8. REDIA: When in standby mode or after removing the phon e, press this button to directly dial the nearest set of outgoing n umbers.
- SEND: When a number has been entered, press this butto n to call the current number;
- Number keyboard: Enter corresponding numbers or characters;
- 11. Handsfree: Turn on or off the hands-free mode;

- 12. M1M4: In standby mode, press this key to enter shortcut ke y settings. After setting the shortcut, you can quickly dial the ph one number;
- 13. MENU/OK: In standby mode, press this key to enter the ma in menu; Pressing this key during menu operations will execute the confirm function;
- 14. ON/OFF: Press and hold this button for 3 seconds in the sh utdown state to turn on the phone. Press and hold this button f or 3 seconds in the startup state to turn off the phone;

6. Installing your phone

Installing SIM card and battery

- A. After opening the battery cover, insert the SIM card horizo ntally with the metal side facing downwards (with the notch faci ng you) so that the SIM card metal plate makes good contact w ith the card holder.
- **B.** Insert the battery connector of the phone into the socket at the bottom right corner of the battery compartment, then place t he battery horizontally in the compartment, and finally close the battery cover.
- C. Attention:
- **D.** It is absolutely forbidden to insert or remove a SIM card while it is turned on, otherwise the SIM card
- E. may be damaged.
- F. Connect external power supply
- **G.** Connect one end of the power supply provided by the phon e to the mains, and the other end to the SUB power socket at t he back of the phone.
- H. connection handle
- **I.** Connect one end of the handle provided with the phone to the interface at the end of the handle, and the other end to the interface at the end of the handle, and the other end to the interface at the end of the handle, and the other end to the interface at the end of the handle, and the other end to the interface at the end of the handle, and the other end to the interface at the end of the handle provided with the phone to the interface at the end of the handle provided with the phone to the interface at the end of the handle provided with the phone to the interface at the end of the handle provided with the phone to the interface at the end of the handle provided with the phone to the interface at the end of the handle provided with the other end to the interface at the end of the handle provided with the other end to the interface at the end of the handle provided with the other end to the interface at the end of the handle provided with the interface at the end of the handle provided with the interface at the end of the handle provided with the interface at the end of the handle provided with the end of the end of the handle provided with the end of the end

nterface on the left side of the phone.

- J. Power on/off
- **K.** Before starting up, please ensure that the phone battery is charged or connected to an external power source, and that the SIM card is installed correctly; Press the "On/Off" button again to turn on the device. The interface with the name of the network operator that appears after the startup ringtone and startup animation is the standby interface.
- **L.** In the standby interface, long press the ON/OFF key and y ou will see a shutdown animation accompanied by a shutdown bell, and then your phone will be turned off.

7. Phone operation

7.1 Making phone calls

In standby mode, pick up the receiver or press the hands-f ree button, then press the number keys to input the number; Aft er entering the number, press the [Redial/Send] button to make a phone call.

7.2 Answer phone calls

When there is an incoming call on the phone, there will be

a ringtone prompt. If the incoming number is stored in the phon e book, the corresponding name will be displayed. Pick up the r eceiver or press the hands-free button to answer the call. Whe n using the earpiece to answer, put the earpiece back in place and perform the hang up operation; When making a hands-free call, press the hands-free button again to hang up.

7.3 Hands free function

Press the [Handsfree] button to directly answer or make a call. Lifting the earpiece will switch to a controller call, and the c all will end and hang up directly. If you need to switch to a hand s-free call during a call, you should press the hands-free button before putting the controller back in place.

7.4 Sending

After entering the number, press the [Redial/Send] button t o dial this number.

When checking the phone book, if you find the number yo u want to dial, simply press the [Redial/Send] button.

7.5 Redial

Press the [Redial/Send] button on the standby interface, a

nd the phone will directly dial the nearest set of outgoing numbers;

After the phone handle or hands-free pick up, press the [Redial/Send] button, and the phone will directly dial the nearest set of outgoing numbers;

7.6 Adjusting call volume

During a call, press the ▲ key to increase the call volume; Pre ss the ▼ key to reduce the call volume; There are 9 levels of a djustable volume.

8. Menu setting

8.1 allows you to save multiple sets of names and phone n umbers on your SIM card or phone. Through this menu, you can perform operations such as adding, searching, and deleting. In standby mode, press the [Contact Book/Back] button to quick ly access the phone book list. In standby mode, press the [Menu] key to enter the main menu, select contacts, press OK to enter the sub menu of contacts, and the cursor will be displayed at the first record in the contacts. Press any number key or ▲ key to move the cursor to the search area;

Search:

Search for the contact record you need to search for, and when the cursor is displayed in the search area, directly enter the desired contact information

The name or number of the contact you want to search for can be quickly searched for. After finding the corresponding contact record, press the ▼ key to move the cursor to the corresponding record, and press the 【 OK 】 key to enter its subdirectory. You will be able to view details, edit, dial, send text messages, and other operations.

- **Details:** View the detailed content of the record; You can als o view the detailed content of the record by pressing [MEN/OK]; When viewing detailed records, press the [MEN/OK] key to dire ctly enter editing mode. Press the option key in the bottom left corner to perform the following operations:
- Editing: Edit the record
- Delete: Delete the record:
- Copy: Copy the record from the SIM card to the phone (or fr om the phone to the SIM card)
- New: Add a new record and save it to Phone or SIM;
- Write message: edit the message for the phone number and send the short message;

Call: The selected record of the call;

• delete: delete the currently selected number;

Delete multiple: can mark and select to delete some or all records from the SIM card or phone;

Copy contacts: Copy all or marked partial records from the SIM card to the phone, or copy all or marked partial records from the phone to the SIM card;

- Import/Export: Import and export contacts.
- Other: Speed dial can be set to 2-9; Check the available capacity of the SIM card or local device.

8.2 SMS

The phone's inbox, outbox, draft box, and sent messages can store over 200 short messages, and the storage capacity in the SIM card depends on the specific situation of the card. The inbox stores all received SMS, the outbox stores SMS that were not successfully sent, and the draft box stores messages that were not sent but have been saved. If a message has been sent, it will save the message that was successfully sent.

In standby mode, press the [Menu] key to enter the main menu, press the $[\blacktriangle, \blacktriangledown]$ key to select SMS, then press the [OK] key to enter the SMS menu. Press the $[\blacktriangle, \blacktriangledown]$ key to move the cursor and select any submenu under SMS. The phone can

enter the following operations:

8-2-1 Write message:

In standby mode, after entering the information service submenu from the menu, press the 【▲, ▼】 keys to select "write message", and the cursor will be displayed on the screen. At this time, directly enter the text message content (see "9. Introduction to Input Method" for input methods). After entering, press the 【 Options 】 key, and the screen will prompt:

- Send: Send this text message;
- Add common phrases: Insert common phrases saved in the phone;
- Save to Draft Box: The currently edited SMS content can be saved to the draft box.
- Exit: Exit SMS editing mode.

8-2-2 Inbox

After entering the SMS submenu, press the 【▲, ▼】 ke ys to select the inbox and confirm. The screen displays a list of received SMS messages. Press the 【▲, ▼】 keys to select a certain information, then press the 【OK】 key or 【Option s】 key to enter the options menu. You can perform the following operations on this record:

Selection: View SMS content;

After viewing the content of the text message, you can perform the following operations:

- •Forward: Forward the short message to others;
- Delete: Delete the short message;
- Delete All: Delete all information from the receiving mailbox
- •Reply: The sender's reply to this message;
- Dialing: Call the sender of the text message;
- •Add to contact: Add the selected number to the address book k or overwrite the original record by adding the selected number to the address book;
- Delete duplicate numbers: Information about duplicate num bers can be deleted.
- Add to blacklist: The contacts of this message can be added t o the blacklist.
- Delete All: Delete all information from the inbox list;
- Exit: Exit the inbox menu.

8-2-3 Outbox:

The Outbox stores SMS messages that were not successfully sent. The operation method can refer to the 8-2-2 inbox.

8-2-4Draft Box:

Information that has not been sent but has been saved is s

aved in the draft box. The operation method can refer to the 8-2-2 inbox.

8-2-5 Sent Mailboxes:

Successfully sent SMS messages are saved in the Sent Mailboxes. The operation method can refer to the 8-2-2 inbox.

8-2-6 template:

SMS template, you can add your own SMS template and set a total of 10 SMS templates.

8-2-7 SMS broadcast: SMS broadcast can be set.

8-2-8 SMS settings

SMS service center:

Set SMS center number; SMS validity period: The SMS validity period can be set to 1 hour, 6 hours, 24 hours, 72 hours, 1 week, with a maximum value.

- Delivery report: After turning on this function, for every SMS s
 ent, the phone will receive a delivery report, informing that the
 SMS was successfully or failed to be sent;
- Reply path: You can choose to turn on or off the reply path.
- Preferred storage: can select SIM or Phone.
- **8-2-9 SMS capacity:** SMS capacity can be queried.

8.3 Call logs

In standby mode, press the [Menu] key to enter the main menu, press the [▲, ▼] keys to select call records, and press the [OK] key to enter the call records menu.

8-3-1 Missed calls

can be accessed to view the number and time of the misse d call; When there is a missed call, the phone display screen di splays a missed call prompt interface;

After entering the call history menu, the cursor is displayed at t he "Missed Calls" position. Press the [OK] key to enter the list of missed calls, press the [▲, ▼] key to select a record, press t he [Menu] or [OK] key to view it, and press the [Options] key to perform the following operations:

- Details: View the specific information of the selected record.
- Call: dials the missed phone number.

Write message: Send a text message to the missed phone number.

 Add to contact: Save the missed phone number to the SIM card or phone.

Add to Blacklist: Save the missed phone number to the blackl ist.

Delete: Delete the missed phone number.

Clear all records: Delete all missed call records.

8-3-2 outgoing number:

Enter the dialed number to view the outgoing number and the time of outgoing calls; The operation can refer to 8-3-1 for missed calls.

8-3-3 Received calls:

Enter the received calls to view the received phone number, call time, and call duration; The operation can refer to 8-3-1 for missed calls.

8-3-4 Reject phone calls:

Enter the received phone number to view the received phone number, call time, and call duration; The operation can refer to 8-3-1 for missed calls.

8-3-5 Clear all records: Delete all call records.

8-3-6 Call Time: Call time can be queried.

8.4 Settings

In standby mode, press the [Menu/OK] key to enter the main menu, press the [▲, ▼] keys to select settings, and press the [OK] key to enter the settings submenu.

8-4-1 Call Settings

In standby mode, press the [Menu] key to enter the main

menu, press the [▲, ▼] keys to select "Call Settings", and then press the [OK] key to enter the submenu;

Voice mail server: can be set to be turned on or off.

Call forwarding: When you are unable to answer or do not want to answer a call, transfer the call to another phone number.

1. Always transfer:

Does the phone transfer all voice calls to another designat ed phone. Press the [OK] key to follow the interface prompts fo r operation.

2 .Transfer when busy:

When the phone is busy, whether to transfer incoming call s to another designated phone or voice mailbox. Press the [OK] key to follow the interface prompts for operation.

3. Transfer when no one answers:

Does the phone transfer incoming calls to another designa ted phone or voice mailbox when no one answers. Press the [OK] key to follow the interface prompts for operation.

4. Transfer when unable to connect:

Whether to transfer incoming calls to a designated phone or voice mailbox when the phone is in a state where there is no network or when it is turned off and unable to connect. Press the [OK] key to follow the interface prompts for operation.

Call waiting:

Set to turn call waiting on or off. After activating the call function, when the phone is in a call, if there is another incoming call, the network will prompt the other party to wait, and the phone can choose whether to answer the call.

Call restriction: When you want to restrict calls, you can make corresponding settings.

- 1. All outgoing calls: Restrict all outgoing calls;
- **2.All incoming calls:** Restrict all incoming calls. Same as all o utbound operations;
- Incoming calls during roaming: When the device is roaming, all incoming calls are restricted;
- 4. International long-distance calls: restrict all international number calls;
- 5. International Long Distance Roaming Outbound: When t his device is in international roaming, all outbound calls are res tricted, just like all outbound operations;

- 6. Cancel All: Used to cancel the setting of all call restrictions;
- **7. Change password:** For each call restriction setting, a pass word needs to be entered. After entering the correct password, the modification can be performed;

Note: Voice mailbox, call forwarding, call waiting, and call restriction functions all require support from the network operator. If the phone cannot be set up successfully, please contact your network operator.

Other:

Call time minute reminder, Reply sms after rejection

8-4-2 Phone settings:

Time&date: After entering this setting, you can set the phon e time, date, time display format, and date format;

Language settings: can be set to "English" or "Spanish"

Post dialing delay: Set the delay dialing time. The default is 4 seconds;

Restore factory settings: Press the [OK] button to restore t he phone to its original factory settings and restart it; The initial password is: 1234

8-4-3 Display

Contrast: Set the display contrast to 5 levels by default, for a total of 7 levels&# 9632; Backlight: Set the backlight time, with a default of 15 seconds and a maximum of 5 minutes.

8-4-4 Security:

PIN: Enter PIN (4~8) Remain 3 time (s);

ModifyPIN:

The default password for SIM is provided by your network operator, usually 1234. Please change the PIN code in a timely manner to avoid illegal use of the SIM card. [Image] Note: If the PIN code is entered incorrectly three times in a row, the SIM card will be locked. At this time, you need a PUK code to unlock the SIM card. The PIN code and PUK code may be provided to you together with the SIM card. If not, please contact your network provider. The default PIN code is usually 1234, please change it to your personal password as soon as possible;

Phone locked: can set phone lock, modify the phone passwor d, Privacy;

Auto keypad lock:

After setting the screen lock function, when the phone is in a non working state for 30 seconds, the phone automatically starts screen lock. If you need to operate the phone, you need to enter the correct lock password. None: Cancel screen lock function Password: Set screen lock password and enable screen lock function; Lock screen by end key: can be set to open and close; Fixed dialing number: can be set to turn on and off, Fixed dialing number; Modify PIN2;

Blacklist: can view blacklist and blacklist settings.

8-4-5 Connections:

Network account:

Start data network: Turn on or off mobile data network. Mo bile data network roaming: enable the mobile data network roaming function. Network selection: view or select the network co nnection method, automatically select or manually select. Preferred network type: Set the preferred network mode for the phon e. Optional: 3G/Multi mode, near 3G mode

8-4-6 Version:

You can view the software version number and hardware version through this menu.

8.5 Scenario Mode

In standby mode, press the [Menu] key to enter the main menu, press the [▲, ▼] keys to select "Scenario Mode", and then press the [OK] key to enter the submenu;

Ring settings: Caller ringtone and Message ringtone can be set

Adjust volume: Caller ringtone and Message ringtone can be set; Alarm&calendar ringtone; Call volume; Power ringtone, etc.

Ring type: can set call alert, message alert, etc.

Other alert rings: Key tone, Battery low alert, Power ringtone, etc. can be set.

8.6 FM radio

8-6-1 Play: FM radio can be turned on or off

8-6-2 Auto search and save:

can automatically receive and save stations to the radio st

ation list.

8-6-3 Channel list:

You can view the radio station list and select one to play.

8-6-4 Save: You can manually input a radio station and save it.

8-6-5 Manual search: can manually search for radio stations

8-6-6 Close: FM radio can be turned off

8.7 Toolbox

In standby mode, press the [Menu] key to enter the main menu, press the $[\blacktriangle, \blacktriangledown]$ keys to select the "Toolbox", and then press the [OK] key to enter the submenu:

8-7-1 Alarm

Enter the alarm menu, and the phone will display a list of alarms. You can perform the following operations:

On/Off: Turn on or off the current alarm clock;

Edit: Edit the current alarm content, including time, repetition mode, and ringtone;

New: Create a new alarm clock;

Delete: Delete the current alarm clock;

Note: When a certain alarm time expires, you can choose to turn it off or pause, and choose to pause; After 10 minutes,

the alarm will ring again; Select stop to stop this alarm;

8-7-2 Calendar

You can view the current date or specify a date.

8-7-3 Calculator

You can perform simple addition, subtraction, multiplication, and division operations. The left arrow key is the '*' key, the right arrow key is the '/' key, the up arrow key is the '+' key, and the down arrow key is the '-' key. The calculated result is the menu key.

8-7-4 Timer

You can set the stopwatch.

9. INPUT WAYS

You can use the keyboard to input Spanish, English, var ious symbols and numbers, such as adding or editing records a nd editing text messages in the phone book.

Input methods include English: Abc, abc, ABC, EN, En, en

number: 123, Spanish: sSp, ssp, Ssp, Sp, sp, SP.

When using input methods: press the # key to switch betw een input methods, press the directional navigation key, select the text or symbol in the candidate area, and press the [Menu/Confirm] key to input to the editing area.

When an editing action occurs, press the "Business Book/ Back" button to clear the text or pinyin in front of the cursor.

ABC/abc input method

The Abc, abc, ABC, EN, En, and en input methods are general English input modes, where you can input the letters you want by pressing the number keys.

Ssp/SSP input method

The sSp, SSP, Ssp, Sp, sp, and SP input methods are general Spanish input modes, where you can input the letters you want by pressing the number keys.

123 Number Input Method

In the number input method, you can input numbers by pressing the number keys.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is1.6 W/kg averaged over one gram of this Device 3G DESK PHONE (FCC ID: O55131324) has been tested against this SAR limit. SAR information on this can be viewed on-line at http://www.fcc.gov/oet/ea/fccid/. Please use

the device FCC ID number for search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, 10mm separation distance should. maintained to the user's bodies

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However,

there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.