

蓝牙遥控器·操作指南



■ 电源键：

长按电源键，开启/关闭蓝牙遥控器。

注：蓝牙遥控器开启后 3 分钟内未与热像仪连接上，则自动关机。

■ 向上键：

连接上热像仪后，可操作热像仪端‘向上键’所有功能。

■ 菜单键：

连接上热像仪后，可操作热像仪端‘菜单键’所有功能。

■ 向下键：

连接上热像仪后，可操作热像仪端‘向下键’所有功能。

■ 指示灯：

红色：蓝牙遥控器开启，未连接上热像仪，长亮一段时间后熄灭；

绿色：蓝牙遥控器开启，已连接上热像仪，长亮一段时间后熄灭；

红灯闪烁：蓝牙遥控器电量低时，闪烁一段时间后熄灭。

■ 安装方式：


蓝牙遥控器通过子母魔术贴来固定，毛面绑定在需固定处，勾面粘贴在遥控器背面，毛面与勾面贴合使用。

武汉高德智感科技有限公司

<http://www.guideir.cn>



Bluetooth remote controller instructions

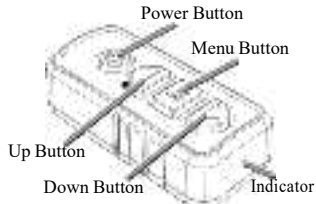

■ Power button:

Long press the power button to start up the Bluetooth remote controller.

Remark: If the bluetooth remote controller is not connected to the thermal imager within 3 minutes, it will automatically shut down.

■ Up button:

After the connection with a thermal imager, all functions of the “Up button” from the thermal imager can be operated.

■ Menu button:

After the connection with a thermal imager, all functions of the “Menu button” from the thermal imager can be operated.

■ Down button:

After the connection with a thermal imager, all functions of the “Down button” from the thermal imager can be operated.

■ Indicator:

Red: It keeps a constant red indicating for a certain while and goes off if the Bluetooth remote controller is on but not connected with a thermal imager.

Green: It keeps a constant green indicating for a certain while and goes off if the Bluetooth remote controller is on and connected with a thermal imager.

Red flicker: It flickers for a certain while and goes out if the battery capacity of the Bluetooth remote controller is low.

■ Installation Methods:

The Bluetooth remote controller is fixed by magic tape, the matte surface is attached to the fixed point while the hook surface is stuck to the back of the remote controller, and both the matte and the hook surfaces are affixed and fixed together.

Wuhan Guide Sensmart Tech Co., Ltd.

<http://www.guideir.com>

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and

receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the unit.