

FOLDED IN



## TROUBLESHOOTING

**When earbuds do not sync together or become disconnected during use.**

1: Put Earbuds back into charging case. Open up Bluetooth setting on your mobile device and scan for “ **BPM Sound Pack** ”.

**Device cannot find Bluetooth earbuds**

1: Check whether earbuds are charged.

**If earbuds always disconnect or make noise when playing:** The bluetooth earbud's power status is low, please charge it. Or there may be obstructions between the mobile device and the bluetooth earbuds or the distance is beyond signal range (<32ft).

**Q support:**  
**877-543-3540**

FOLDED IN



## WARNINGS

Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to.  
To reduce the risk of injury : Keep batteries out of reach of children. Do not heat, open, or dispose of battery pack in fire. Do not allow metal objects to touch the battery on the device. Do not expose battery pack to excessive heat.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.



## PACKAGE CONTENTS

- (1) - left earbud
- (1) - right earbud
- (1) - pair of silicone eartips
- (1) - silicone neckband
- (1) - carrying charging case
- (1) - charging cable
- (1) - user manual

BACK



MODEL #S  
2BMTW0220W0G7



### Technical Specs:

Bluetooth version: 5.0  
Battery capacity: Earphone battery 40mAh  
Charging case battery: 300 mAh  
Effective distance: 32ft  
Earbud Working time: Up to 2 hours per charge  
Standby time: 12 hours  
Earbud charging time: About 1 hour  
Charging case charging time: About 1.5 hours

FRONT




## QUICK START GUIDE

### Bluetooth Easy-Sync

- 1** Turn on earbuds  
(earbuds should turn on automatically once taken out of charging case)
- 2** Turn on Bluetooth on your phone or bluetooth device
- 3** On phone select:  
**BPM Sound Pack**  
from list of available bluetooth devices.

OUTSIDE

## BUTTON FUNCTIONS

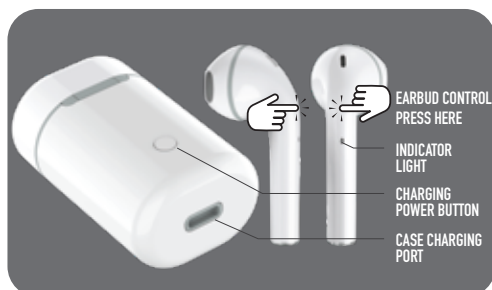

### LEFT BUTTON

**VOLUME DOWN (-):**  
Quick press 2 times

**PREVIOUS SONG:**  
Quick press 3 times

**PLAY/PAUSE:** Press 1 time  
**ANSWER/END CALL:** Press 1 time

**ON:** Take earbuds out of case

**OFF:** Put earbuds into case

**VOICE ASSISTANT:** Press and hold for 2 seconds

### RIGHT BUTTON

**VOLUME UP (+):**  
Quick press 2 times

**NEXT SONG:**  
Quick press 3 times

## CONNECTING TO BLUETOOTH

1: Auto Pairing: When taking out the wireless earbuds from the charging case the earbuds will automatically turn on, sync together and enter pairing mode. *\*note: when in pairing mode only the right headphone will flash red and blue. Once connected all lights will turn off.*

2: Activate Bluetooth on your mobile device, find the pairing name “ **BPM Sound Pack** ” and connect it.

**The earbuds will re-connect with the last device after re-start.** If earbuds do not re-connect, re-connect manually by selecting earbuds from the bluetooth menu list in the mobile phone device.

**Disconnect from mobile device:**  
Disconnect manually by selecting the earbuds name in your mobile device's bluetooth list and press the disconnect button.

more info

## PHONE

Phone calls: when call is incoming, unit will pause playback and ring to alert you of call. Press either earbud to answer call. To end call press either button.

## CHARGING

Connect the charging case to a power supply with the included cable and charge it completely (light will flash red when charging, and will stay red when fully charged). Fully charge the case and earbuds before using for the first time.

-If earbuds do not start charging when put into case, press case power button to manually make sure it starts charging

**-Warning: Earbuds should only be used with provided charging case.**

## HOW TO USE EARBUDS WITH ACCESSORIES



INSIDE

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.