

## **FS-BTWS582 WIRELESS HEADPHONES USER GUIDE**



**Atlantic**  
TECHNOLOGY

343 Vanderbilt Avenue Norwood, MA 02062  
Telephone: (781) 762-6300 Fax: (781) 762-6868

## Important Safety Instructions

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE**

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**



### Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.



12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Grounding or Polarization—This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Alternate Warnings—This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

16. Ventilation—Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

17. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

18. CLASS II apparatus with double insulation, and no protective earth provided.

19. CAUTION: Danger of explosion if the remote control battery is incorrectly replaced. Replace only with the same or equivalent type.

20. WARNING: The remote control battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

21. No naked flame sources, such as lighted candles, should be placed on the apparatus.



# Important Safety Instructions

## FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

## FCC WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Caution: To comply with the limits for an FCC Class B computing device, always use any shielded signal cord supplied with this unit. The Federal Communications Commission warns that changes or modifications of the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Frequency Interference Statement

Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

## European Union Information on Disposal for Users of Waste Electrical & Electronic Equipment (private households)

This symbol on the product(s) and / or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge.

Alternatively, in some countries you may be able to return your products to your local retailer upon purchase of an equivalent new product.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union  
This symbol is only valid in the European Union. If you wish to discard this product please contact your local authorities or dealer and ask for the correct method of disposal.



Qualcomm aptX is a product of Qualcomm Technologies International, Ltd. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.

# Introduction



- 1. Skaa Indicator LED(Multicolor),**  
**When you turn to SKAA mode, the SKAA LED will be on.**  
**See Page 7 For Detail**
- 2. Skaa Bond Button,**  
**When you press once, it will search for the connection signal**  
**that has been set.**  
**When you press twice, it will search for the surrounding**  
**connection signal.**  
**See Page 7 For Detail**
- 3. Volume Up Button**
- 4. Volume Down Button**

# **Introduction**

## **5. Bluetooth Button**

**When the call comes in, press the Bluetooth Button to pick up the call. When you press the Bluetooth Button again, the call will hang up.**

## **6. Bluetooth Indicator LED(blue)**

**When your phone hasn't connected with the earphone, Bluetooth Indicator LED will stay twinkle.**

**When your phone connected with the earphone, Bluetooth Indicator LED will be on.**

## **7. Power Button/Play/Stop/Next/Previous**

**When you press once, it will turn on or turn off the music**

**When you press twice, it will select next song**

**When you press three times, it will select previous song**

## **8. SKAA and Bluetooth Switch**

**If you want to use the SKAA function, you should turn the switch to SKAA**

**If you want to use the Bluetooth function, you should turn the switch to Bluetooth**

## **9. Stereo Jack**

**When the battery of the earphone dies, you can connect the phone with STEREO JACK through audio cable.**

**See Page 5 For Detail**

## **10. charge Jack(USB Type c)**

**You can charge the product by the charger with TYPE C Jack.**

## **11. charge Indicator LED(Green/Red)**

**When the RED light twinkles, that means the battery will die soon. You should charge the production.**

**When the GREEN light is on, that means the production is charging. After the battery is full charged, the green light will be off.**



## Connecting a Bluetooth Source

 
Turn switch of the SKAA and Bluetooth to the BT mode, the BTWS582 will turn to Bluetooth mode. When in Bluetooth mode, the Bluetooth LED will be illuminated.



Enter pairing mode on the Bluetooth device you want to connect to the FS-BTWS582 and select the FS-BTWS582 from the discoverable devices list. This diagram represents the Bluetooth behavior of the FS-BTWS582

## Connection by phone

When the battery of the BTWS582 dies, you can connect the phone with earphone through audio cable. Then it works again.

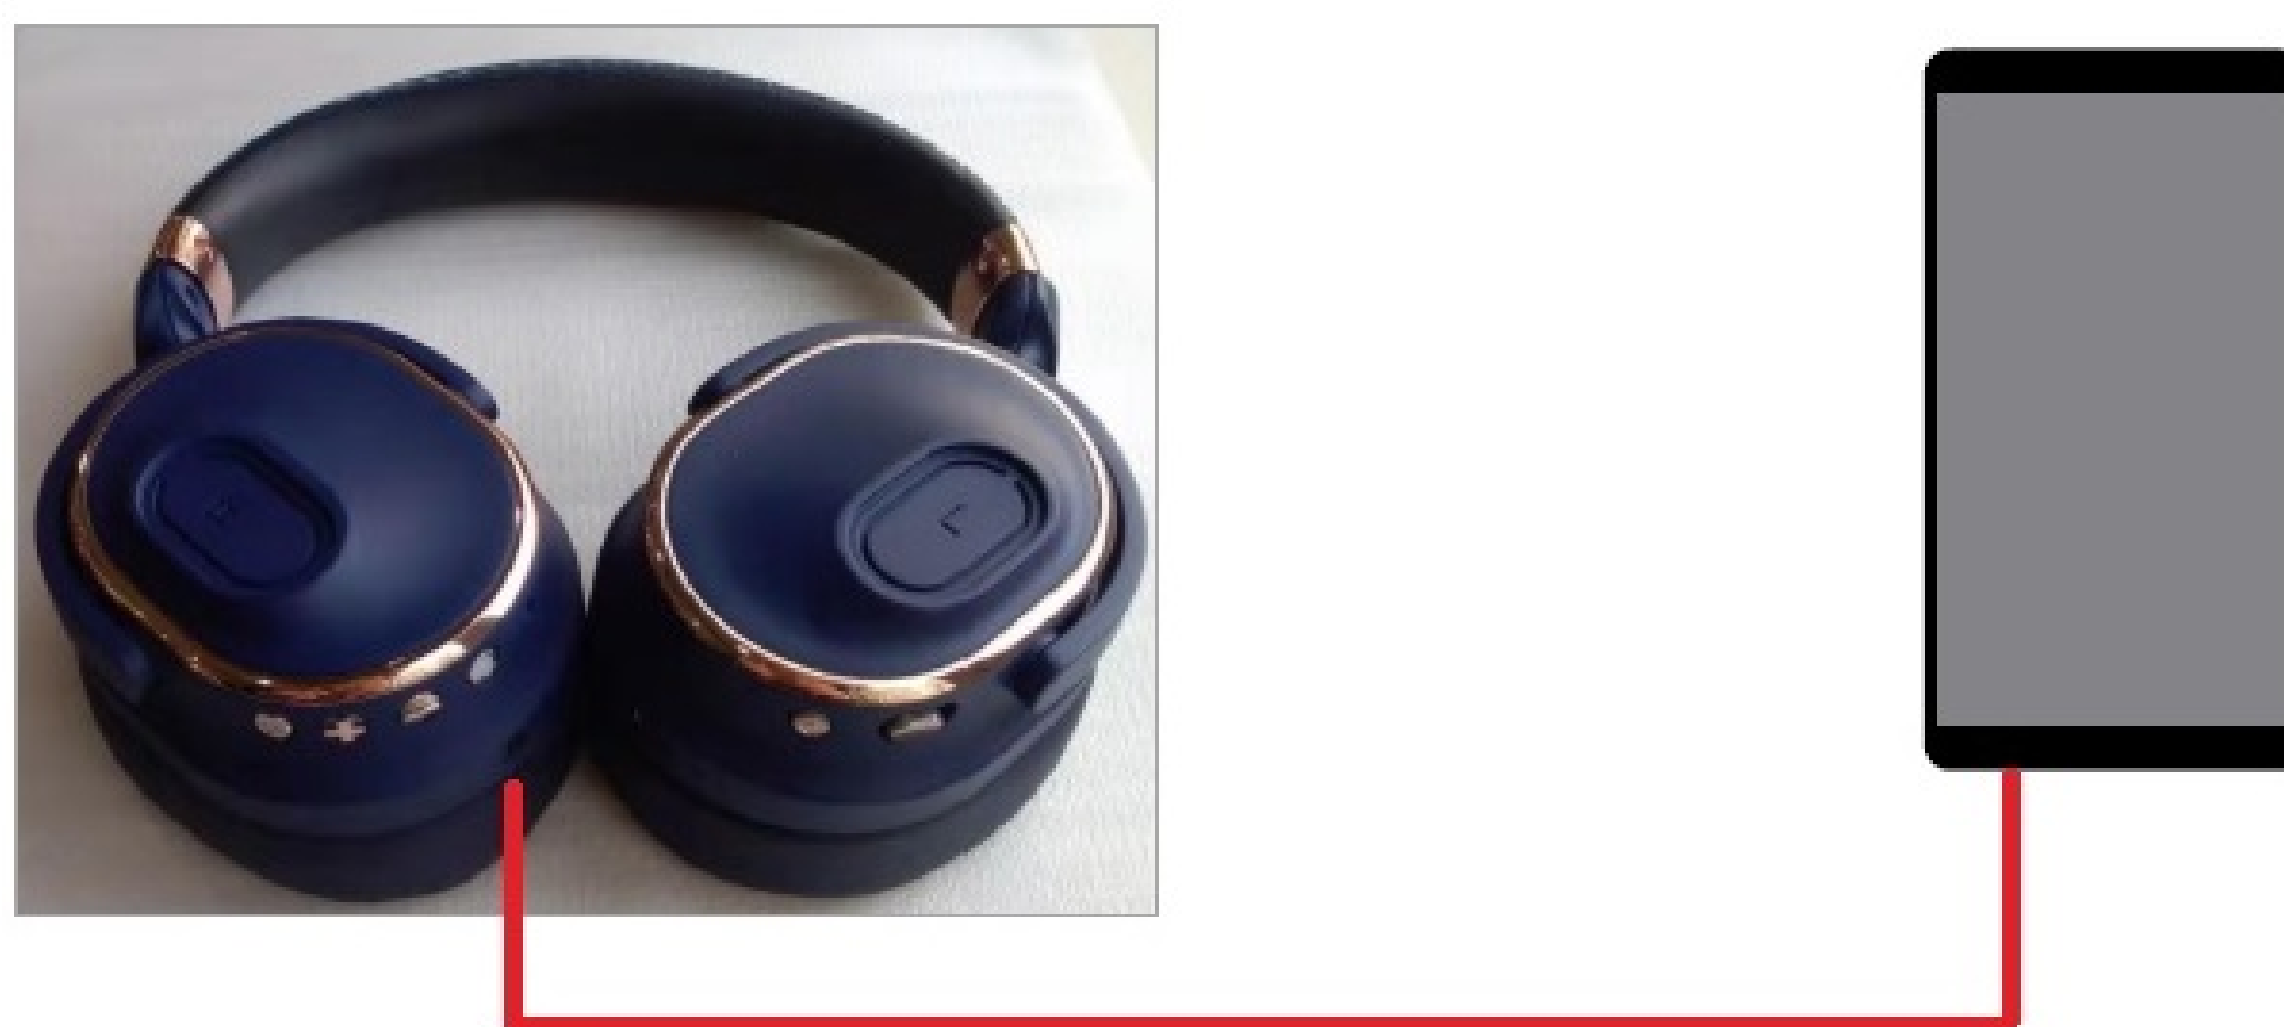



## Using your FS-BTWS582 as a SKAA receiver

The FS-BTWS582 can be used as an SKAA receiver when in SKAA mode. An SKAA receiver receives wireless audio from any SKAA transmitter. For a complete list of SKAA transmitters visit <https://hop.atlantictechnology.com/product/FS-BTWS582>

Ensure your SKAA transmitter is powered, and that your host device is playing audio. For example, if you are using a smart phone, make sure that your SKAA transmitter is plugged into your smart phone and that music is playing.

Turn switch of the SKAA and Bluetooth to the SKAA mode, the BTWS582 will turn to SKAA mode. The SKAA Indicator LED will illuminate once you have entered SKAA mode. When in SKAA mode, your FS-BTWS582 should automatically begin playing the audio received over SKAA through the speakers you have connected.



One SKAA transmitter can serve up to four SKAA receivers.





# Using your FS-BTWS582 as a SKAA receiver



| Bond Button        | Command  | Indicator Meaning  |
|--------------------|--|--|
| Hold a few seconds | <u>Add / Delete</u> Manually add / delete the current transmitter to / from your Green List  | ● to ● = Added<br>● (flash) = Deleted                            |
| -                  | <u>Auto Add</u> SKAA will automatically add the current Amber transmitter to your Green List if you listen to it for 30 minutes  | ● to ● = Added   |
| 1 Click            | <u>Green Mode</u> Rotate through your list of <i>favourite</i> transmitters (Green List) — when a favourite transmitter is found, the search stops and audio plays from that transmitter | ● (dim) = Hunting<br>● (flash) = Next one<br>● (bright) = Bonded |
| 2 Clicks           | <u>Amber Mode</u> <i>Explore</i> for new, unknown transmitters (ones which are not already on your Green List)   | ● (dim) = Hunting<br>● (bright) = Bonded                         |

| Bond Button          | Command  | Indicator Meaning   |
|----------------------|--|---|
| 3 Clicks             | <u>Mute</u> do again to Unmute; any Click command will first Unmute and then do its function   | ●, ● or ● = Muted (slow flash)  |
| 4 Clicks             | <u>Red Mode</u> If you have 2 or more transmitters on your Green List, power on just the one you want to hear and it plays automatically.  | ● (dim) = Hunting<br>● (bright) = Bonded  |
| 6 Clicks             | <u>Factory Reset</u> Clear Green List. Start Over!   | ● (flash) = Reset Done  |
| Hold during power on | <u>Make a Cluster of Receivers:</u><br>1. Power off all transmitters and receivers<br>2. Power on the Master receiver while holding down its Bond Button—hold the button down until the Indicator begins to flash Red<br>3. With the remaining receivers within 3 meters of the Master receiver, power on the first one, wait for its Indicator to flash Red and then power on the second one; continue until all of them are powered on<br>4. Once all of the Indicators stop flashing (turn solid Red), power off all of the receivers | ● (flash) = Receiver has entered 'Cluster Up' mode<br>● (bright) = The Cluster has been successfully made |





## SKAA cmd

SKAA cmd is an optional App available for iPhone, iPad, iPod, Android, Mac and PC. You can find it on our website [www.skaa.com/tlc/](http://www.skaa.com/tlc/) or in the iOS App store and Google Play. SKAA cmd is great for getting the most out of your FS-252. To use SKAA cmd, throw your FS-252 into SKAA mode, download the app, insert a SKAA transmitter and check out all of the customizable features of SKAA. SKAA cmd only works with seven specific SKAA transmitters: Izabella, Diz, Ursula, Gemma, Akiko, Talisa and Cassandra. The FS-252 will not work with SKAA cmd unless you are using one of the supported transmitters.

## SKAA CMD

— THE APP YOU DON'T REALLY NEED!

SKAA cmd works with these 7 transmitters:

- Izabella
- Diz
- Ursula
- Gemma
- Cassandra
- Akiko
- Talisa

Click a receiver's name to change it to something more descriptive

Click a speaker icon to Mute and Unmute the speaker. The speaker icon flashes and the slider loses its color when the speaker is muted.

More than one green bond block means this is a Cluster. Download the SKAA Receiver User's Guide to learn more about Clusters.

Customize your transmitter's name by clicking on it

Click here to set the transmitter's power mode:

- Red = on
- Grey = off
- White = Auto-On;

The vertical bar in the icon means the transmitter is on.

Click a green bond block to set audio channel routing:

- Left
- Right
- Mono
- Stereo

 
Not all of these options are enabled on all receivers.

Change just this receiver's volume by dragging this slider

Each one of these bays shows an SKAA receiver or Cluster that is bonded to your transmitter.

Click this triangle to mute all receivers at once. Click each speaker icon individually to make it resume play.

This master volume slider controls all receivers bonded to this transmitter

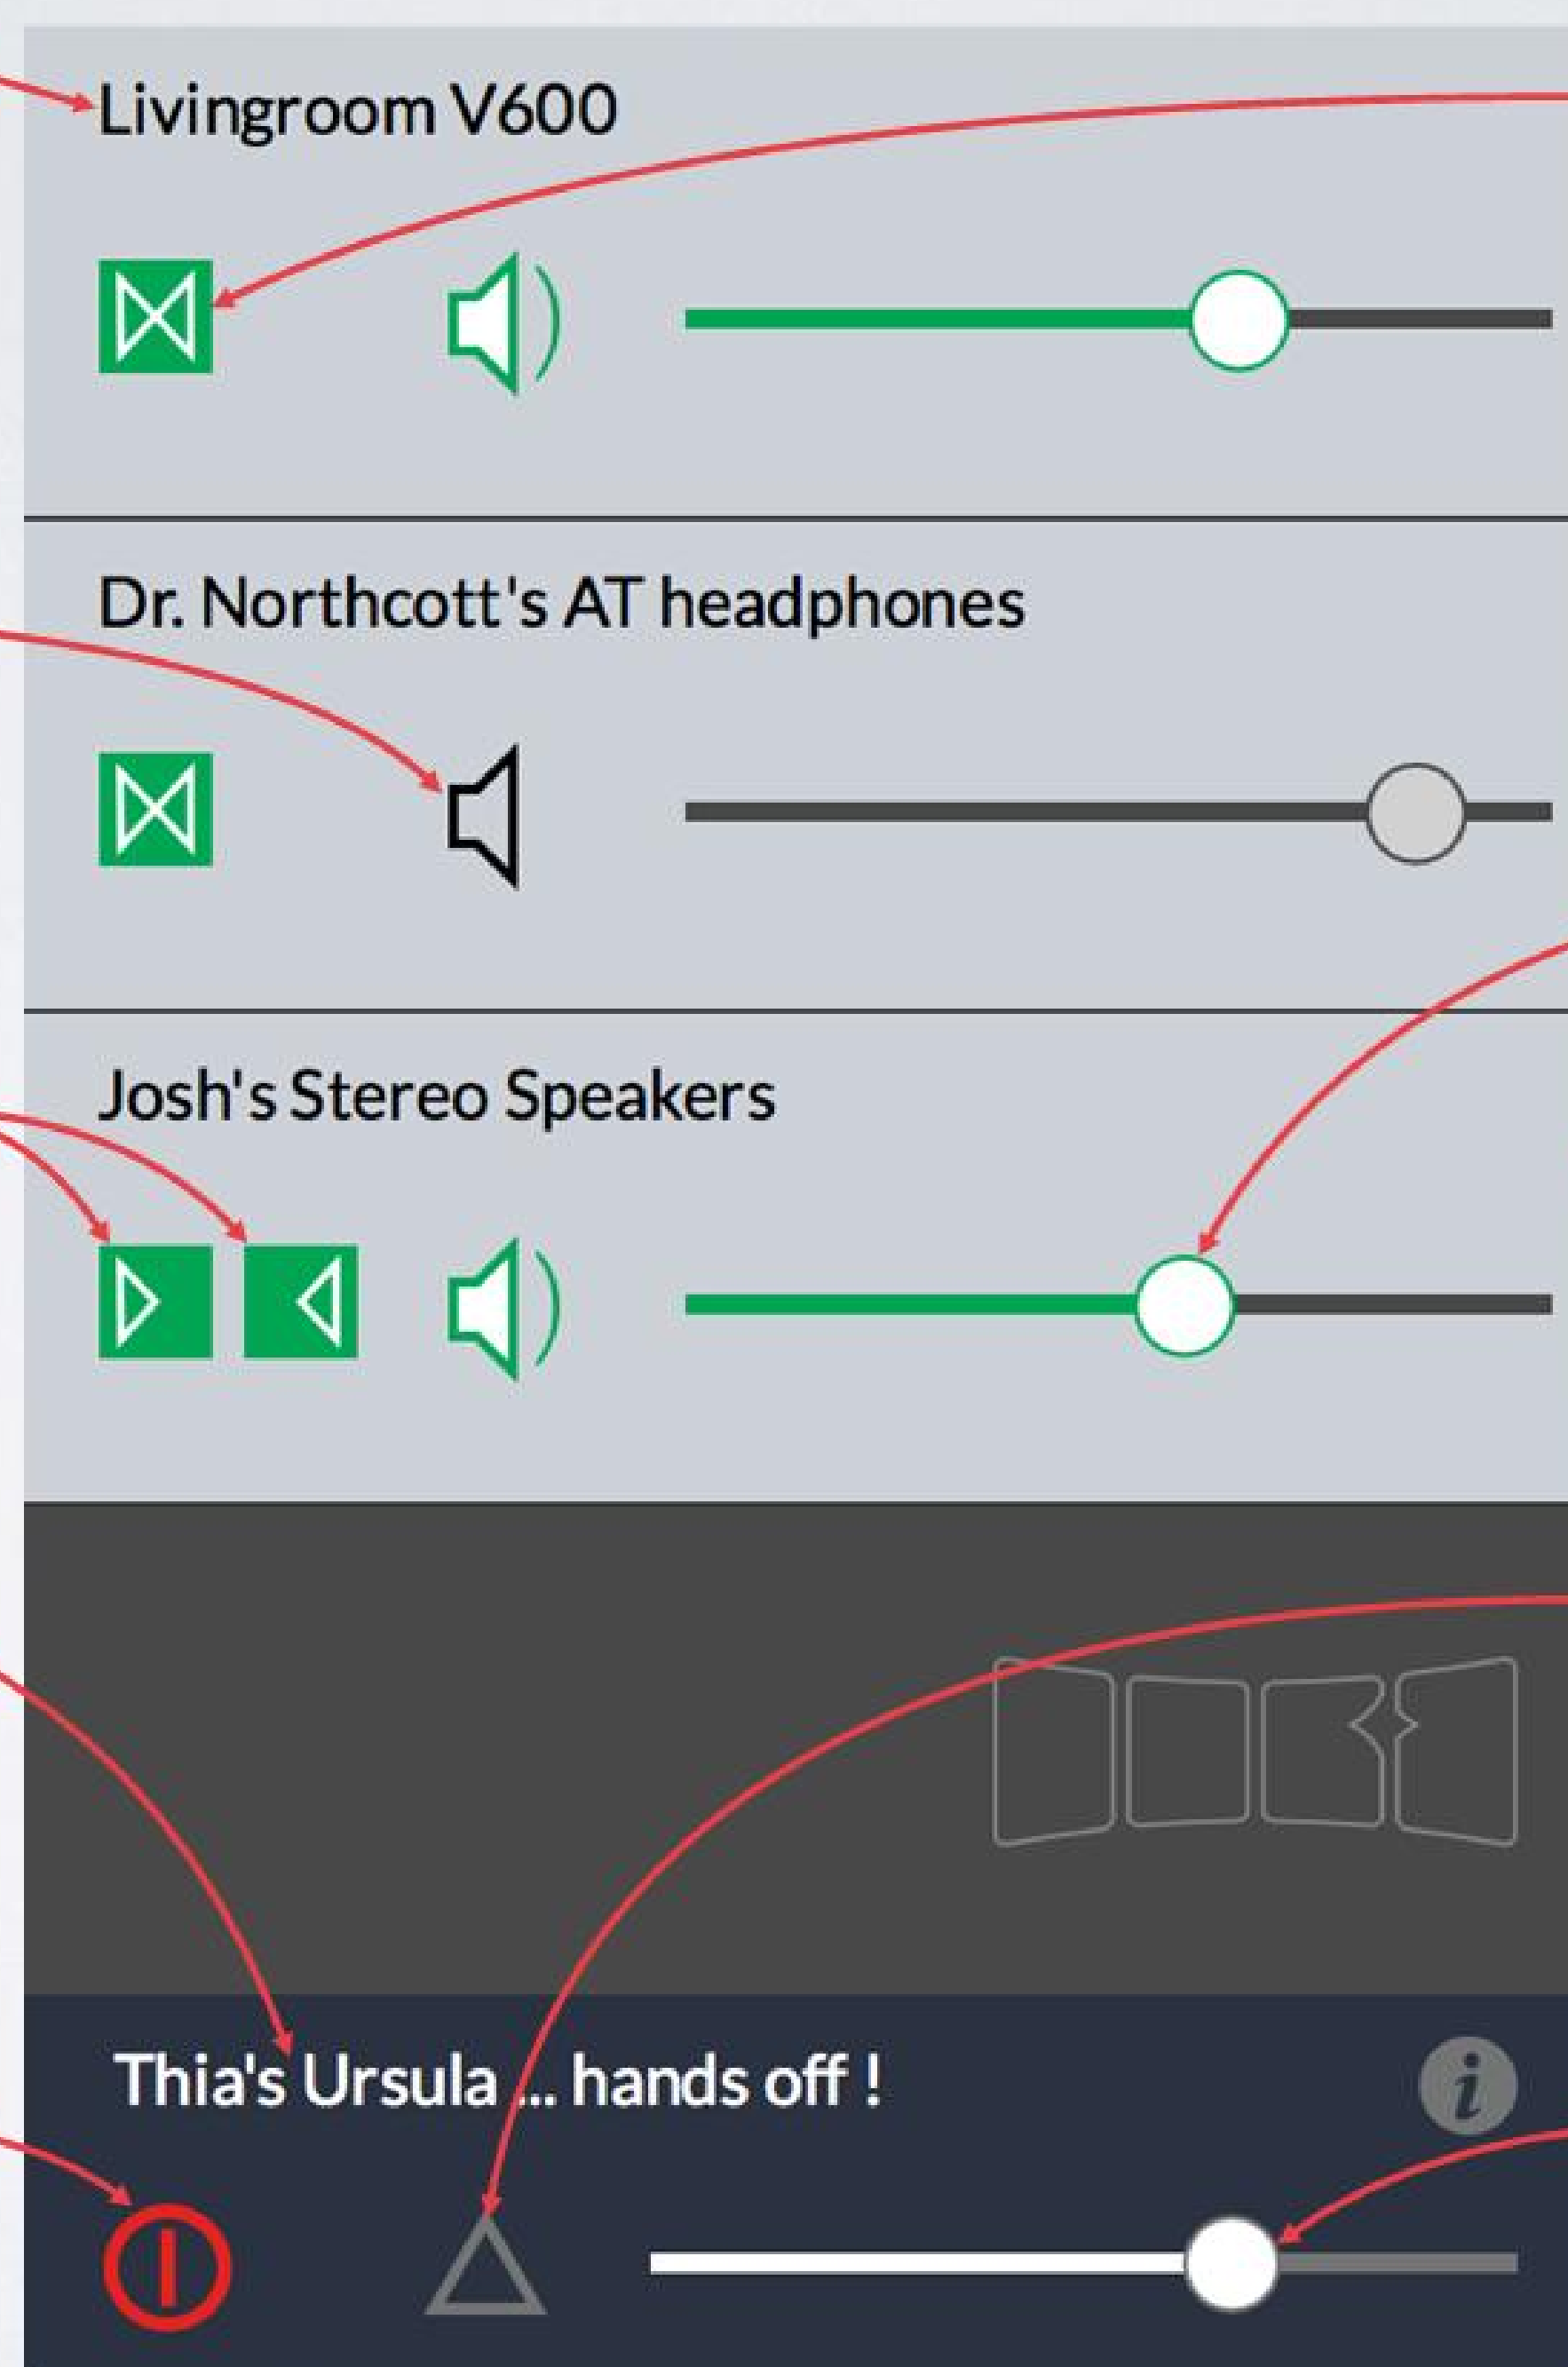

FS-BTWS582 Specifications

|                            |   |
|----------------------------|---|
| Product type               | Enclosed , moving coil                              |
| Impedance                  | 320hm   |
| Inputs                     | SKAA wireless technology<br>BLUETOOTH IN<br>LINE IN |
| Sound Pressure Level (SPL) | 98dB  |
| Power                      | Li-Li Bat   |
| Connector                  | 3.5mm stereo  |
| Indicatorl                 | LED   |
| Dimensions                 | W145*H285*D215mm                                    |
| Weight                     | 3.6kg   |



The test was performed according to the following European standards:  
Draft ETSI EN 301 489-1 V2.2.0(2017-03); Draft ETSI EN 301 489-17 V3.2.0 (2017-03); ETSI EN 301 893 V2.1.1 (2017-05); ETSI EN 300 328 v2.1.1 (2016-11); EN 62311:2008

Safety Comments

The appliance is only suitable for moderate climates.

The maximum ambient temperature during use of the appliance must not exceed 40°C/105°F.

Do not drop the appliance or expose it to any other type of impact.

Do not place the appliance in an area exposed to heat, direct sunlight, dampness, moisture, rain, vibration, shock, dust or sand.

Only use a dry brush or cloth to clean the appliance.

Note:  
Use this appliance in a temperature range between -20°C and 45°C (-4°F and 113°F).

Symbols Used

Indoor Use Only



Protection class II appliance (ONLY FOR CLASS II EQUIPMENT)



Do not dispose of the appliance along with normal waste. Recycle the appliance.






## Trouble Shooting Guide

 The purpose of this guide is to provide answers to frequently asked questions when using FS-252 products for the first time.

Note: SKAA provides a very simple, one-button, one-LED, interface. These two components are called, and will be referred to as, the Bond Button and the SKAA Indicator.

At any time, when interacting with SKAA, the user may locate the Bond Button and rapidly click it six times to reset SKAA to its factory settings. In some cases, it can prove useful to factory-reset an SKAA receiver. If an SKAA transmitter is available and transmitting audio, the factory-reset automatically Bonds to the transmitter and resets the volume.

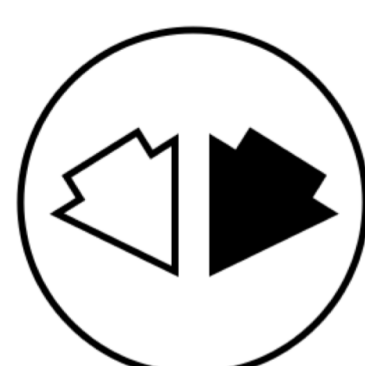

Bond Button Icon

Before proceeding with reading the following frequently asked questions and answers, please make sure that your SKAA devices are powered, in SKAA-mode (if applicable) and in range of one another (~20 m).

### **1. When I power on my SKAA speaker, the Indicator is dim green and when I play audio from my SKAA transmitter, no sound comes from the speaker.**

Most likely your SKAA speaker is hunting for one of your favorite transmitters. Simply press the Bond Button once, in order to switch to another favorite transmitter. If no other favorite transmitters are saved on the Green List, pressing the Bond Button once will not have an effect. In this case, double-click the Bond Button in order to put the speaker into Amber Mode. Amber Mode will explore for new, unknown transmitters in the area that are currently playing audio. If the issue persists, you can always factory reset the SKAA receiver by six-clicking the Bond Button. The SKAA Indicator will flicker red for one second and the speaker will return to Amber Mode. If six-clicking the Bond Button has no effect, see the next trouble-shooting item.

### **2. When I power on my SKAA speaker and attempt to play audio from a SKAA transmitter, I hear no sound, the Indicator is dim green and no matter how many times I click the Bond button, nothing changes.**

In this case, your SKAA speaker is a Slave speaker in a Cluster of speakers. This means that this speaker was probably sold with at least one other speaker, and one of these other speakers is the Master speaker. The Master speaker is responsible for controlling all Slave speakers. A Slave speaker will always follow the Master speaker. Some Slave speakers still contain a Bond Button in order to mute the speaker (this can be accomplished by triple-clicking the Bond Button). Any SKAA speaker with a Bond Button on it can be a stand-alone speaker, however it will have to be "unclustered" See the SKAA Receiver User's Guide for the unclustering procedure.

Trouble Shooting Guide

3.What is the difference between Green Mode and Amber Mode and how do I use them?

|             |  |   |
|-------------|--|---|
| 1<br>Click  | <b>Green Mode</b> - Rotate through your list of favourite transmitters (Green List) - when a favourite transmitter is found, the search stops and audio plays from that transmitter. | <div><div></div> (dim) = Hunting</div> <div><div></div> (flash) = Next one</div> <div><div></div> (bright) = Bonded</div> |
| 2<br>Clicks | <b>Amber Mode</b> - Explore for new, unknown transmitters (ones which are not already on your Green list)  | <div><div></div> (dim) = Hunting</div> <div><div></div> (bright) = Bonded)</div>  |

When you power on a SKAA speaker for the first time, it will be in Amber Mode. You can identify a speaker in Amber Mode by the behavior of its SKAA Indicator (if the SKAA Indicator is amber, the speaker is in Amber Mode). When in Amber Mode, the speaker will explore for new, unknown transmitters in the area that are currently playing audio. Once found, it will Bond to that transmitter, the SKAA Indicator will switch from dim amber to bright amber and the speaker will start playing audio. The speaker is now Bonded and in Amber Mode. Green Mode can be achieved after an SKAA speaker is Bonded and in Amber mode. Once a speaker is Bonded and in Amber Mode, simply hold down the Bond Button for three seconds. The SKAA Indicator will switch from bright amber to bright green. Now, the next time you power down your SKAA speaker(s) and transmitter(s) and power them back on again, the SKAA speaker(s) will be waiting for the transmitter on the Green List. When the transmitter becomes available, it will automatically Bond to it. SKAA speakers can store up to ten transmitters on a Green List. To cycle through transmitters on a Green List, simply click the Bond Button once to cycle to the next transmitter on the Green List.

4. How do I know which SKAA compatible receivers work with each other?

All devices running SKAA OS 2.1 and newer are designed to work together seamlessly. These three lines should be single spaced, not double spaced.

contact us via:

support@skaa.com and we will help you.





343 Vanderbilt Avenue Norwood, MA 02062  
Telephone: (781) 762-6300 Fax: (781) 762-6868