

Quick Start

1. Download the Ring app.

The Ring app walks you through setting up and managing your Ring Car Cam.

2. Open the Ring app and tap Set Up Device.

Select **Mobility** and scan this QR code.



QR+FR



3. Complete setup in the Ring app.

Follow the in-app instructions to install and set up your Ring Car Cam.



For additional help,
visit ring.com/help

