


**MONSTER®**

# ROCKIN ROLLER

PORTABLE INDOOR/OUTDOOR WIRELESS SPEAKER

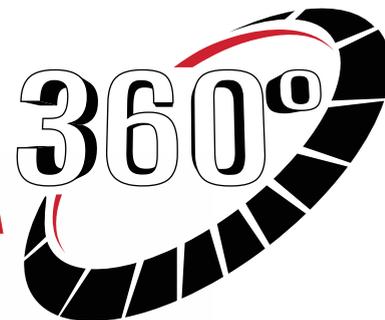

**MODEL: MNRR360**

**USER MANUAL**



# THANK YOU FOR CHOOSING MONSTER

Congratulations on your **Rockin' Roller 360** indoor/outdoor wireless speaker. Please take your time to explore all of the features and utilities we have built into this product.

We put all of our products through rigorous testing and quality control. We take great pride in presenting this product to you now. For your peace of mind, we offer a one-year limited warranty against manufacturing defects and workmanship. Please refer to the warranty section of the user manual for more details.

For more information on all of our products, please visit: [MyMonsterAudio.com](http://MyMonsterAudio.com).

## FOLLOW US:



@MyMonsterAudio



@MyMonsterAudio



/MyMonsterAudio

## PACKAGE CONTENTS

Included with your Rockin' Roller 360 purchase:



Rockin' Roller 360



AC Power Cable  
(Length: 6')



Microphone




User Manual &  
Quick Start Guide

# TABLE OF CONTENTS

|   |          |                                      |           |
|---|----------|--------------------------------------|-----------|
| <b>PRODUCT CONTROLS</b>                     | <b>1</b> | ▪ Saving Radio Stations (FM)         | <b>5</b>  |
| <b>POWER &amp; BATTERY</b>                  |          | ▪ Line Out (3.5mm)                   | <b>5</b>  |
| ▪ Power/Charging                            | <b>2</b> | <b>FEATURES</b>                      |           |
| ▪ USB Power Banks                           | <b>2</b> | ▪ Standby Mode                       | <b>5</b>  |
| ▪ Qi Wireless Charger                       | <b>2</b> | ▪ Telescoping Handle                 | <b>5</b>  |
| <b>AUDIO</b>                                |          | <b>TROUBLESHOOTING</b>               | <b>7</b>  |
| ▪ AUX-IN (3.5 mm)                           | <b>2</b> | <b>SPECIFICATIONS</b>                | <b>8</b>  |
| ▪ Bluetooth Pairing                         | <b>3</b> | <b>IMPORTANT SAFETY INSTRUCTIONS</b> | <b>9</b>  |
| ▪ ¼" Guitar/Mic Inputs & Gain/Echo Controls | <b>3</b> | <b>LIMITED WARRANTY</b>              | <b>10</b> |
| ▪ FM Radio                                  | <b>3</b> | <b>FCC WARNING STATEMENT</b>         | <b>11</b> |
| ▪ True Wireless System (TWS)                | <b>4</b> | <b>NOTES</b>                         | <b>12</b> |
| ▪ Bass/Treble Adjustment                    | <b>4</b> |                                      |           |
| ▪ Equalizer Presets (Bluetooth/AUX-IN ONLY) | <b>5</b> |                                      |           |

# PRODUCT CONTROLS

## Control Panel

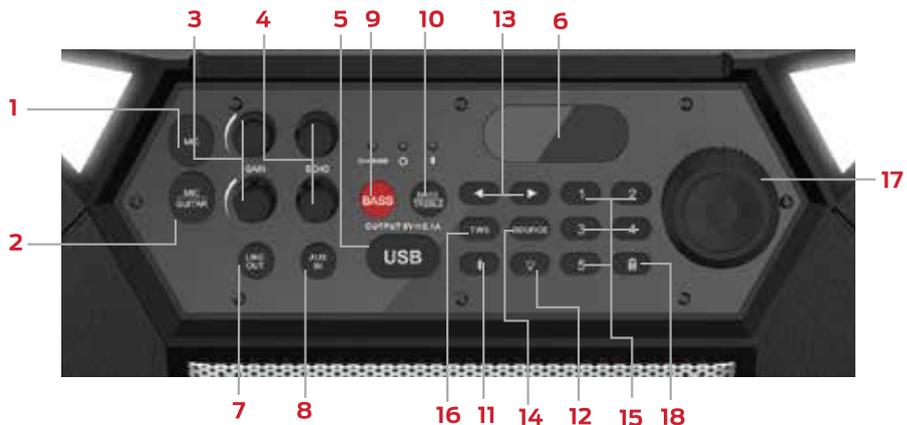

## Control Panel


- 1. MIC 1/4" Input
- 2. MIC/GUITAR 1/4" Input
- 3. GAIN Knob (x2)
- 4. ECHO Knob (x2)
- 5. USB Power Bank
- 6. LED Display
- 7. LINE OUT
- 8. AUX IN
- 9. BASS BOOST Button
- 10. BASS/TREBLE Button
- 11. BLUETOOTH Button

- 12. LED LIGHT Button
- 13. ARROW Buttons
- 14. SOURCE Button
- 15. NUMBER Buttons
- 16. TWS Button
- 17. VOLUME Knob
- 18. BATTERY LEVEL Button

## LED Display

- 19. SSD Display
- 20. BATTERY Indicator
- 21. MICROPHONE Indicator
- 22. AUX Indicator

## LED Display

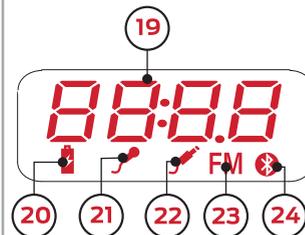

## Back Panel



## Back Panel


- 25. POWER ON/OFF Switch
- 26. INPUT POWER Port
- 27. BOTTLE OPENER

# POWER & BATTERY

**IMPORTANT:** Before first use, charge for ~7 hours.

## Power/Charging

- Connect the INPUT POWER port to an external power source using the included power cord.

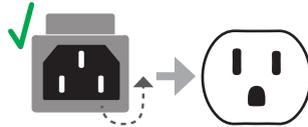

**Full Charge** – achieved in 7 hours while powered OFF  
– achieved in 14 hours while powered ON.




- If the unit was fully charged, it is better to charge for the unit after 3 month if not use, and don't exceed 6 months.
- Need to charge for the unit after use, don't exceed 15 days if the unit no power.

- Flip the switch UP to turn ON the speaker.

("HI" will appear on the LED display. The speaker will connect to the last selected source.)

- Flip the switch DOWN to turn OFF the speaker.

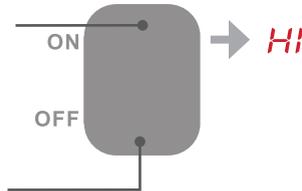

## USB Power Banks

- Connect device to the speaker via the 5V/2.1A USB port to charge device from the speaker's internal battery.



(USB cable not included.)



**USB port is for charging ONLY**  
– they will not make audio connections.

## Qi Wireless Charger

- Charge a device via the 5V **WIRELESS** Charger by setting a device on the top of the speaker.\*



*The speaker will make an audible confirmation when it begins to charge your device.*




**Do not place non-Qi Certified devices or other metal/magnetic objects on the Qi Charger. Doing so could result in damage to the device/object or the Rockin' Roller 360 speaker.**

## AUDIO

### AUX-IN (3.5mm)

- Connect a music device to the AUX IN port with a standard 3.5 mm jack. The speaker will automatically change to AUX mode.

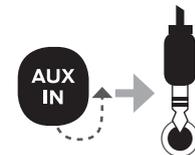

Speaker will make audible and visual LED display confirmation.

**AUX**

"AUX IN"

## Bluetooth Pairing

- 1 Place your mobile device within 3 feet of the speaker.



Make sure **Bluetooth** is enabled on your mobile device.



- 2 Press the **BLUETOOTH** button to set the speaker to Bluetooth mode.

(Press)



The speaker will automatically enter pairing mode.

The speaker will make audible and visual **LED** confirmation. **Bluetooth** icon will flash in pairing mode.



If the **Bluetooth** icon is **NOT** flashing, press and hold the **BLUETOOTH** button to manually enter pairing mode.

- 3 Select "**MONSTER RR360**" on your mobile device to pair with the speaker.




The speaker will make audible confirmation and the **Bluetooth** icon will stop flashing.



**~30 feet** max connection range after paired.  
Moving devices outside this range may cause disruption or signal loss.


## 1/4" Guitar/Mic Inputs & Gain/Echo Controls

- Connect an instrument, microphone, or other device to the **MIC/GUITAR** or **MIC** port(s) with a standard 1/4 inch jack.

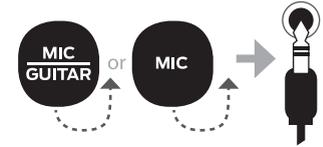

The device(s) will automatically transmit audio playback through the speaker in the current mode.

- Turn **GAIN** and **ECHO** control knobs clockwise to increase their effect, and counter-clockwise to decrease their effect.

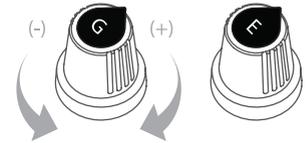

Each 1/4 inch port has its own **GAIN** and **ECHO** knobs that can be adjusted independently.



**Devices plugged into the 1/4 inch ports will transmit audio playback in all modes/sources.**

## FM Radio

- 1 Press the **SOURCE** button to change the speaker to **FM RADIO**.

(Press)



Speaker will make audible and visual **LED** display confirmations.

**106.9** FM  
"Radio"

- 2 Press the **ARROW** buttons to change radio frequency. Press and hold the **ARROW** buttons to scan for a station.

(Press or Hold)



## True Wireless System (TWS)

Wirelessly connect two Rockin' Roller 360 speakers together.

- 1 Place two Rockin' Roller 360 speakers within 10 feet of each other.




- 2 Connect your music device to one of the speakers via BLUETOOTH.



Leave the second speaker in BLUETOOTH mode without connecting to a device.



- 3 Press and hold the TWS pairing button for 3 s to activate TWS pairing.

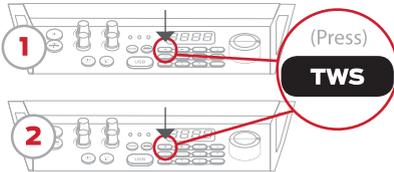

To disconnect a speaker, press the TWS button.

(Press)

TWS



~30 feet max connection range after paired.

Moving devices outside this range may cause disruption or signal loss.

## Bass/Treble Adjustment

- Press the BASS/TREBLE button ONCE to enter bass level mode.



- Press the BASS/TREBLE button TWICE to enter treble level mode.



- Turn the VOLUME knob clockwise to increase or counter-clockwise to decrease the bass/treble levels (-06 to 06).



Pressing BASS/TREBLE and waiting for 3S, it will automatically exit this mode and return to the current audio source mode

There is no function to return to sound source mode for the third time.

## Equalizer Presets (Bluetooth/AUX-IN ONLY)

- Press a NUMBER BUTTON (1-5) to change the speaker's equalizer settings.

Setting will show on the speaker's LED display.

E-1

| BUTTON | SETTING | LED |
|--------|---------|-----|
| 1      | FLAT    | E-1 |
| 2      | JAZZ    | E-2 |
| 3      | ROCK    | E-3 |
| 4      | POP     | E-4 |
| 5      | DEFAULT | E-5 |

## Saving Radio Stations (FM)

- Save the current radio station by pressing and holding one of the NUMBER BUTTONS (1-5).

106.9 MHz

(Hold)

1

The LED display will confirm the saves station (P-1, P-2, etc.)

P 1


Press the NUMBER KEY while in radio mode to go to the corresponding **SAVED** station.

(Press)

1

## LINE-OUT (3.5mm)

- Connect a second speaker to the Rockin' Roller 360 via the LINE OUT port with a standard 3.5 mm jack. Audio playback will transmit through the Rockin' Roller 360 and the second speaker simultaneously.

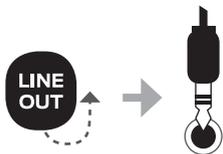

(External Line-In)

# FEATURES

## Standby Mode

- Press and hold the VOLUME knob for ~3 seconds to put the speaker in standby mode.

(Press & Hold ~3 seconds)



 
LED indicators will shut off. Power LED will turn on.

OFF



- Press any button or turn the VOLUME knob to wake the speaker up from standby.



(Turn)



**The speaker will automatically enter standby mode after ~15 minutes of inactivity or lack of connection.** Standby mode can be manually enabled in any mode.

## Telescoping Handle

- Pull the telescoping carry handle UP and away from the speaker to extend it.
- Press the BUTTON on the grip area to adjust the carry handle to a comfortable length.

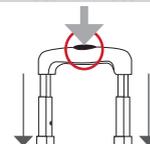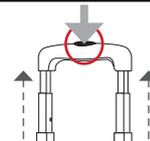

**DO NOT use the carry handle when speakers are stacked.** The handle is graded to only carry the weight of one Rockin' Roller 360 speaker.



MIC

MIC  
OUTAR

LINE  
OUT

AUX  
IN

BASS

BASS  
TREBLE

OUTPUT 5V=2.1A

USB

OWNER

TWS

SOURCE



# TROUBLESHOOTING

|   |  |
|---|--|
| <b>Speaker is not powering on</b>                       | <ul style="list-style-type: none"><li>▪ Verify that the <b>POWER</b> switch is fully turned to the <b>ON</b> position. (see pg. 2)</li><li>▪ Ensure the speaker is not in <b>STANDBY MODE</b>.</li><li>▪ Make sure <b>AC POWER</b> cord is fully inserted into the unit. (see pg. 2)</li></ul>   |
| <b>Buttons are not responding</b>                       | <ul style="list-style-type: none"><li>▪ Reset the speaker by turning the power <b>OFF</b>, and then back <b>ON</b>. (see pg. 2)</li><li>▪ Unplug the <b>AC POWER</b> cord, then plug it back in. (see pg. 2)</li></ul>   |
| <b>No music is playing</b>                              | <ul style="list-style-type: none"><li>▪ Make sure the speaker is set to the same source as your audio device. If you are playing audio via <b>AUX</b> cable, make sure the speaker is in <b>AUX IN</b> mode, etc. (see pg. 3-5)</li><li>▪ Make sure the <b>VOLUME</b> is high enough on your audio device as well as the speaker.</li></ul>  |
| <b>Bluetooth audio quality is poor</b>                  | <ul style="list-style-type: none"><li>▪ Move your music device closer to the speaker.</li><li>▪ Remove objects that may be interfering with the wireless connection.</li></ul>   |
| <b>Bluetooth device is not pairing</b>                  | <ul style="list-style-type: none"><li>▪ Verify that the speaker and your device have <b>BLUETOOTH</b> mode active. (see pg. 3)</li><li>▪ Make sure the speaker and/or your device is not already paired with another device.</li><li>▪ Check that the speaker is in pairing mode. (see pg. 3)</li><li>▪ Turn the speaker <b>OFF</b>, and then back <b>ON</b>. Press and hold the <b>BLUETOOTH</b> button to manually enter pairing mode. (see pg. 3)</li></ul> |
| <b>Contact our support team for additional services</b> | <p><b>Call:</b> 1-800-976-0677</p> <p><b>Email:</b> <a href="mailto:support@mymonsteraudio.com">support@mymonsteraudio.com</a></p> <p><b>Hours of Operation:</b><br/>Monday - Friday: 7:00 am - 5:00 pm (PST) Saturday - Sunday: CLOSED</p>  |

# SPECIFICATIONS

## General

|                               |  |
|-------------------------------|--|
| <b>Bluetooth Version</b>      | 5.0                                      |
| <b>Power Input</b>            | AC 100-240V                              |
| <b>Speaker Drivers</b>        | 240W Peak Power (8"X1 / 3"X3 / 2.25"X 2) |
| <b>THD + Noise</b>            | <10%                                     |
| <b>Cabinet Material</b>       | Plastic                                  |
| <b>Battery Capacity</b>       | 12V9A                                    |
| <b>USB Bank Output</b>        | 5V/2.1A                                  |
| <b>Dimensions (W x H x D)</b> | W15"X H18.60" X D10.86"                  |
| <b>Weight</b>                 | 26.35 lbs                                |

## Operating Temperature

|                                    |                |
|------------------------------------|----------------|
| <b>Operating Temperature Range</b> | 32F° - 104F°   |
| <b>Operating Humidity Range</b>    | 40~90% RH      |
| <b>Storage Temperature Range</b>   | -13F° to 158F° |

# IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions – All the safety and operating instructions should be read before this product is operated.
- 2) Keep these instructions – The safety and operating instructions should be retained for future reference.
- 3) Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- 4) Follow all instructions – All operating and use instructions should be followed.
- 5) This apparatus can be used in wet location conditions after disconnected the AC Mains supply and closing the water proof cap for the AC inlet. It must not be used in wet location conditions when charging. Do not use this apparatus near water- The appliance should not be used near water or moisture – for example, in wet basement or near a swimming pool.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 16) Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 17) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 18) Attention should be drawn to the environmental aspects of battery disposal.
- 19) The use of apparatus in moderate climate.
- 20) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.



Protective earthing terminal. The apparatus should be connected to a mains socket outlet with protective earthing connection.



# INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

- 1) Lire ces instructions - Toutes les instructions de sécurité et d'exploitation doit être lu avant que ce produit soit exploité.
  - 2) Conserver ces instructions - Les instructions de sécurité et d'exploitation devrait être conservé pour référence future.
  - 3) En compte tous les avertissements - Tous les avertissements sur l'appareil et dans les instructions d'exploitation doivent être respectées.
  - 4) Suivez toutes les instructions - Toutes les instructions d'exploitation et d'utilisation doivent être suivis.
  - 5) Cet appareil peut être employé dans des conditions humides déconnecté de l'alimentation AC Mains et la fermeture de l'eau capuchon de preuve pour l'entrée AC. Il ne doit pas être utilisé dans un endroit humide conditions lors de la charge. N'utilisez pas cet appareil près de l'eau l'appareil ne doit pas être utilisé près de l'eau ou de l'humidité - pour par exemple, dans un sous-sol humide ou près d'une piscine.
  - 6) Nettoyer seulement avec le tissu sec.
  - 7) Ne bloquez aucune ouverture de ventilation, installez conformément instructions du fabricant.
  - 8) Ne pas installer près de sources de chaleur telles que les radiations, la chaleur registres, poêles ou autres appareils (y compris les amplificateurs) qui produire de la chaleur.
  - 9) Ne pas vaincre l'objectif de sécurité de la polarisation ou de la mise à la terre Plug. Une prise polarisée a deux lames avec une plus large que la autres. Une prise de mise à la terre a deux lames et une troisième mise à la terre Broche. La lame large ou la troisième pince est prévue pour votre sécurité. Si la prise fournie ne rentre pas dans votre électricien pour le remplacement de la prise obsolète.
  - 10) Protéger le cordon d'alimentation d'être marché ou pincé en particulier aux bouchons, les réceptacles de commodité, et le point où ils sortent de l'appareil.
  - 11) N'utilisez que les pièces jointes/accessoires spécifiées par le fabricant.
  - 12) Utiliser uniquement avec le chariot, le stand, le trépied, le support, ou tableau spécifié par le fabricant, ou vendu avec l'appareil. Lorsqu'un chariot ou un support est utilisé, faites preuve de prudence lorsque vous déplacez le chariot/appareil combinaison pour éviter les blessures causées par le basculement.
- 13) Débranchez cet appareil pendant les tempêtes d'éclairage ou lorsqu'il n'est pas utilisé pour de longues périodes de temps.
  - 14) Référez tous les services au personnel de service qualifié. L'entretien est lorsque l'appareil a été endommagé de quelque façon que ce soit, comme le cordon d'alimentation ou le bouchon est endommagé, le liquide a été renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposés à la pluie ou à l'humidité, ne fonctionne pas normalement ou a été abandonné.
  - 15) La prise principale est utilisée comme dispositif de déconnexion, la déconnexion doit rester facilement opérable.
  - 16) Ne pas installer cet équipement dans un espace confiné ou de construction comme un étui à livres ou une unité similaire, et restent une ventilation conditions à l'emplacement ouvert. La ventilation ne doit pas être entravée par couvrant les ouvertures de ventilation avec des articles, tels que les journaux, nappe, rideaux, etc.
  - 17) Aucune source de flamme nue, comme les bougies allumées, ne devrait être placé sur l'appareil.
  - 18) Il convient d'attirer l'attention sur les aspects environnementaux des l'élimination de la batterie.
  - 19) L'utilisation de l'appareil dans un climat modéré.
  - 20) L'appareil ne doit pas être exposé à des gouttes ou à des éclaboussures et à qu'aucun objet rempli de liquides, tels que des vases, ne doit être placé sur l'appareil.

**AVERTISSEMENT :** Pour réduire le risque d'incendie ou de choc électrique, ne cet appareil à la pluie ou à l'humidité.

**AVERTISSEMENT:** Les batteries ne doivent pas être exposées à une chaleur excessive de telle comme le soleil, le feu ou autres.

**CAUTION:** Danger d'explosion si la batterie est mal remplacée. Remplacez seulement par le même type ou le même type équivalent. Terminal de terrassement protecteur. L'appareil devrait être relié à une prise principale avec une protection connexion de terre.



Terminal de terrassement protecteur. L'appareil devrait être relié à une prise principale avec la terre protectrice Connexion.

# LIMITED WARRANTY

## Model: MNRR360

This Monster-branded product, marketed as new, in the original carton to the original purchaser ("Product"), is warranted by Russell Distribution Company, LLC against manufacturing defects in materials and workmanship for a limited warranty period of ninety (90) days for Labor and one (1) year for Parts. This Limited Warranty is conditioned upon proper use of Product by you, the Purchaser.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in as is condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase and is valid only on Products purchased through authorized dealers and used in the United States, and Puerto Rico, by the original Purchaser. To receive warranty service, the Purchaser must first contact us for problem determination and service procedures. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase.

We will repair your product or if repairs cannot be made, we will replace it at no charge with the same or similar product. If the Product is defective as specified in this limited warranty during the limited warranty period, we may use new or remanufactured parts to repair the Product. All replaced parts and products become our property and must be returned to us. Replacement parts and products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight must be prepaid by you, the original Purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. We will not be responsible for or obligated to replace damaged Products.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, in our sole discretion, to dispose of the damaged Product or ship back to you at your expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement noncommercial use of this Product, and shall not apply to the

following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. Uninterrupted or error-free operation of the Product is not warranted.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

**To obtain warranty service, please contact technical support with questions**

**Phone: 1-800-976-0677 ▪ Email: [support@mymonsteraudio.com](mailto:support@mymonsteraudio.com)**

**DO NOT return this product to the store. Visit: [MyMonsterAudio.com](http://MyMonsterAudio.com)**

# FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

## RF exposure statement

This equipment meets the exemption from the routine evaluation limits in section 2.5 of RSS-102. It should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

## IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

|  |   |  |  |   |
|--|---|--|--|---|
|  <p>A lightning flash and arrowhead within an equilateral triangle is intended to alert the user to the presence of insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p> | <p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</b></p> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> |  <p>An exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.</p> | <p><b>WARNING</b></p> <p>Prevent fire and shock hazards. Do not use extension cords or outlets that expose plug blades. Do not expose cables and plugs to rain or moisture.</p> <p>Do not attempt to perform any servicing that is not included in the operating instructions. Do not attempt to replace the battery, as incorrect installation can cause fire or explosion. For service, contact qualified service personnel.</p> <p>Do not remove cover or back of product. There are no user-serviceable parts inside. Attempting to modify controls or performance beyond manufacturer specifications may result in hazardous exposure to radiation.</p> | <p><b>WARNING</b></p> <p>Operating ambient temperature: 0 - 40°C,<br/>Storage and transportation ambient temperature: -10 - 50°C,<br/>altitude not higher than 2000m (air pressure not less than 80kPa).</p> <p>WARNING:</p> <ul style="list-style-type: none"><li>- replacement of a battery with an incorrect type may defeat a safeguard;</li><li>- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion;</li><li>- leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas;</li><li>- a battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.</li></ul> <p>CAUTION</p> <p>Risk of fire or explosion if the battery is replaced by an incorrect type!</p> |
|--|---|--|--|---|

# FCC WARNING STATEMENT

Les changements ou modifications non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorité de l'utilisateur pour faire fonctionner l'équipement. Cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC.

Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cette l'équipement génère, utilise et peut émettre des communications radio. Cependant, rien ne garantit que les interférences ne se produire dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception radio ou télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger les interférences causées par un mesures suivantes:

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la distance entre le récepteur de l'équipement.
- Consultez le revendeur ou un technicien radio / TV expérimenté pour obtenir de l'aide.
- Connectez l'équipement à une prise sur un circuit différent de celui auquel le récepteur est connecté.

## Déclaration FCC sur l'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements FCC établies pour un environnement non contrôlé. Afin d'éviter la possibilité de dépasser les limites d'exposition aux fréquences radio de la FCC, la proximité de l'homme avec l'antenne ne doit pas être inférieure à 20 cm (8 pouces) pendant le fonctionnement normal.

## RF exposure statement

Cet équipement est conforme à l'exemption des limites d'évaluation habituelle de la section 2.5 de la norme RSS-102. Il doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et toute partie de votre corps.

## IC WARNING

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: 1. L'appareil ne doit pas produire de brouillage; 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

|   |  |  |  |   |
|---|--|--|--|---|
|  <p>Un éclair et une pointe de flèche dans un triangle équilatéral vise à alerter l'utilisateur à la présence d'isolés «tension dangereuse» à l'intérieur l'enceinte du produit qui peut être d'une ampleur suffisante constituer un risque de choc aux personnes.</p> | <p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</b></p> <p><b>AVERTISSEMENT: POUR RÉDUIRE LE RISQUE D'ÉLECTRICITÉ CHOC NE PAS RETIRER COUVERTURE (OU ARRIÈRE), NON PEUVES RÉPARABLES PAR L'UTILISATEUR RÉPARATION À L'INTÉRIEUR AU SERVICE QUALIFIÉ PERSONNEL</b></p> |  <p>Un point d'exclamation dans un triangle équilatéral est destiné pour alerter l'utilisateur de la présence d'opération importante et maintenance (entretien) instructions dans la littérature accompagnant l'appareil.</p> | <p><b>ATTENTION</b></p> <p>Prévenez les risques d'incendie et d'électrocution. N'utilisez pas d'extension cordons ou prises qui exposent les fiches des fiches. Ne pas exposer les câbles et les fiches à la pluie ou à l'humidité.</p> <p>N'essayez pas d'effectuer un entretien qui n'est pas inclus dans le mode d'emploi. Ne pas tenter pour remplacer la batterie, car une installation incorrecte peut provoquer un incendie ou une explosion. Pour le service, contactez un technicien qualifié service personnelle.</p> <p>Ne retirez pas le couvercle ou l'arrière du produit. La ne contient aucune pièce réparable par l'utilisateur. Tentative pour modifier les contrôles ou les performances au-delà les spécifications du fabricant peuvent entraîner exposition dangereuse aux radiations.</p> | <p><b>ATTENTION</b></p> <p>Température ambiante de fonctionnement: 0-40 °C.<br/>Température ambiante de stockage et de transport: -10-50 °C,<br/>à une altitude ne dépassant pas 2000 m (pression atmosphérique ne dépassant pas 80 kPa).</p> <p>Avertissement:<br/>Remplacer une batterie de modèle incorrect peut compromettre les mesures de sécurité;<br/>Placer les batteries dans un four ou un four à haute température, ou écraser ou couper mécaniquement les batteries<br/>Les batteries, qui peuvent provoquer une explosion;<br/>Le fait de placer la batterie dans un environnement à très haute température, comme la lumière du soleil, le feu ou des surfaces chaudes, peut provoquer une explosion ou des fuites de liquides ou de gaz inflammables;<br/>Les batteries à très basse pression peuvent provoquer une explosion ou des fuites de liquides ou de gaz inflammables.</p> <p>Avertissements<br/>Risque d'incendie ou d'explosion si le mauvais type de batterie est remplacé!</p> |
|---|--|--|--|---|





# MUSIC WITHOUT LIMITS

Monster and the Monster logo are registered trademarks of Monster Inc., and its subsidiaries in the U.S. and other countries, used under license. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

**MONSTER®** 1-800-976-0677 • [support@mymonsteraudio.com](mailto:support@mymonsteraudio.com) • [MyMonsterAudio.com](http://MyMonsterAudio.com)