


**Millions Depend on the Integrity of Your Product.
Sensitech's Mission is to Ensure that Integrity.**

The Tools That Turn Information Into Power

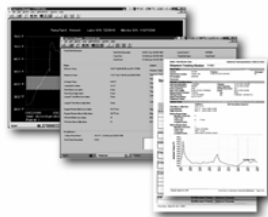

TempTale® Manager Software



Data Management Services



RF Monitoring



TempTale® 3 Monitor



TempTale® 4 Monitor



TagAlert™ Monitor

For more information, contact our client services
group at 800-843-8367.



RF TT4 Ambient 2K Monitor

PN T11006740

User Manual

FCC ID SRMT11006740

*This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1)
this device may not cause harmful interference, and (2)
this device must accept any interference received,
including interference that may cause undesired operation.*

*Changes or modifications not expressly approved by
Sensitech could void the user's authority to operate the
equipment.*



All TempTale[®]4 Monitors are programmed with a custom Start-up delay, measurement interval and alarm settings which have been pre-determined by the customer.

Starting a TempTale4 Monitor

- Press and release the Start button.
- The “Sunshine” icon ☀ appears in the upper left corner of the display.
- The TempTale4 will begin to record data after the start-up delay has passed.



To mark an important event (“Date Stamp”)

- TempTale4 monitors provide an option to “Date Stamp” or mark an important event at any time during the monitoring cycle that will be visible when viewing the data. The mark is displayed as an arrow when viewing the graph and shown in italics when viewing the tabular data.
- To mark a graph while the monitor is recording, press and release the “Start” button.
- The “arrow” icon will appear temporarily in the lower left corner and the temperature history will appear on the display. Data appears as follows:

1. Average temperature
2. Highest temperature recorded
3. Total time above high temperature limit
4. Lowest temperature recorded
5. Total time below low temperature limit


Alarm

When the TempTale4 is exposed to a temperature outside a pre-programmed limit and time threshold, an “Alarm bell” 🔔 will appear in the lower right corner of the LCD display.

Stopping a TempTale4 Monitor

Press and hold (1 to 3 seconds) the Stop button until the “Stop sign” ⬛ icon appears in the upper right corner of the LCD display.

Displayed Information

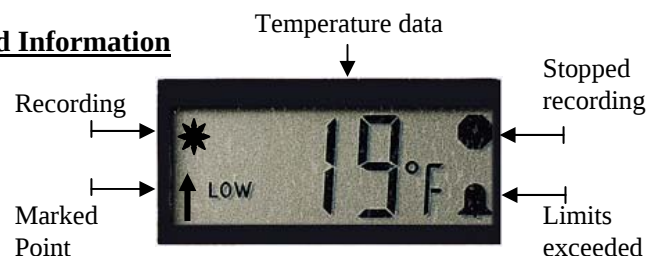

Los monitores de TempTale[®]4 están programado con uno tiempo de demora, intervalo y limites de temperatura y tiempo que fueron requerido por el cliente.

Iniciar el TempTale4

- Presione y libere el botón de inicio “Start”.
- El icon del “Sol” ☀ aparecerá a la izquierda en la parte superior de la pantalla.
- El TempTale4 grabará después del tiempo de demora.



Para marcar un evento importante (Estampa de fecha)

- Los TempTale4 monitores tienen la opción de marcar un evento importante que ocurra durante el envío. Se puede ver esta marca cuando se baja la información. La marca aparecerá como una flecha en el gráfico y en italico en el tabular.
- Para marcar el evento durante el envío, presione y libere el botón de inicio “Start”.
- Una flecha aparecerá en la pantalla y la información de temperatura aparecerá en el siguiente orden:

1. Temperatura promedio
2. Temperatura grabada más alta
3. Tiempo total por encima del límite alto
4. Temperatura grabada más baja
5. Tiempo total bajo del límite bajo

Alarma

Cuando el TempTale4 está fuera del límite bajo o alto del tiempo programado, un icon de alarma 🔔 aparecerá a la derecha en la parte baja de la pantalla.

Parar el TempTale4

Presione y libere (1 a 3 segundos) el botón de parar “Stop” hasta que el icon de “Stop” ⬛ aparezca a la derecha en la parte superior de la pantalla.

Pantalla del Monitor:

