

2.4

0 0 00000000

# BY-KB-WS-105-AC INCLUDES:

1 (One) Wireless Honeycomb Keyboard 13in, x 5.8in, x 1.1in, (33cm x 14.7cm x 2.8cm) 1 (One) USB Receiver .75in. x .6in. x .25in. (1.9cm x 1.5cm x .6cm) 1 (One) User Manual

## FEATURES

Wireless connection: automatic linking, plug & play via USB receiver.

- Responsive buttons for ultimate productivity and efficiency
- Ergonomic design for maximum performance and comfort.

## USB RECEIVER

 • The USB receiver can be found (and stored) in a slot on the bottom of the keyboard, on the right side of the battery bay door

• Flip the keyboard over. You will see a small rectangular object embedded in a slot in the bottom of the keyboard, imprinted with the ECC ID number, this is the USB receiver. unit, and it can be stored in this slot when not in use so that it doesn't get lost or damaged. The keypad will not work without the USB Receiver.

• Remove it carefully by hooking a fingernail into the groove along the side surface, and lift it up slowly to free it, being very careful not to damage or lose it.

## HOW TO USE

- Insert the USB receiver into one of your computer's USB ports.
- Place 2 (Two) X AAA 1.5V Alkaline Battery (not Included) into the battery compartment on the back of the keyboard.
- Your computer should recognize the keyboard instantly. Be sure to check your computer's settings if it is not detected.
- If the keyboard is unused for 2 seconds, it will enter sleep mode, press any key to resume. Remove the USB receiver from your computer's USB port when the unit is not in use.

## RELIABLI ITY

- Keyboard Button Switch Activation: 8.000.000 cycles.
- Operating temperature: -5 ~ 40 degrees Celsius
- Operating humidity: 20% 90%.

## INSTALL THE BATTERIES IN THE KEYBOARD:

Step1: Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it.

Step2: Insert the batteries as shown inside the battery compartment

Step3: Replace the cover.

#### MULTIMEDIA HOTKEYS FUNCTIONS:

FN+ESC=Media Player	FN+F7=Web Home
FN+F1=Previous Track	FN+F8=Search
FN+F2=Play/Pause	FN+F9=Email
FN+F3=Next Track	FN+F10=My Calculator
FN+F4=Mute	FN+F11=My favorite
FN+F5=Volume Down	FN+F12=My computer
FN+F6=Volume Up	FN+Insert=Scroll Lock
FN+Delete=Pause/B	FN+Shift=PrtScr
FN+Ctrl-r=App	

#### Mac OS<sup>®</sup> user will have limited media keys functionality:

Media player, Previous track, Play/Pause, Next track, Web home, Email, Calculator My favorite. My computer will not work in Mac OS\* Scr LK Pause/B Prt Scr / Ctrl-r also will not work in Mac OS®

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reprient or relocate the receiving antenna

Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Keyboard: FCC ID: 2AHN6-KBWS105 Dongle: FCC ID: 2AHN6-DE5

WIDFLESS

## TROUBLESHOOTING

- If device won't connect, try the following
- Be sure the USB receiver is connected to your computer.
- Be sure the USB receiver is not damaged
- · Check your computer's input settings
- Try new batteries in the keyboard
- Restart your computer.

#### SPECIFICATIONS:

- 2.4GHz wireless keyboard
- 83 keys
- Working range: up to 33 feet
- Battery: 2 (Two) X AAA 1.5V Alkaline Battery (Not Included)

### COMPATIBILITY

Windows® 7/8/10/11/2000/XP/ME/VISTA

©2024 BYTECH NY INC

BYTECH<sup>™</sup> is a registered trademark of Bytech NY INC.

- \*All Trademarks and copyrights are the property of the espective companies.
- \*Windows® is a registered trademark of
- Microsoft Corporation.
- \*Mac OS<sup>e</sup> is a registered trademark of Apple Inc.
- \*Bytech NY Inc. has no affiliation to Apple Inc. or Microsof
- Corporation. Inc
- \*Photos are for illustration purposes only.

#### BYTECH

Contact Info: 2585 West 13th Street Brooklyn, NY 11223 BYTECH intl.com



© 2024 BYTECH NY INC

WARRANTY- 12 MONTH Please visit our website Bytechintl.com/warranty WARNING: TO AVOID BATTERY LEAKAGE ) The batteries used with this product are small parts and should be kent away from small children who still out thing in their mouths. If they are swallowed, promptly see a docto and have the doctor phone American Association of Poison Control Centers (1-800-222-1222)

- Always purchase the correct size and grade of battery most suitable for intended use
- 3) Do not mix old and new batteries alkaline standard. (Carbon - Zinc) or rechargeable (Nickel-cadmium) batteries.
- 4) Clean the battery contacts and those of the device prior to hattery installation
- 5) Ensure the batteries are installed correctly with the regard to polarity (+ and -).
- 6) Always remove batteries if consumed or if product is to be left unused for a long time.