 
 


Outdoor Waterproof Bluetooth Speaker


Components







Type-C charging cable

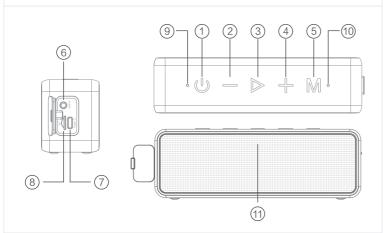

- (1) Power ON/OFF
- ② Volume-/Previous Track
- 3 Play/Pause/Answer or Reject Phone Call
- 4 Volume+/Next Track
- Mode
- (6) AUX IN
- 7 Charging Port
- 8 TF Card Slot
- Power Indicator
- 10 Status Indicator

115Hz-15KHz

11 Mic

Parameter

Bluetooth Version Transmission Range ≥18m (Open Field) Output Power 2*10W

Battery Power Supply 7.4V 3600mAH Type-C 5V/2.4A

Frequency Response Distortion Driver Unit

≤1.0% 48mm Playing Time ≥24H (@65db SPL)

Charging Time Product Size 186*62*50mm

| Key | Operation | Instruction |
|-----|-------------|--|
| | Short Press | 1. When it's off. short press to turn on; with starting up reminder 2. When it's on, short press to turn off; with power off reminder |
| | Long Press | 1. When it's off, press 2's to turn on 2. When it's on, press 2's to turn off |
| | Short Press | Volume down,16 degrees in total |
| | Long Press | Previous track |
| | Short Press | 1.On music playing: short press to play/stop 2.On receiving calls: short press to answer calls 3.On answering calls: short press to hang up 4.On bluetooth connected status: quick double click to dial the last dialed number |

| | | Long Press | On bluetooth connected status: press 2's to disconnected On receiving calls: press 2's to reject answering When the system is crashed or abnormal,long press 6's to reset automatically and cut off power |
|---|------------|-------------|---|
| | | Short Press | Volume up,16 degrees in total |
| | Long Press | Nexttrack | |
| M | | Short Press | Short press MODE to switch: BT, TF, AUX(insert from the back is preferred) |
| | M | Long Press | 1. Long press 2's to enter TWS connect, on TWS mode long press 2's to disconnect TWS 2. Long press 5's to erase pairing information and get power off automatically, with reminder |

LED Indicator Instruction



Power indicator on the left

a. Blue LED blinks when the speaker waiting for connection, and turns solidblue after Bluetooth

a. When Power On, the power Indicator will turn white

connected successful. b. On TE mode will stay solid blue: On AUX mode

b. When charging will stay solid red; When low power red led blinks

bluetooth will stay solid blue. Micro SD/AUX Mode

- 1. Max support reading 64GB Micro SD card, support music files: APE/FLAC/WAV/MP3.
- 2. Insert any Micro SD card, the speaker will playing the audio files in the Micro SD card automatically.
- 3. Speaker can connect with any 3.5mm audio cable to play music, if your device connected Turbo pls press"M" to switch TF or AUX.

What is TWS?

them on. Then please turn on two speakers.

TWS means true wireless stereo. Let's say two Bluetooth speakers are able to be paired and

playing music synchronously. How to pair your device?

- 1. Please make sure these two speakers to be paired disconnect from your bluetooth device before you turn
- 2. Select either of the speakers. Press "MODE" button for 2 seconds, until you hear indicator tone 3. When successfully paired, The LED indication light on either speaker will stay blue, and the other speaker
- A.Select the searching mode on your device , When your device finds "Turbo", select it and connect.
 The LED indication light on both the speakers will turn blue when your device is connected. They will
- perform as the stereo sounding system
- 6. Once the speakers are well paired at the first time, they will be automatically paired next time without the above pairing operation.

 7. If the speaker used to be paired, it is suggested to press "MODE" button for 5 seconds to forcibly cut off
- the power . Then restart and have the same speaker re-paired with the required new speaker according to the above instruction item 1- item 5. 8. When speakers are paired, only the "master" speaker will answer the phone.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable $protection\ against\ harmful\ interference\ in\ a\ residential\ installation.\ This\ equipment$ generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.

FCC Warning Statement

Connect the equipment into an outlet on a circuit different from that to which the

- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference,

(2) this device must accept any interference received, including interference that may cause undesired operation.