



2.1 SOUND BAR

 
Model: 4001949



DEAR CUSTOMER:

Thank you to buy your RadioShack Sound Bar!
Prior to first use, please read the manual carefully.

Subwoofer

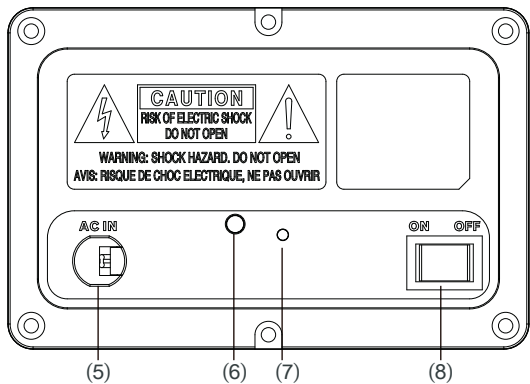

5. AC IN: AC Power cord
 6. RESET: Used to RESET the connection between Soundbar and Subwoofer when they do not connect with each other automatically.
 - (1). Long Press the "MUTE" key on the remote for 3 seconds to reset the soundbar.
 - (2). Long Press "RESET" Key. After that, POWER ON the subwoofer for 5 Seconds , Then release "RESET" key. Process finished. The subwoofer will RESET to default mode.
- Wireless subwoofer LED light explanation:
- Wireless connect successfully : LED is blue
 - Wireless disconnect : LED is red
 - Wireless pairing status : red and blue LED lights flash alternately
7. LED: Turn on the red light long, connected successfully long blue light
 8. Power ON/OFF: Switch for turning on/off the unit.

Operation explanation:

Specifications:

Output power: 300W
Driver Unist: 5090 x 4+ 8"
Frequency response: soundbar: 140Hz-20KHz
subwoofer: 40Hz-150Hz
Separation: ≥40 dB
S / N: ≥55 dB
Distortion: ≤1% (1K, 1W)
Power supply: ~100-240V 50/60Hz
Dimensions: soundbar: L960 x D80 x H62 (mm)
subwoofer: L240 x W240 x H448 (mm)

Features:

- Quality Soundbar with built-in amplifier
- Full audio spectrum performances, ideal for your favorite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks.
- Quality materials : Only the best components to recreate sound faithfully across all frequencies.


Package contents:

Soundbar 1 pc
Subwoofer 1 pc
User manual 1 pc
Remote control 1 pc
Audio input cord 2 pcs

NO.1

背面

 Side panel

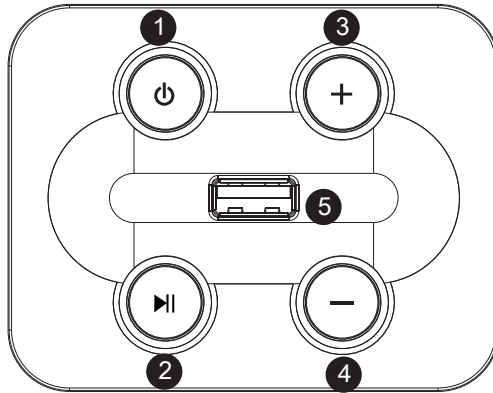

1. The Speaker system is in "⏻" (stand by) mode when power on, with the LED Flashing. Please press the "⏻" to select appropriate source. Keeping the "⏻" key pressed for long will put it back in "⏻" (stand by) mode.
- * You can toggle through the input modes by pressing the "⏻" key. "BT" denotes Bluetooth mode. "HD" denotes ARC mode. "OP" denotes mode. "AU" denotes Audio mode. "Ud" denotes USB card mode.
2. Play/Pause the songs.
3. Long press for volume increase/short press for next track.
4. Long press for volume decrease/short press for prev track.
5. USB Slot.



*** Do NOT use USB for charging devices, as it is not designed for charging. Thank you.

NO.2

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

How to use the remote control

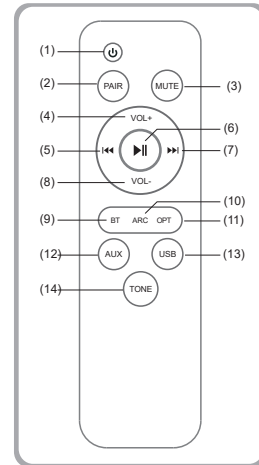

1. ⏻
2. PAIR
3. MUTE
4. VOL+
5. ⏮
6. ⏪
7. ⏩
8. VOL-
9. BT
10. ARC
11. OPT
12. AUX
13. USB
14. TONE


1. ⏻ : Power ON or Standby modes.
2. PAIR:
 - a. Long press "PAIR" for 3 sec to select the frequency, the display will show CH01, Short press "PAIR" to change from CH01, 02, 03, 04 or 05... Total 20 Channels. NOTE: when the pairing of the Soundbar and wireless subwoofer is disturbed, follow same procedure.
 - b. ID code pairing: Continuously short press key PAIR key for more than 5 times until the Soundbar display shows "Id" and it enters pairing state. Power on the subwoofer (if it is already on, power OFF and Restart it). The LED indicator on the subwoofer flashes red and blue. Then long press "PAIR" for 3 sec to exit the code-matching state (Or without operation for 20 sec, it will exit the code matching status automatically). When the Blue light is constant, it is paired successfully.
3. MUTE: Turn volume off. Depress again to activate the sound.
4. VOL+: To increase the Volume by short or long press of VOL+.
5. ⏮: Play the previous song by pressing "⏮" but not in Audio mode.
6. ⏪: Play/pause in USB/BT mode and MUTE in Audio mode.

NO.3

7. ⏩: Play next song by pressing "⏩", but not in Audio mode.
 8. VOL-: To decrease the Volume by short or long press of VOL-.
 9. BT: Bluetooth mode.
- Press "BT" button on the remote to convert to Bluetooth input mode, LED flash fast to search the Bluetooth device. Turn on your mobile Bluetooth device and search the device name "4001949", paired them well.
- When you have successfully paired your mobile to the speaker system, LED flashes slowly. When starting to play your mobile music, LED stopped flash. The functions as "PREVIOUS/NEXT", "PLAY/PAUSE", can operate via the front panel. On BT mode, when connecting with mobile, press "⏪" for 3 seconds, bluetooth function can be force-disconnected.
10. ARC: ARC mode.
 11. OPT: Optical mode.
 12. AUX: Audio input mode.
 13. USB: USB mode.
 14. TONE: Press it, LED flashes, it enters into treble adjustment status, can press Vol+/Vol- adjust treble level -6(min)~+6(max). Press it again, LED flashed 2 times, it enters into bass adjustment status, can press Vol+/Vol- adjust bass level -6(min)~+6(max).

Rear panel

 
Soundbar

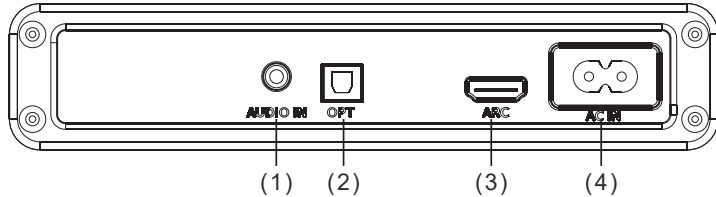

1. Input Connect to sound sources such as computer, CD player, Mp3, etc.
2. Optical Input.
3. ARC Input.
4. AC Power cord.

NO.4

 In use please pay attention to the following items:

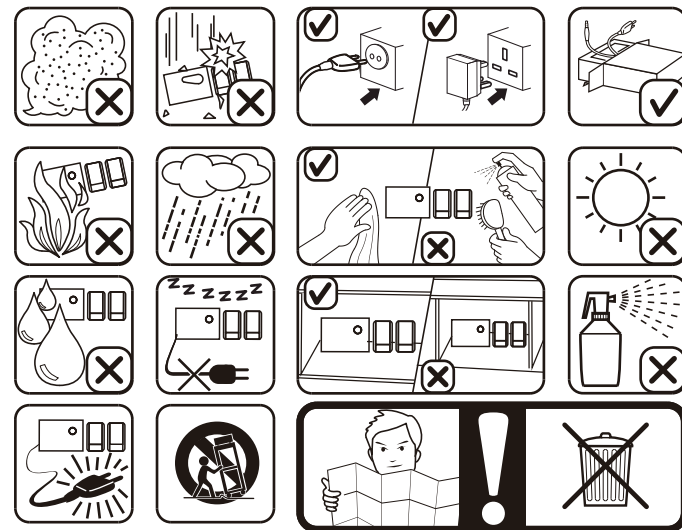

* If the remote control cannot function, it is because the battery of remote control has been used up. thank you.

NO.8

NO.5

NO.6

NO.7