

# smart phone

- Thank you for your choose and buy this cell phone. This manual is dedicated to guide you to understand the function of mobile phone and characteristics.
- Before using a cell phone, please carefully read all safety precautions and this manual.
- As used in this manual and screen capture image may different from actual product appearance.
- Described in this manual is based on the mobile phone's default setting.
- some contents of this manual may be linked to mobile phone is not completely consistent, depending on the mobile phone software or network operators.

## DIRECTORY

Safety and use of information .....	1
Safety warning.....	1.1
Security considerations .....	1.2
Important to use information.....	1.3
Disclaimer.....	1.4
Limitation of.....	1.5

The installation .....	2
Install the SIM card and battery.....	2.1
The battery .....	2.2
Memory card .....	2.3
Getting started guide .....	3
Start-up and shutdown.....	3.1
Use the touch screen .....	3.2
Lock or unlock the touch screen and buttons .....	3.3
Standby screen .....	3.4
The application .....	3.5
The input text .....	3.6
Download files from the network .....	3.7
Synchronous data .....	3.8
The function menu .....	4
SIM toolkit.....	4.1
Dial .....	4.2
E-mail .....	4.3
The calculator .....	4.4
The browser .....	4.5
The tape recorder .....	4.6
The calendar .....	4.7

Settings .....	4.8
The clock .....	4.9
The radio .....	4.10
The address book .....	4.11
Gallery .....	4.12
Download content .....	4.13
The camera .....	4.14
information .....	4.15
Music .....	4.16
Mobile phone configuration .....	5

## 1. **Safety and use of information**

To protect you and others from harm or to protect your cell phone to avoid damage, please read the entire information before using your mobile phone.

### **1.1 safety warning**

- a. The phone put it out of reach of children and pets
- b. At a high volume environment for a long period of time will damage people's hearing. The minimum volume required to recommend the use of voice or music Settings.
- c. Be careful handling and disposal of batteries and chargers

- only use specially designed for mobile phone batteries and chargers. Incompatible batteries and chargers may cause danger or damage to the phone.
  - please do not throw battery or cell phone to the fire. When handling waste battery or cell phone, please comply with all relevant local laws and regulations.
  - please do not put battery or cell phone heating equipment (such as microwave oven, oven or radiator) or the upper inside. Batteries overheating may be an explosion.
  - do not squeeze or pierced the battery. Please do not let the battery under external pressure, otherwise may lead to internal short circuit and overheating.
- d. The phone's screen when broken or damaged, please do not use a mobile phone

## **1.2 safety considerations**

- a. The traffic safety first, do not use a phone while driing
  - b. Adhere to all safety warnings and rules.
  - c. Near medical equipment to turn it off
  - d. To shutdown or close wireless capabilities while flying
  - e. To avoid interference with other electronic equipment
  - f. Be careful to properly handle the mobile phone
- Without authorization, please do not remove the mobile phone, in case of electric shock risk.
  - Wet, do not use mobile phones and liquid can cause cell phone serious damage, and the inside of the cell phone waterproof label color. Please do not use wet hand contact phone. Water damaged phone may, manufacturers will not be warranty.

- cannot be used in dusty, dirty place or storage, mobile phone, otherwise it will damage to parts of the phone.
  - do not throw, hit or violent shake mobile phone. Rough use may damage the internal circuit board.
  - Do not paint the mobile phone. Paint will block the activities of the mobile phone parts and interfere with the normal use.
  - don't stand too close to the eyes of the person or animal cell phone use flash or light (if any).
  - mobile phones and memory card may be affected by the influence of magnetic field and the damage. Do not use with magnetic shell carrying bags or accessories, also don't let the phone long-term exposure to magnetic fields.
- g. To protect the battery and charger in case of damage, do not put the battery in the temperature is very low or very high (0 °C below 45 °C or above)

### **1.3 important use of information**

Using mobile phones in the normal position, don't touch the phone's built-in antenna position. Contact antenna will reduce the quality or lead to cell phone to send over the radio frequency required.

Ensure the battery and charger the longest service life

- Continuous charging, the battery can't more than a week, overcharge will shorten battery life.

- If the battery is not in use for a long time, will gradually discharge, Before use must recharge.
- Disconnect the power supply, charger, when not in use.
- the battery can only be used for booking purposes.

### **Carefully deal with SI M card and memory card**

- mobile phone is transmitting or access to information, don't take out the card, otherwise may cause data loss or damage to the mobile phone and memory card.
- prevent bump, electrostatic and electromagnetic interference from other equipment.
- Frequent, write and delete will shorten the service life of the memory card.
- don't use finger or metal object touch gold contacts or terminals. If dirty, with a soft cloth to wipe.

### **Sure to use emergency services**

In some areas or cases, may not be able to use mobile phones for an emergency call. Before traveling to remote and undeveloped areas, formulate alternative emergency service personnel contact method.

## **1.4 Disclaimer**

For pre-installed or binding on any game, the application of this product including relevant documents (hereinafter referred to as "software"), or by the product of audio-visual material, the content, services, and related documents, including but not limited to, any image, photo,

animation, video, audio, music, writing, (hereinafter referred to as "services") by the corresponding software/network operators (hereinafter referred to as "provider") is responsible for their legal, true and accurate, and by the provider to ensure not in violation of state laws, regulations and public morality and the lawful rights and interests of the infringement of any third party. Providers to ensure the quality of the software and services and user information provided by such as information security and network security. For this product users in the installation/use the software or use the services of all problems, or other for all problems caused by the use of the software or services, including any arising due to the problem of direct, indirect, incidental or so derivatives losses, by corresponding provider shall bear the responsibility, all are nothing to do with our company. Part of the software and service need network support, and may need to pay the corresponding cost

### **1.5 limit compensation**

On the basis of the current law allows maximum range, in any case, the company and its suppliers no user or the third party for any direct, indirect, special, incidental, unable to avoid the damage or loss, including but not limited to in contracts and infringement may be loss of income, credit losses, loss of business opportunity, data loss, interest loss, or fails to perform the obligations are not responsible for.

---

## **2 install**

### **2.1 install the SIM card and battery**

1. When you order mobile phone services, you will get a SIM card (user identity identification card), containing your private information, such as PIN (personal identification number) and the service options available.

2. If the phone was on, please turn off the phone. Hold/power key to turn it off.

3. Remove the back cover.

4. Insert SIM card, and ensure the golden touch points down.

5. Insert the battery.

6. Back to the back cover

Note: if you do not insert SIM card, you can only use a mobile phone network service and features.

In the mobile phone has two SIM card slots, and the middle card slot for the SIM card 1, most the right side for the SIM card 2. Can use 2 SIM CARDS and to switch between the two.

### **2.2 the battery**

a. Before using a cell phone for the first time, must be the ') Can be 2  
dojo. provide travel charger or mobile phones are connected to the computer  
through a computer cable to charge the mobile phone.

b. Insert the plug of the small end of the computer data line phones  
multi-purpose socket.

c. Insert the plug of the big end of computer cable travel charger USB port.



d. Insert the travel charger standard ac power socket.

e. When the battery is fully charged, disconnect the computer data line connected to the phone, and then travel charger unplug from power outlet.

Warning: please do not remove the battery before remove the travel charger.  
Otherwise it will damage the phone.

#### Cable charging with a computer

Before charging, please make sure that the computer has been turned on.

a. Insert the small end of the computer data line phones multi-purpose socket.

b. Insert the computer cable, the big end of computer's USB port.

c. When the battery fully charged, disconnect the computer data line connected to the phone, then unplug from the computer.

Note: depending on the type of computer used in the data line, may need to wait for a moment to start charging.

### **2.3 use the memory card**

Insert the memory card, if you would like to store other media file, insert the memory card.

Warning: some brands may not be compatible with the phone completely. Use incompatible memory card it might damage the phone or memory card, data stored in the card is damaged.

---

a.FAT file structure of the cell phone only supports memory card. If the memory card into other file structure, cell phone will be required to format the memory card.

b.Frequent, write, and delete data will shorten the service life of the memory card.

c.insert the memory card mobile phone, memory card file directory will be displayed in the sdcard folder.

1. Remove the back cover.
2. Insert the memory card mobile phone, make its golden contact surface facing down.
3. The memory card to promote memory card slot, until the lock in place.
4. Back to the back cover

Remove the memory card

Before you remove the memory card unload memory card, in order to safety.

1. The standby mode, open the application list, select Settings - > storage to uninstall SD card.
2. Remove the back cover.
3. Jog memory card until it from the phone.
4. Remove the memory card from the memory card slot.
5. Put back to back cover.

Warning:

Mobile phone is sending or when access to information, please do not remove the memory card. Otherwise may cause data loss or damage to the mobile phone and memory card.

#### Format the memory card

Format the memory card on the computer may lead to a memory card is not compatible with mobile phone. Please only to format the memory card on the mobile phone.

Standby mode, open the application list and select Settings - storage - formatted SD card.

Warning: before formatting the memory card, remember to all the important data backup to the phone. Manufacturers warranty service does not include the data loss caused by user operations.

## 2. Start guide

The keys	function
option key	Open the current list of the options available on the screen.
Home key	Returns the default starter home page (or return to the selected starter home page).
Back key	Return to the last screen.
volume key	Adjust the volume of the mobile phone
Power key	Boot (hold)

---

### **3.1 startup and shutdown**

- a. Press and hold/power key to open the cell phone.
- b. Shut down, hold the [power], pop-up phone options dialog, select shutdown can be turned off.

Attention. In the region of the restrictions on the use of wireless devices (for example) and the hospital on the plane, please comply with all instructions and official warning.

### **3.2 use the touch screen**

Touch screen mobile phone use can more easily select the project or to perform a function.

Understand the basic operation using the touch screen.

Can perform the following actions to control the touch screen:

- Click: touch once, choose or start menu, options or application.
- Point to live: live a project and continue for 2 seconds or more.
- Double-click: double-click some project can realize zoom in, and so on.
- drag: live a project and move to the desired location.
- Slide: up, down, left or right to scroll to browse list or screen

### **3.3 lock or unlock the touch screen and buttons**

Don't need operation, can lock the touch screen and keys to prevent accidental operation of mobile phone.

- if you need lock, press the [power] can close and lock the screen touch screen and keys.
- to unlock buttons and touch screen, press the power key open screen, then drag the lock icon to unlock screen.

### **3.4 the standby screen**

Mobile phone in standby mode, will display the standby screen, can view the status and access to the application of the phone.

Standby screen has multiple panels. Slide to the left or right to select a standby panel.

### **3.5 application**

a, Access to the application

Sliding around browsing application, choose to access the application

b, Access to the most recently used applications

Hold the [page key] opened recently visited the application list, choose to access the application

C, Use the task manager

Mobile phones have multitasking function, can run multiple applications at the same time.

Multitasking may lead to dropped calls, freezing, storage problems and use more electricity. If you would like to avoid these problems, can use the task manager end unnecessary procedures

°

---

### **3.6 the input text**

Can choose characters on the virtual keyboard to input text.

Tip: when the input text, click on the [back] can hide the virtual keyboard, click on the input field to display the virtual keyboard.

Change the text input method

1. The Settings - > language and input method to the keyboard and input method, select the input method you need

### **3.7 download files from the network**

Select the browser, select the file or application and download

1. Select Settings - > account - add accounts - select the account type .
2. According to the screen prompts to complete the account setup

#### **4. The function menu**

Your phone supports two SIM CARDS, select Settings - > SIM card can be set up telephone, information, and USES the default data connection SIM card

##### **4.1 SIM toolkit**

SIM toolkit for is related to card type, if the card support this function will display some shortcuts, such as phone inquiries, traffic query and so on some business

##### **4.2 dial**

Can be called (can call international or domestic any phone) and answer the phone, or you can customize and use related functions.

##### **4.3 the email**

According to the prompt steps to enter account and password to log in, you can send/receive/view/delete operations such as mail

##### **4.4 the calculator**

Use with computer the corresponding key, is the basic operation can be performed.

Note: if you would like to for advanced operations, slide the screen to the left.

##### **4.5 The browser**

Use the application can access to the Internet to see all kinds of web pages, but needs to WLAN or mobile data support

##### **4.6 the tape recorder**

Can choose the tape format (AMR, 3 GPP, WAV) for recording, keep the tape after available to play music

#### **4.7 the calendar**

Use the calendar to create events in the calendar page, click on the top left corner years place choice, weeks, months, or calendar view mode switch.

#### **4.8 settings**

Understand mobile phone Settings. Select Settings to mobile phone Settings.

---

#### **WLAN**

On the open or close the WLAN function, can be related to network operation

---

#### **BT**

Open or close the bluetooth function. Click to open the bluetooth devices can be search matching, and so on

---

#### **SIM card**

a, default channel Settings: select language phone, send information, data connections are used when the default SIM card.

b, Choose a SIM card, can edit SIM card name



### **Traffic usage**

---

Click to view the flow of double card usage. Click on the function keys can be mobile data network, choice of background traffic, etc

### **More**

---

Can be for mobile network operators, such as open flight mode or switch network, etc.

### **Display**

---

By this function can change the screen brightness, font size, sleep time, set the wallpaper and some other operation

### **notification**

---

Set up mobile phone ring and other dial-up lock screen some rings

### **Storage**

---

Check the memory card and mobile phone memory information, can also be formatted external or internal memory.

### **Battery**

---

Check the battery usage

### **Application**

---

See all, downloaded, the running application. Select the single application can stop, uninstall change after application, and related operations.

---

**User**

Set the user and personal information, you can add visitor pattern

---

**location information**

After open can locate, and through the WLAN or mobile network can more accurately determine the location information

---

**Safe**

Change the equipment and SIM card security setting

---

**Account**

You can add a variety of accounts Such as: SIM card, phone, Gmail, etc.

---

**Language and input method**

Change the text input setting.

---

**Backup and reset**

A,backup my data: the application of data backup, WLAN, passwords and other Settings to Google servers

B,λ automatic reduction: after to install an application, the system will restore has backup Settings and data

C,restore factory Settings: this operation will clear your phone all the data in internal storage device

## **Time and Date**

---


 
Set the cell phone display date and time

## **About phone**

---

Access to mobile phones related information and check the status.

### **4.9 The clock**

In this application can use the countdown  timing  Function, alarm clock, stopwatch, and other functions.

### **4.10 The radio**

Learn how to on the FM radio to listen to music and news. If you would like to listen to FM radio, must connect with headphones (the headphones as a radio antenna).

### **4.11 the address book**

The application shows that the contact. Long press a contact, it display options: view your contacts, edit contacts, delete contacts,

Added to the speed dial, to share and some other operation


#### **4.12 Gallery**

View photos and play video stored in the phone or memory card.

#### **4.13 Download the content**

Check the machine current download or is to download the resource files, etc

#### **4.14 Camera**

press  → Switch to the camera/video panorama mode, into the model of photo/video/prospect model, the production of images are automatically stored in the set of storage location (phone/SD memory card)

Note: switch to the gallery Sliding into the gallery to the left.

#### **4.15 Information**

The application can send text messages (SMS) or MMS (MMS), and view or management information we have sent or received,

And can modify the stored Settings in the Settings, message set, MMS Settings, notice set some Settings

#### **4.16 Music**

From the musician, albums, songs, playlists to choose music files, play music

### **5. Mobile phone configuration**

Including specification, certification, warranty CARDS, batteries, chargers, headsets, data line.

**Warm prompt:** the operating system supports only the official upgrade, such as the users themselves to brush the unofficial system, lead to security risks and losses shall be the responsibility of the users. (there may be a risk: user information being stolen, automatically send text messages, locate your position, etc.)

#### FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

#### Specific Absorption Rate (SAR) information:

This smart phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: RLTP5048-BLACK (FCC ID: 2AFA3-RLTP5048) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for use at the ear is 0.521 W/kg and when properly worn on the body is 1.392 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.