



Product Diagram	
Front	Back
Product Parameter	
Product Name: V07	Transmission Distance: 10m
Wireless version: BT 5.2	Standby Time: 72h
Chip Solution: AIC6703DA	Charging Time: 2.5h
Frequency Response: 20Hz-20KHz	Recharge Battery Capacity: 250mAh
Impedance: 16Ω	Charging Case Battery Capacity: 3000mAh
Total OF	Charging Case Product Size: 57*73*25mm
Rated Power: 500W	Product Color: yellow/black
	Execution standards: GB 49936-2011
	Play Time: 8-1

Operation

Power on/off: Press on the side and hold for 1s and the blue light is on for 1s, take out the earbuds from the charging case and the earbuds will turn on automatically. Pressing twice: Power on.


Power off: The earbuds will turn off automatically. If not connected to other devices within 30s will be returned to the charging case and the earbuds will turn off automatically. Pressing twice: Power off.

TWS Pairing Instructions

1. Please put the wireless earbuds and mobile phone or other wireless device together.

2. Make sure that the earbuds are of enough power, open the charging case cover or take out the earbuds from the charging case, when seen that the left and right earbuds are connected, another the earbuds are enter the pairing mode.

3. Turn on the wireless connection function of the mobile phone or other wireless device, and search for devices, at the time the mobile phone will search for all nearby wireless devices, click the corresponding earbud name (click Connect) when only one pairing item can be found, after successful pairing, users can use the earbuds for calls and music listening.

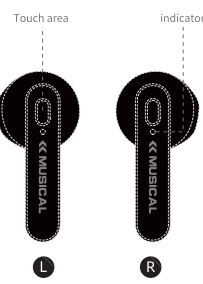

Touch Control Operation

Answer: Tap the function key of L/R earbud twice.
Repeat: Press and hold the function key of L/R earbud for 2s.
Previous song: Tap the function key of L/R earbud 3 times.
Play/pause: Tap the function key of L/R earbud twice.

Hang-up: Tap the function key of L/R earbud twice.
Cancel call: Tap the function key of L/R earbud twice.
Next song: Tap the function key of L/R earbud 3 times.
Voice assistant: Press and hold the function key of L/R earbud for 2s.

LED Indicator

1. Earbud is low battery, the earbud in low battery (flashes red light) displays low bat.

2. Earbud during charging, the red light is always on.

3. Flashes blue and earbud has not put in the light alternately.

Prompt Tone

Pairing successful: Ringing.
Power off: Power off.
Low battery: Battery low.
Power on: Power on.

Cautions During Wireless Connection:

- Please keep the distance between the wireless earbud and your phone or other wireless device within 1 meter, and be clear to the body.
- Make sure the earbuds are placed in the charging case. Open the charging case and it will start connecting with devices.
- When the earbuds are taken out of the charging case, make sure that the left and right earbuds are connected.
- Do not close the charging case cover during connection.
- Make sure that the charging case is enough power. If the earbuds cannot be powered on when opening the charging case, then put them back in the charging case and plug in the charger to charge it for at least 10 minutes.

Warnings:

- Do not use any abrasive detergent to clean this product.
- Do not heat this product or keep it close to a fire source, such as a cooking stove.
- Do not immerse this product in water or liquid for a long time.
- Do not dispose of this product in the fire to avoid explosion.
- Do not try to disassemble this product to make any modifications, for it does not contain any maintenance components.
- Do not use this product in the rain.
- If the product is not used for a long period of time, please store it in a dry environment, and charge it at least once a month to extend its life and avoid extreme temperatures and dust.

Ordinance Warranty

This product is under warranty for a period of twelve months from the date of sale limited to normal use and maintenance of the machine parts, materials and functions. Problems and malfunctions upon further identification will be provided with free repair.

This warranty does not apply:

- Use for a product that is out of warranty.
- Use for damage caused by opening the product outside the permitted or intended use described by V07.
- Use for a product that has been disassembled, repaired or altered without the authorization of V07.
- Use for warranty card and proof of purchase cannot be presented.
- Use for damage caused by water damage, fire, or other external causes, natural disasters, etc.

Note: The warranty does not include product transport costs and does not provide on-site maintenance services.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can receive radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) if interference is received, the user must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable equipment conditions without restrictions.

Warranty Feedback Form (Tick off)

A. No sound | B. Sound quality deteriorated | C. Button malfunction | D. Connect with device |

E. Cannot charge | F. Too long discharging | G. Wire damaged not covered by warranty |

H. Others: _____

Date of purchase: _____

Dealers of sale: _____

When does the problem occur? _____

User's contact info: _____