
	1	
	Contents 1. Appearance and Functions 1.1.1 Product Schematic: 1.1.2 Interface/button	1. Appearance and Functions 1.1.1 Product Schematic:
User Manual	 2.Instructions : 2.1 FCC Compliance Statement 2.2 RF Exposure Information 2.3 Federal Communications Commission (FCC) Interference Statement 	2
	3.Comments, Problems and Attentions	
	-1-	-2-
	<section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header>	 Q6: How to connect the computer to the Internet? A: If the computer you use needs to get access to the Internet through broadband (PPPoE) (such as ADSL dial-up networking), first, make sure your broadband devices are connected; second, select [Control Panel] – [Network and Internet] – [Network and Sharing Center] – [Set up a new connection or network] – [Connect to the Internet], and then select the broadband called PPPoE; next, operate according to the system bod. If you get access to the Internet through other ways, please contact the network service providers for the specific setting method. Of How to establish or delete a wireless network devices and wireless driver, the Windows operating system will automatically search for the wireless network which can be found in the notification area in the low right corner of the traditional desktop or in the R Sidebar. Check the strength of the wireless network signal, and fill in the password to access the wireless network, thus a connection is established. If you no longer need the wireless network, select "disconnect" or "forget this network "for disconnection. ACE Startup Elack Screen Troubleshooting A: 1. Press the power button, but no startup sound can be heard. Check if there is any problem with the power line in your home. If there's no power failure, check whether the power cord and turn on the computer. If, still no startup sound can be heard, end thure, person the power supply or finder to the optimus play of 1-2 seconds each time, and the power cord and turn on the computer. If, still no startup sound can be heard, please contact the after-sales service for help. 2. After pressing the power button for consecutive 5 seconds, then release your finder to turn off the computer. Check the power supply and all the cable connections according to the methods introduced in "1". Meanwhile, check if the cable connections according to the methods introduced in "1". Meanwhile, check if the cable conn
	-5-	-6-

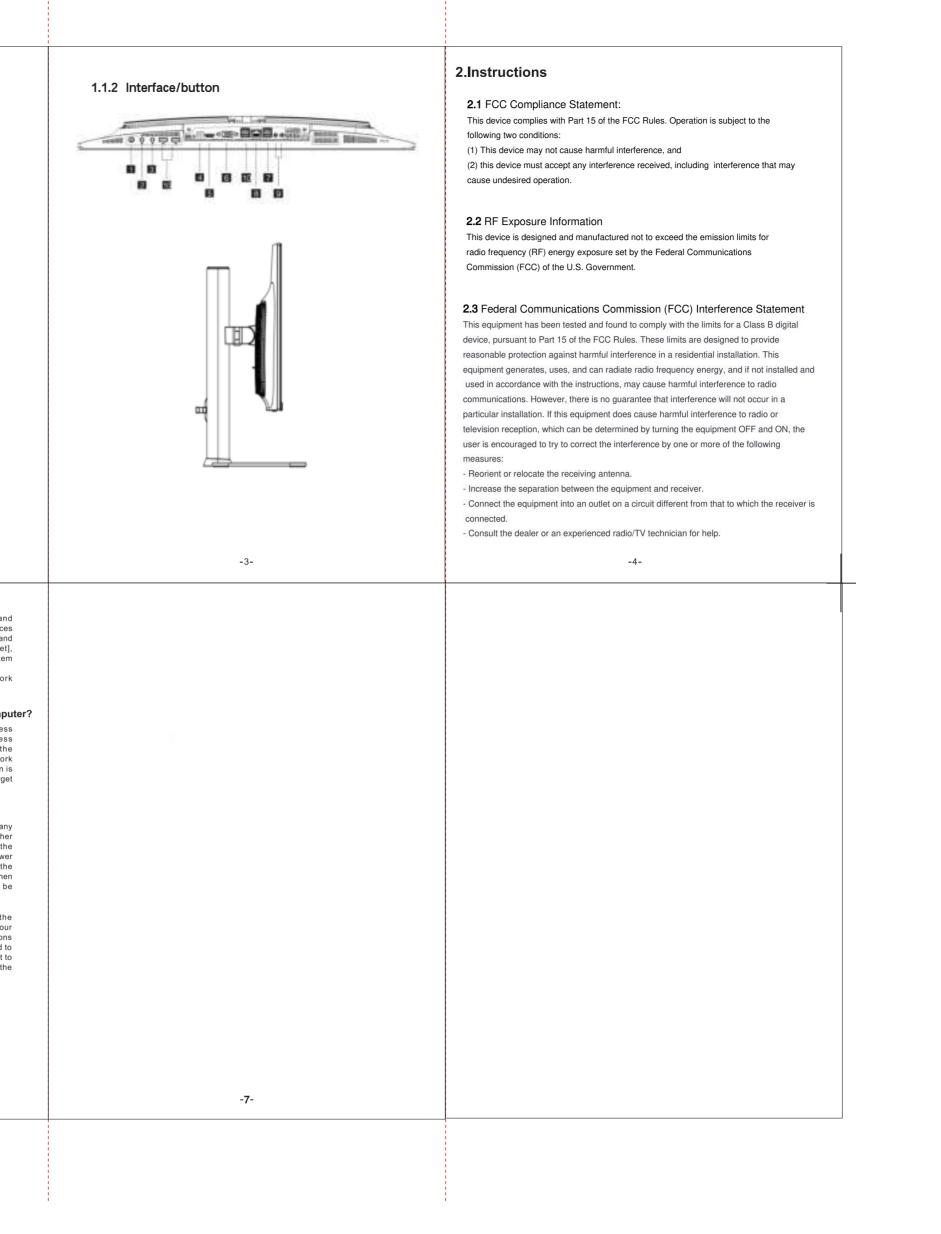

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.